

PREFACE

This Service Manual describes the technical features and servicing procedures for the KYMCO ***SUPER8 125***

Section 1 contains the precautions for all operations stated in this manual. Read them carefully before starting any operation.

Section 2 is the removal/installation procedures for the frame covers which are subject to higher removal/installation frequency during maintenance and servicing operations.

Section 3 describes the inspection/adjustment procedures, safety rules and service information for each part, starting from periodic maintenance.

Sections 6 through 17 give instructions for disassembly, assembly and inspection of engine, chassis frame and electrical equipment.

Most sections start with an assembly or system illustration and troubleshooting for the section. The subsequent pages give detailed procedures for the section.

Our company reserves the right to make any alteration in the design. The information and contents included in this manual may be different from the motorcycle in case specifications are changed.

TABLE OF CONTENTS

| | | |
|----------------------|--|----|
| ENGINE | GENERAL INFORMATION | 1 |
| | FRAME COVERS/EXHAUST MUFFLER | 2 |
| | INSPECTION/ADJUSTMENT | 3 |
| | LUBRICATION SYSTEM | 4 |
| | FUEL SYSTEM | 5 |
| | ENGINE REMOVAL/INSTALLATION | 6 |
| | CYLINDER HEAD/VALVES | 7 |
| | CYLINDER/PISTON | 8 |
| | DRIVE AND DRIVEN PULLEYS/KICK STARTER | 9 |
| | FINAL REDUCTION | 10 |
| | CRANKCASE/CRANKSHAFT | 11 |
| CHASSIS | FRONT WHEEL/FRONT BRAKE/FRONT SUSPENSION | 12 |
| | REAR WHEEL /REAR BRAKE /REAR SUSPENSION | 13 |
| ELECTRICAL EQUIPMENT | BATTERY/CHARGING SYSTEM/A.C. GENERATOR | 14 |
| | IGNITION SYSTEM | 15 |
| | STARTING SYSTEM | 16 |
| | LIGHTS/INSTRUMENTS/SWITCHES | 17 |
| | EXHAUST EMISSION CONTROL SYSTEM | 18 |

KWANG YANG MOTOR CO., LTD.
OVERSEAS SALES DEPARTMENT
OVERSEAS SERVICE SECTION


1. GENERAL INFORMATION

| | | | |
|----------------------------|------|-------------------------------|------|
| ENGINE SERIAL NUMBER | 1- 1 | LUBRICATION POINTS | 1-13 |
| SPECIFICATIONS | 1- 2 | CABLE & HARNESS ROUTING | 1-15 |
| SERVICE PRECAUTIONS | 1- 3 | WIRING DIAGRAM..... | 1-20 |
| TORQUE VALUES | 1-11 | TROUBLESHOOTUNG | 1-21 |
| SPECIAL TOOLS | 1-12 | | |

ENGINE SERIAL NUMBER



Frame Serial Number

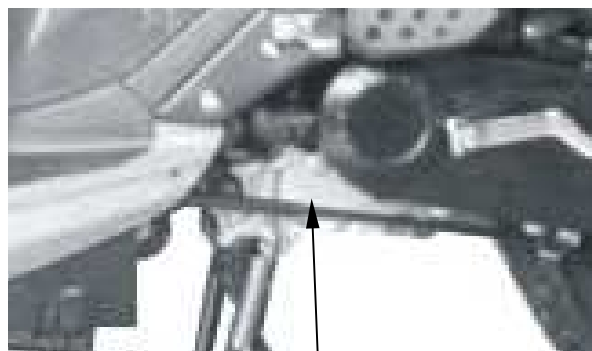

Location of Engine Serial Number

1. GENERAL INFORMATION

SUPER8 125

SPECIFICATIONS


| | | | | |
|------------------------|--|--------------------------|-------------------------------|----------------------------|
| Motorcycle Name & Type | | SUPER8 125 | | |
| Name & Model No. | | LEJ3 | | |
| Overall length (mm) | | 1940 | | |
| Overall width (mm) | | 745 | | |
| Overall height (mm) | | 1220 | | |
| Wheel base (mm) | | 1365 | | |
| Engine type | | O.H.C. | | |
| Displacement | | 125cc | | |
| Fuel Used | | 92# nonleaded gasoline | | |
| Net weight (kg) | Front wheel | 43 | | |
| | Rear wheel | 55 | | |
| | Total | 108 | | |
| Gross weight(kg) | Front wheel | 45 | | |
| | Rear wheel | 67 | | |
| | Total | 144 | | |
| Tires | Front wheel | 100/80 -14 56J | | |
| | Rear wheel | 120/80 -14 56J | | |
| Ground clearance (mm) | | 112 | | |
| Performance | Braking distance (m) | 7 (Initial speed 30km/h) | | |
| | Min. turning radius (m) | 1.99 | | |
| Engine | Starting system | | Starting motor & kick starter | |
| | Type | | Gasoline, 4-stroke | |
| | Cylinder arrangement | | Single cylinder | |
| | Combustion chamber type | | Semi-sphere | |
| | Valve arrangement | | O.H.C. | |
| | Bore x stroke (mm) | | φ52.4 x 57.8 | |
| | Compression ratio | | 9.6• 0.2 | |
| | Compression pressure (kg/cm ² -rpm) | | 13• 2 | |
| | Max. output | | 6.9/7500kw/(r/min) | |
| | Max. torque | | 9.1/6500N.m/rpm | |
| | Port timing | Intake | Open | -2.5° |
| | | | Close | 32° |
| | | Exhaust | Open | -3° |
| | | | Close | 33° |
| | Valve clearance (cold) (mm) | Intake | 0.12 | |
| | | Exhaust | 0.12 | |
| | Idle speed (rpm) | | 1700±100rpm | |
| | Lubrication System | Lubrication type | | Forced pressure & wet sump |
| | | Oil pump type | | Inner/outer rotor type |
| | | Oil filter type | | Full-flow filtration |
| | | Oil capacity | | 0.9 liter |
| | Cooling Type | | Forced air cooling | |

| | | | | |
|----------------------|-------------------------------------|-------------------|----------------------------|------------------------|
| Fuel System | Air cleaner type & No | | Paper element, wet | |
| | Fuel capacity | | 6.0 liter | |
| | Carburetor | Type | CVK | |
| | | Piston dia. (mm) | φ22 | |
| Venturi dia.(mm) | | φ26equivalent | | |
| Throttle type | | Butterfly type | | |
| Electrical Equipment | Ignition System | Type | CDI | |
| | | Ignition timing | BTDC27°• 2• 4000rpm | |
| | | Contact breaker | Non-contact point type | |
| | | Spark plug | NGK CR7HSA | |
| | Spark plug gap | 0.6~0.7mm | | |
| Battery | Capacity | 12V7AH | | |
| Power Drive System | Clutch | Type | Dry multi-disc clutch | |
| | | Transmission Gear | Type | Non-stage transmission |
| | Operation | | Automatic centrifugal type | |
| | Reduction Gear | Type | Two-stage reduction | |
| | | Reduction ratio | 1st | 1.0-2.8 |
| 2nd | | | 46/16*46/15 | |
| Moving Device | Front Axle | Caster angle | 27° | |
| | | Trail length | — | |
| | Tire pressure (kg/cm ²) | Front | 1.75 | |
| | | Rear | 2.25 | |
| | Turning angle | Left | 45° | |
| Right | | 45° | | |
| Brake system type | | Front | DISK (180mm) brake | |
| | | Rear | Drum (110mm) brake | |
| Damping Device | Suspension type | Front | TELESCOPE | |
| | | Rear | Unit Swing | |
| | Shock absorber distance | Front | 80 | |
| | | Rear | 82 | |
| Frame type | | Under Bone | | |


1. GENERAL INFORMATION

SERVICE PRECAUTIONS


- Make sure to install new gaskets, O-rings, circlips, cotter pins, etc. when reassembling.

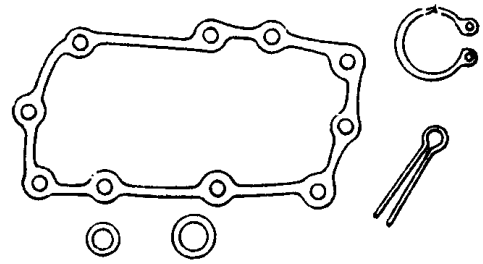


- When tightening bolts or nuts, begin with larger-diameter to smaller ones at several times, and tighten to the specified torque diagonally.

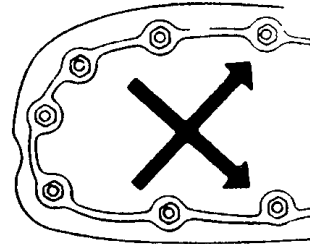


- Use genuine parts and lubricants

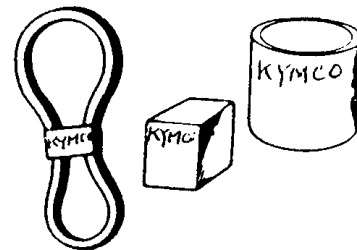

- When servicing the motorcycle, be sure to use special tools for removal and installation.

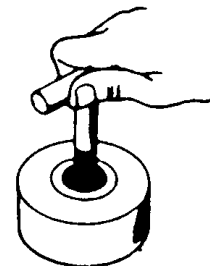


- After disassembly, clean removed parts. Lubricate sliding surfaces with engine oil before reassembly.

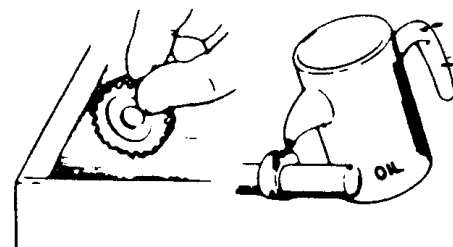

1. GENERAL INFORMATION

- Apply or add designated greases and lubricants to the specified lubrication points.

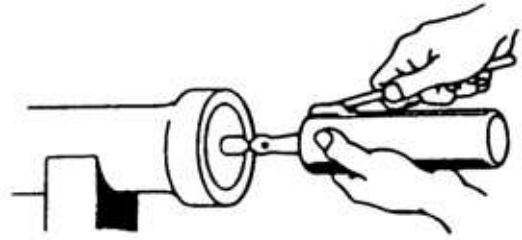


- After reassembly, check all parts for proper tightening and operation.




- When two persons work together, pay attention to the mutual working safety.



- Disconnect the battery negative (-) terminal before operation.
- When using a spanner or other tools, make sure not to damage the motorcycle surface.

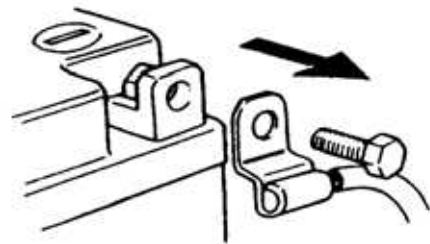


- After operation, check all connecting points, fasteners, and lines for proper connection and installation.
- When connecting the battery, the positive (+) terminal must be connected first.
- After connection, apply grease to the battery terminals.
- Terminal caps shall be installed securely.

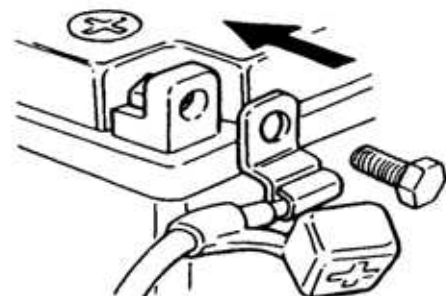

1. GENERAL INFORMATION


- If the fuse is burned out, find the cause and repair it. Replace it with a new one according to the specified capacity.

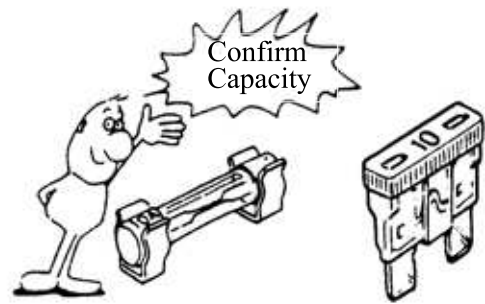

- After operation, terminal caps shall be installed securely.




- When taking out the connector, the lock on the connector shall be released before operation.

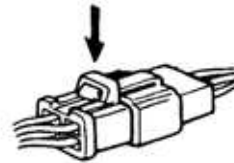

- Hold the connector body when connecting or disconnecting it.
- Do not pull the connector wire.




- Check if any connector terminal is bending, protruding or loose.

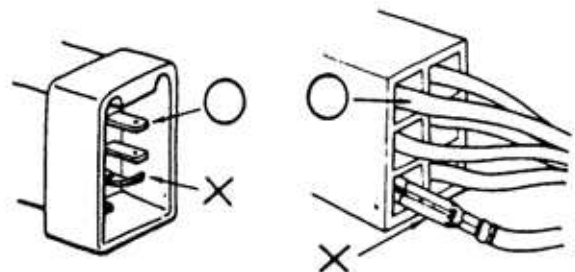


1. GENERAL INFORMATION


- The connector shall be inserted completely.
- If the double connector has a lock, lock it at the correct position.
- Check if there is any loose wire.

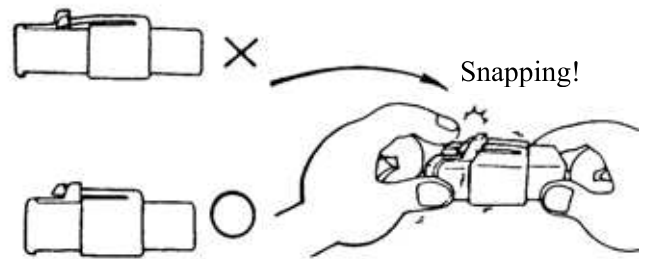

- Before connecting a terminal, check for damaged terminal cover or loose negative terminal.

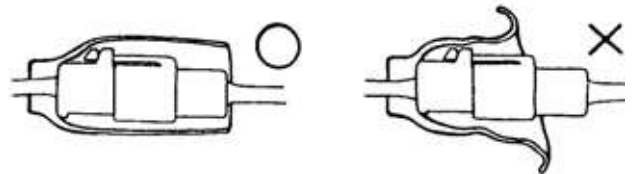


- Check the double connector cover for proper coverage and installation.

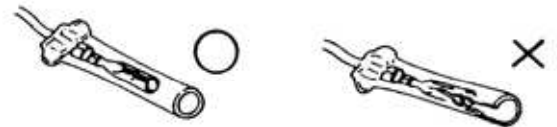

- Insert the terminal completely.
- Check the terminal cover for proper coverage.
- Do not make the terminal cover opening face up.




- Secure wire harnesses to the frame with their respective wire bands at the designated locations. Tighten the bands so that only the insulated surfaces contact the wire harnesses.

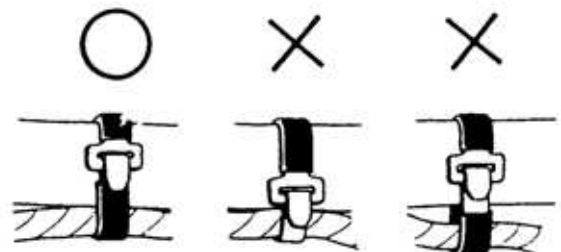


1. GENERAL INFORMATION


- After clamping, check each wire to make sure it is secure.

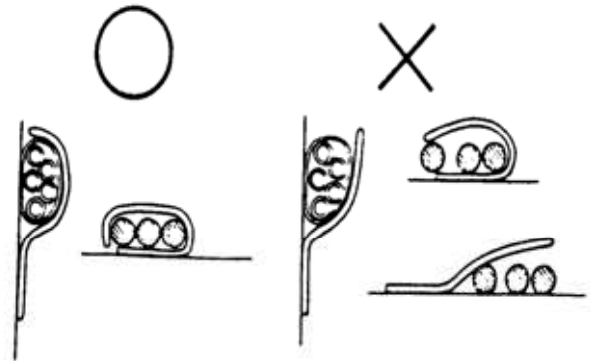


- Do not squeeze wires against the weld or its clamp




- After clamping, check each harness to make sure that it is not interfering with any moving or sliding parts.

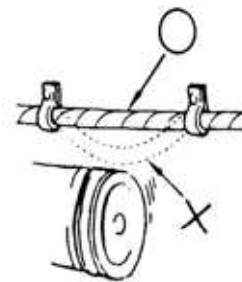

- When fixing the wire harnesses, do not make it contact the parts which will generate high heat.

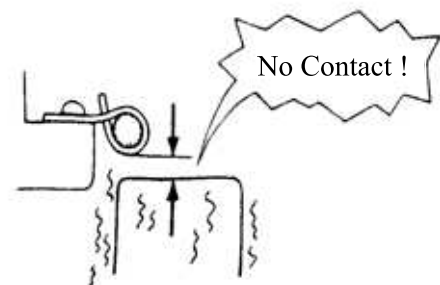


- Route wire harnesses to avoid sharp edges or corners. Avoid the projected ends of bolts and screws.
- Route wire harnesses passing through the side of bolts and screws. Avoid the projected ends of bolts and screws.

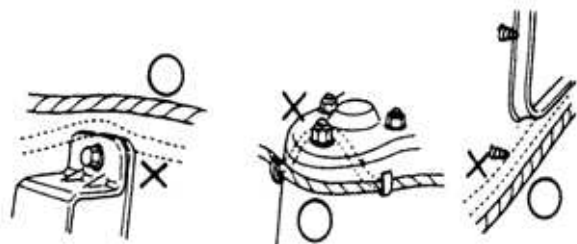


1. GENERAL INFORMATION


- Route harnesses so they are neither pulled tight nor have excessive slack.

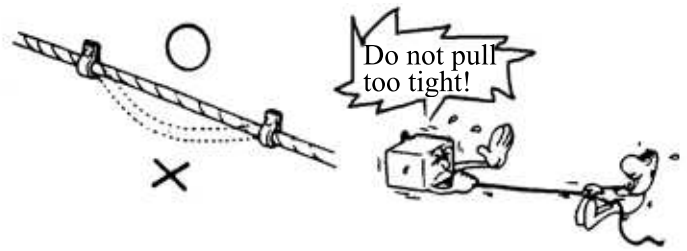


- Protect wires and harnesses with electrical tape or tube if they contact a sharp edge or corner

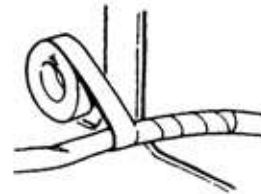

- When rubber protecting cover is used to protect the wire harnesses, it shall be installed securely.

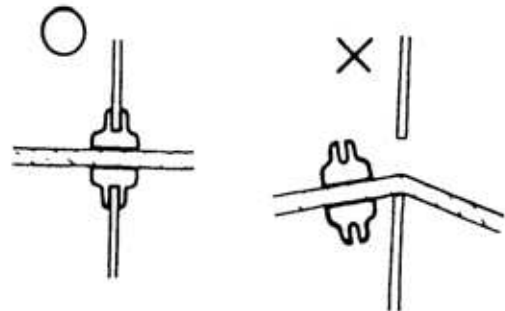

- Do not break the sheath of wire.
- If a wire or harness is with a broken sheath, repair by wrapping it with protective tape or replace it.

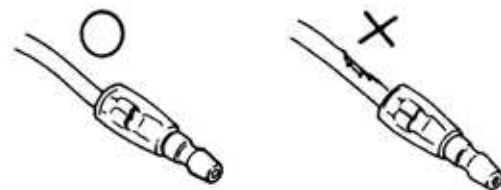


- When installing other parts, do not press or squeeze the wires.



1. GENERAL INFORMATION


- After routing, check that the wire harnesses are not twisted or kinked.

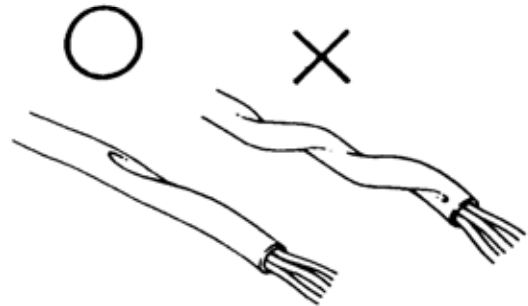

- Wire harnesses routed along with handlebar should not be pulled tight, have excessive slack or interfere with adjacent or surrounding parts in all steering positions.



- When a testing device is used, make sure to understand the operating methods thoroughly and operate according to the operating instructions.

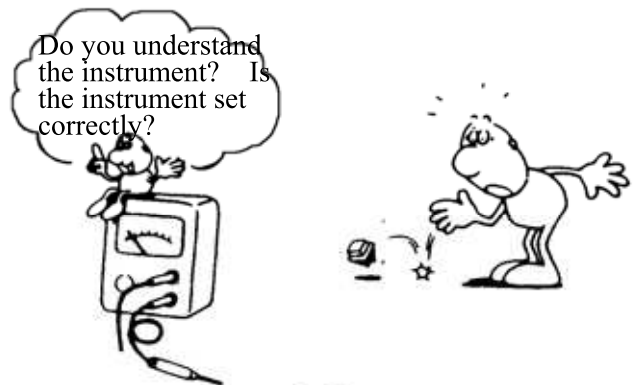

- Be careful not to drop any parts.

- When rust is found on a terminal, remove the rust with sand paper or equivalent before connecting.



- Do not bend or twist control cables. Damaged control cables will not operate smoothly and may stick or bind.



1. GENERAL INFORMATION

■ Symbols:

The following symbols represent the servicing methods and cautions included in this service manual.



Engine Oil

: Apply engine oil to the specified points. (Use designated engine oil for lubrication.)



Grease

: Apply grease for lubrication.



Gear Oil

: Transmission Gear Oil (90#)



Special

: Use special tool.



: Caution



: Warning

(⇒12-3) : Refer to page 12-3.

1. GENERAL INFORMATION

SUPER8 125

TORQUE VALUES

STANDARD TORQUE VALUES

| Item | Torque (kg-m) | Item | Torque (kg-m) |
|----------------|---------------|-----------------------|---------------|
| 5mm bolt, nut | 0.45-0.6 | 5mm screw | 0.35-0.5 |
| 6mm bolt, nut | 0.6-1.2 | 6mm screw, SH bolt | 0.7-1.1 |
| 8mm bolt, nut | 1.8-2.5 | 6mm flange bolt, nut | 1.0-1.4 |
| 10mm bolt, nut | 3.0-4.0 | 8mm flange bolt, nut | 2.4-3.0 |
| 12mm bolt, nut | 5.0-6.0 | 10mm flange bolt, nut | 3.5-4.5 |

Torque specifications listed below are for important fasteners.

ENGINE

| Item | Q'ty | Thread dia.(mm) | Torque (kg-m) | Remarks |
|----------------------------------|------|-----------------|---------------|---|
| Cylinder head bolt A | 2 | 6 | 0.7-1.1 | Double end bolt |
| Cylinder head bolt B | 4 | 6 | 0.7-1.1 | |
| Oil filter screen cap | 1 | 30 | 1.0-2.0 | Double end bolt Apply oil to threads |
| Exhaust muffler lock bolt | 2 | 6 | 0.7-1.1 | |
| Cylinder head flange nut | 4 | 7 | 1.2-1.6 | |
| Valve adjusting lock nut | 2 | 3 | 0.07-0.09 | |
| Cam chain tensioner slipper bolt | 1 | 8 | 0.4-0.7 | |
| Oil bolt | 1 | 8 | 1.1-1.5 | |
| Clutch outer nut | 1 | 10 | 3.5-4.5 | |
| Clutch drive plate nut | 1 | 28 | 5.0-6.0 | |
| Starter motor mounting bolt | 2 | 6 | 0.8-1.2 | |
| Oil pump bolt | 3 | 4 | 0.1-0.3 | |
| Drive face nut | 1 | 10 | 5.5-6.5 | |
| Spark plug | 1 | 10 | 1.0-1.4 | |
| A.C. generator stator bolt | 2 | 6 | 0.8-1.2 | |
| Cam chain tensioner bolt | 1 | 6 | 0.8-1.2 | |

FRAME

| Item | Q'ty | Thread dia.(mm) | Torque (kg-m) | Remarks |
|--------------------------------|------|-----------------|---------------|---------------------|
| Steering stem lock nut | 1 | 25.4 | 8.0-12.0 | U-nut |
| Front axle nut | 1 | 10 | 5.0-7.0 | U-nut |
| Rear axle nut | 1 | 14 | 11.0-13.0 | U-nut |
| Rear shock absorber upper bolt | 1 | 10 | 4.0-5.0 | Apply locking agent |
| Rear shock absorber lower bolt | 1 | 8 | 2.0-3.0 | |
| Speedometer cable set screw | 1 | 5 | 0.45-0.6 | |
| Rear shock absorber lock nut | 1 | 8 | 3.0-3.6 | |

1. GENERAL INFORMATION

SUPER8 125

SPECIAL TOOLS

| Tool Name | Tool No. | Remarks | Ref. Page |
|-------------------------------------|----------|---|------------------------------------|
| Bearing puller 10.12.15.18 mm | E037 | 10.12.15.18mm bearing | 10-3 10-4 12-6 |
| Bushing remover L | E032 | 11102 bush engine hanger rubber | |
| Bushing remover S | EO19 | 11203 bush rear cushion under rubber | |
| Crankshaft bearing puller | E030 | 91005 radial bearing | |
| Crankshaft protector | E029 | 13000 crankshaft comp 12mm.14mm | |
| Clutch spring compressor | E027 | 2301a driven pully assy | 9-9 9-12 |
| Cushion assemble & disassemble tool | F004 | 52400 cushion assy | 13-4 |
| Flywheel holder | E017 | 31110 flywheel comp.2310a pully assy driven | 9-5 9-9 9-13 14-7 14-9 |
| Flywheel puller | E002 | Left hand thread 27mm | 14-7 |
| Long socket wrench 32mm 8angle | F002 | 50306 steering stem | 12-21 12-22 |
| Oil seal & bearing installer | E014 | Oil seal & bearing install | |
| Tool boox | E033 | Special tools storage | |
| Tappet adjuster | E036 | 90012 screw tappet | 3-5 |
| Valve spring compressor | E038 | Valve spring | 7-7 7-8 |

1. GENERAL INFORMATION

SUPER8 125

LUBRICATION POINTS

ENGINE

| Lubrication Points | Lubricant |
|--|---|
| Valve guide/valve stem movable part Cam lobes Valve rocker arm friction surface Cam chain Cylinder lock bolt and nut Piston surroundings and piston ring grooves Piston pin surroundings Cylinder inside wall Connecting rod/piston pin hole Connecting rod big end Crankshaft R/L side oil seal Starter reduction gear engaging part Countershaft gear engaging part Final gear engaging part Bearing movable part O-ring face Oil seal lip | <ul style="list-style-type: none"> •Genuine KYMCO Engine Oil (SAE15W-40) •API-SG Engine Oil |
| Starter idle gear Friction spring movable part/shaft movable part Shaft movable grooved part Kick starter spindle movable part | High-temperature resistant grease |
| A.C. generator connector Transmission case breather tube | Adhesive |

1. GENERAL INFORMATION


FRAME

The following is the lubrication points for the frame.

Use general purpose grease for parts not listed.



Apply clean engine oil or grease to cables and movable parts not specified.

This will avoid abnormal noise and rise the durability of the motorcycle.

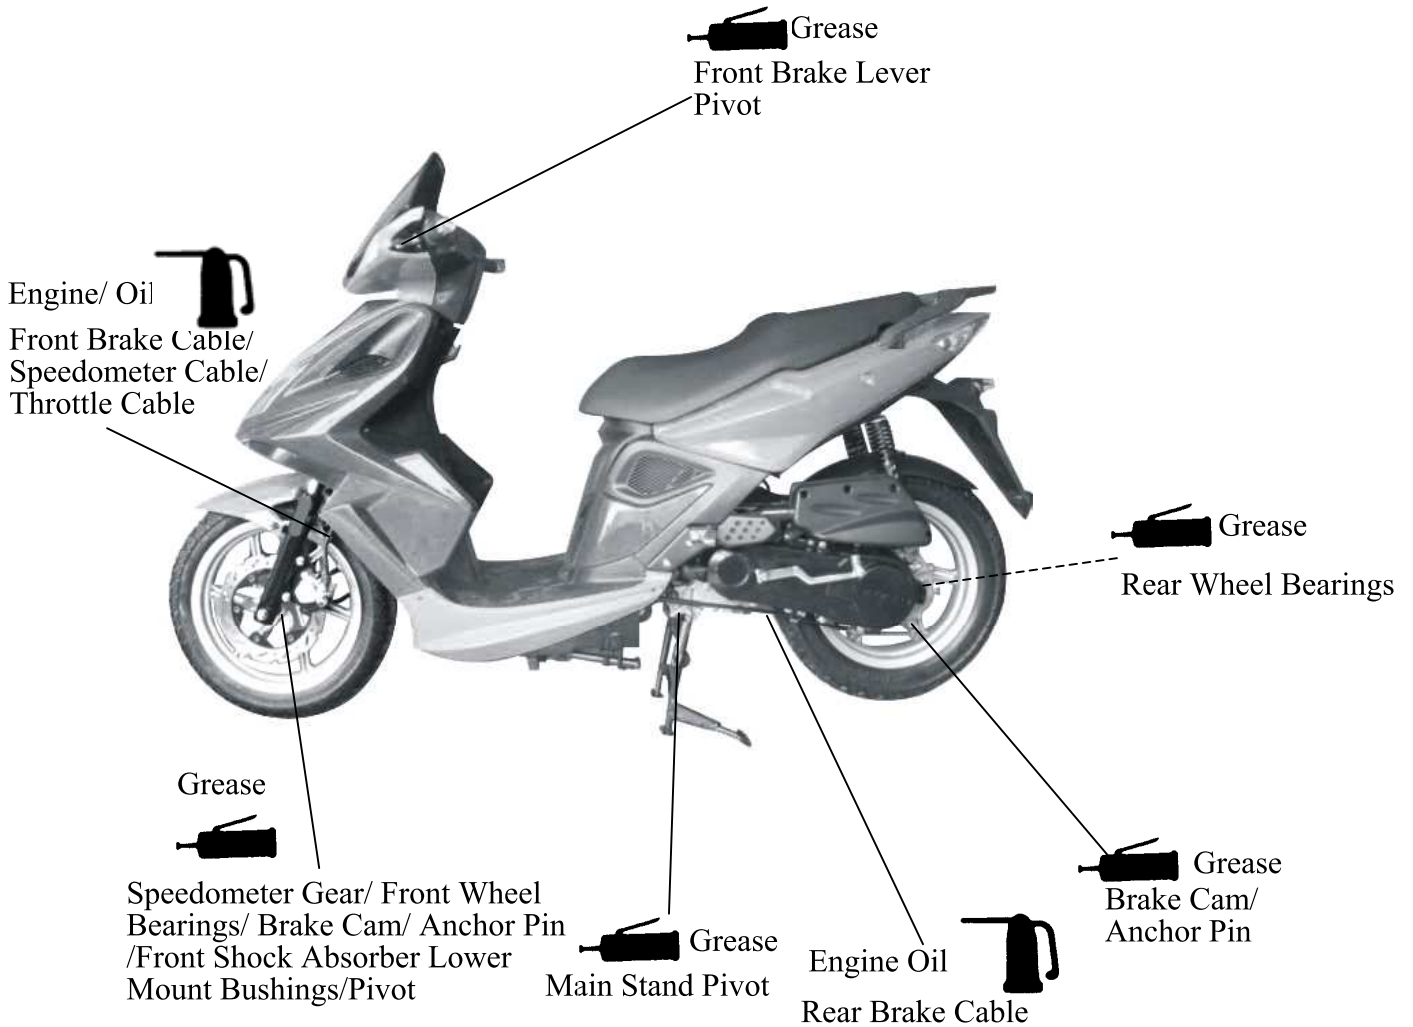



1. GENERAL INFORMATION

CABLE & HARNESS ROUTING

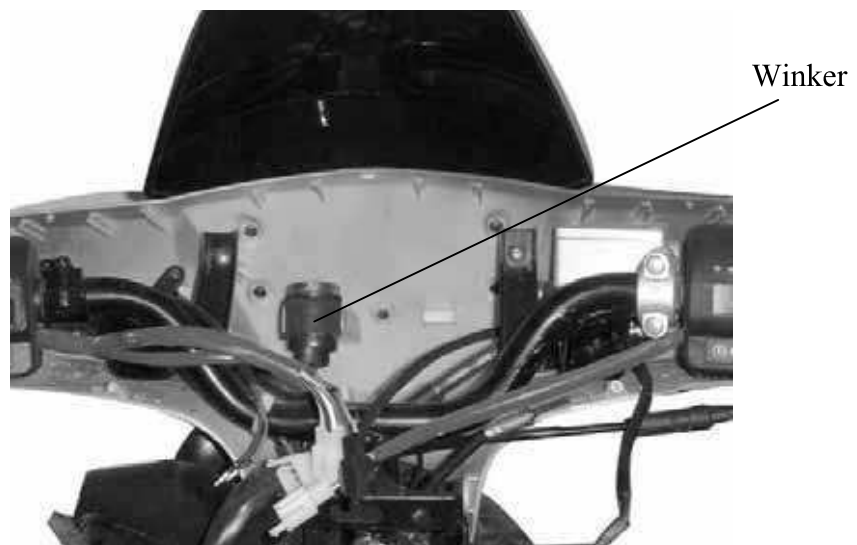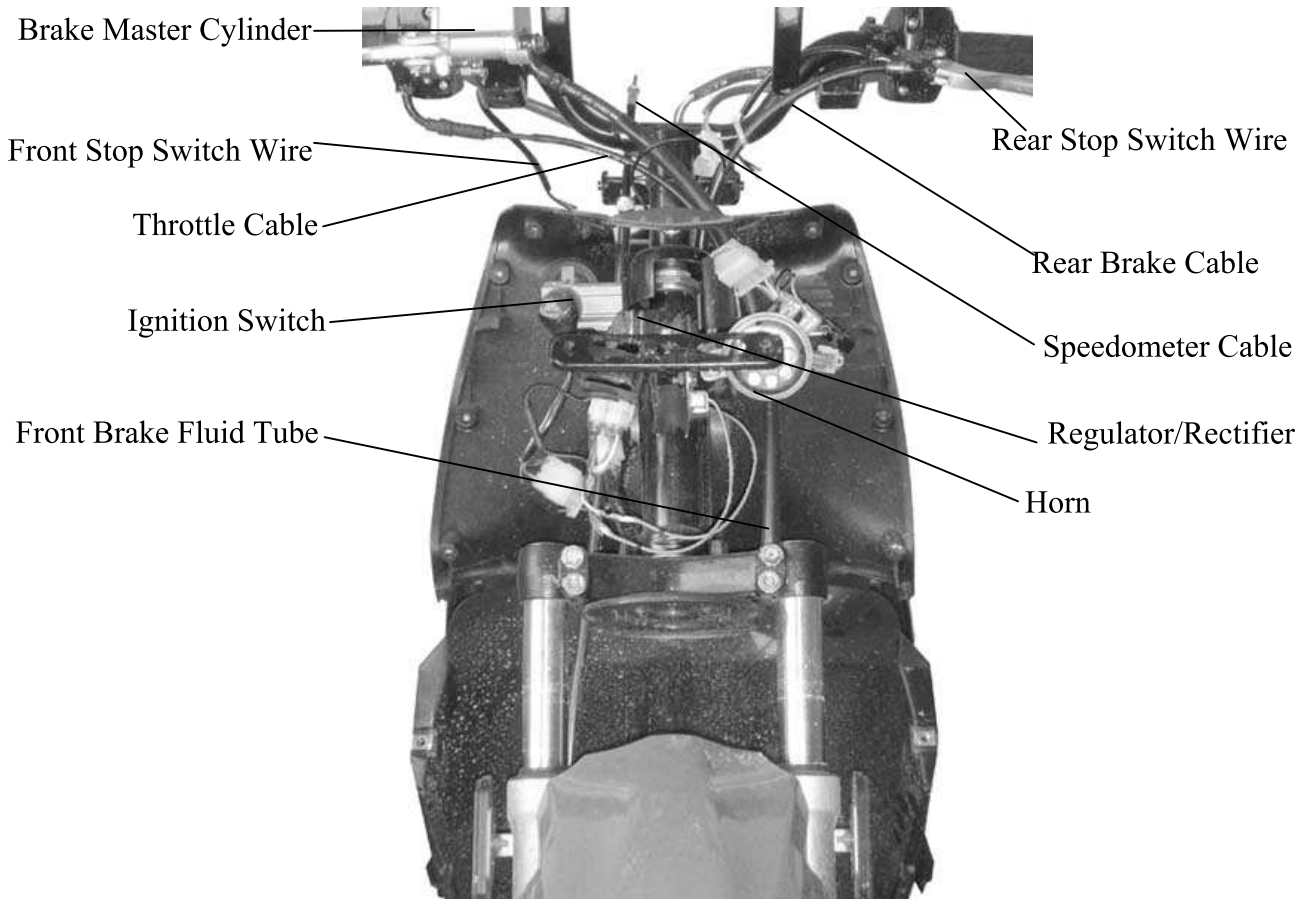



1. GENERAL INFORMATION


SUPER8 125

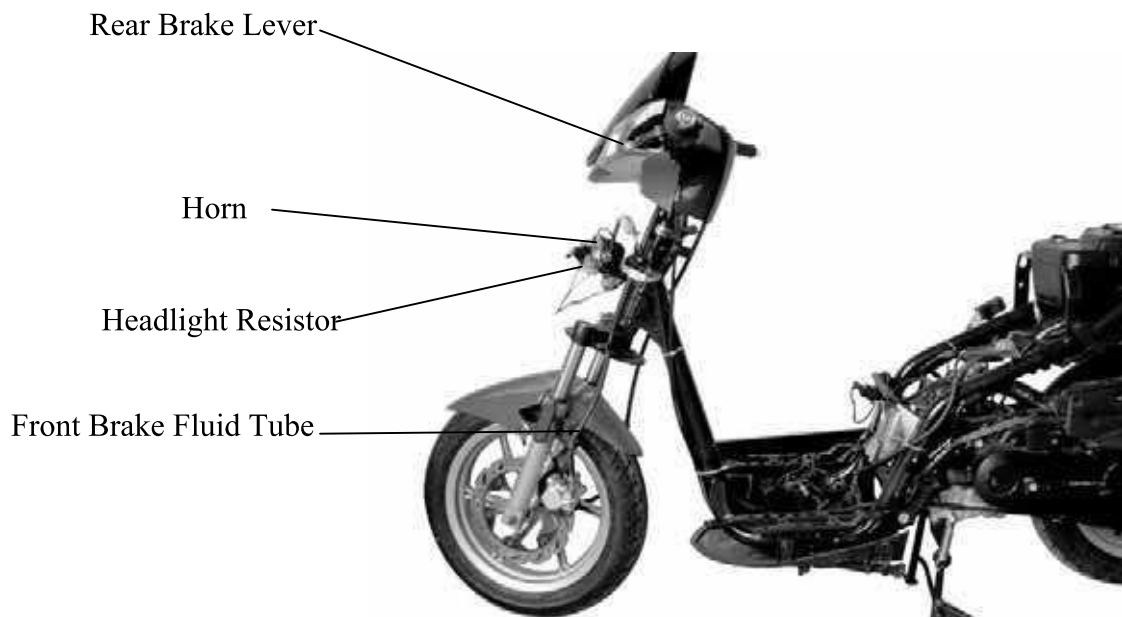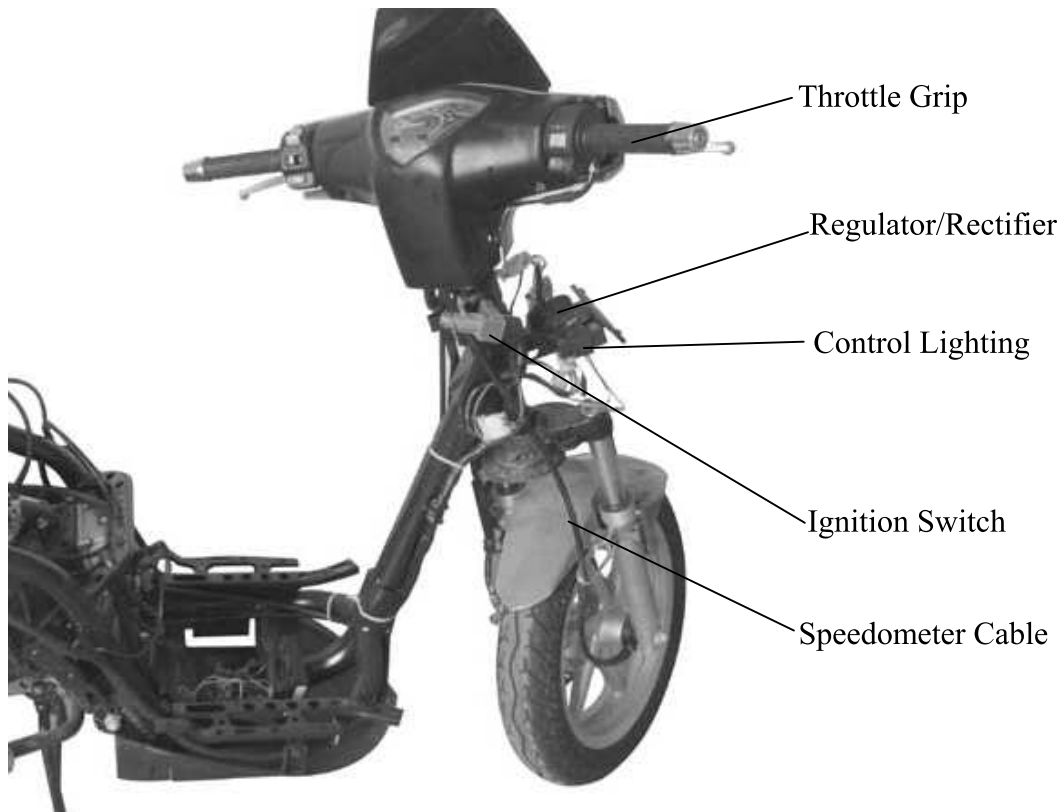

1. GENERAL INFORMATION



SUPER8 125

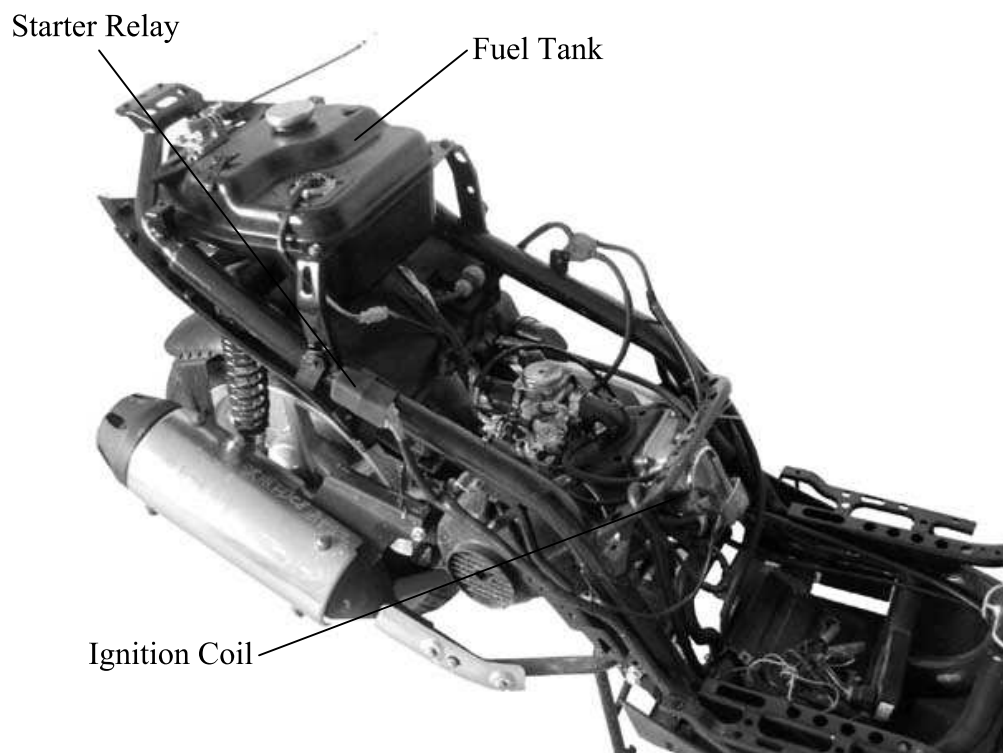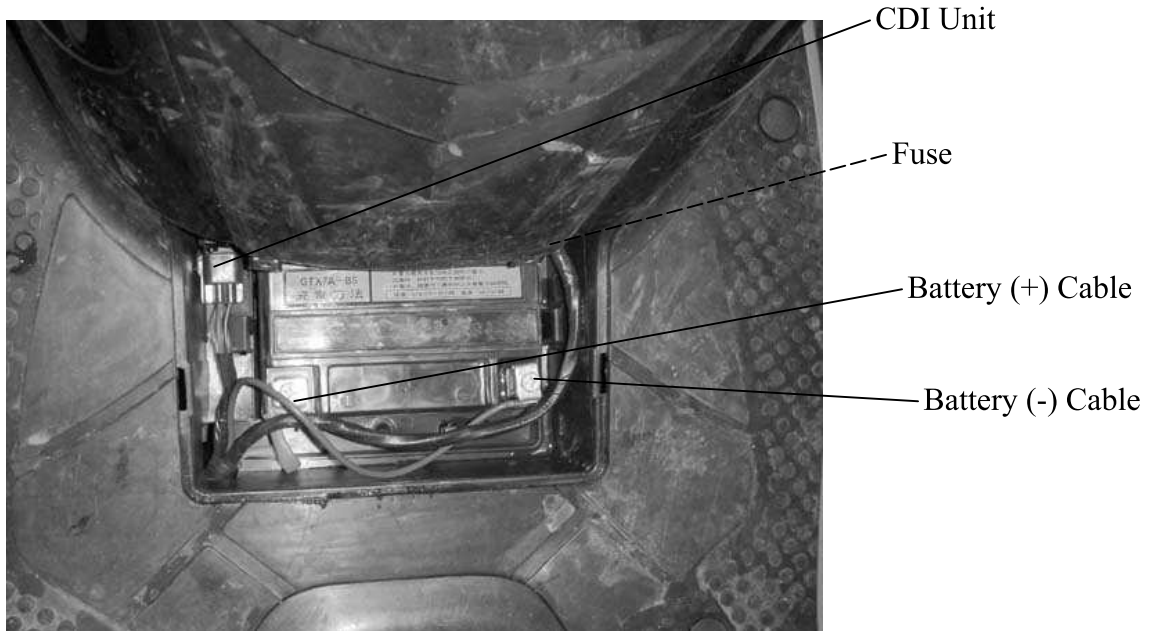

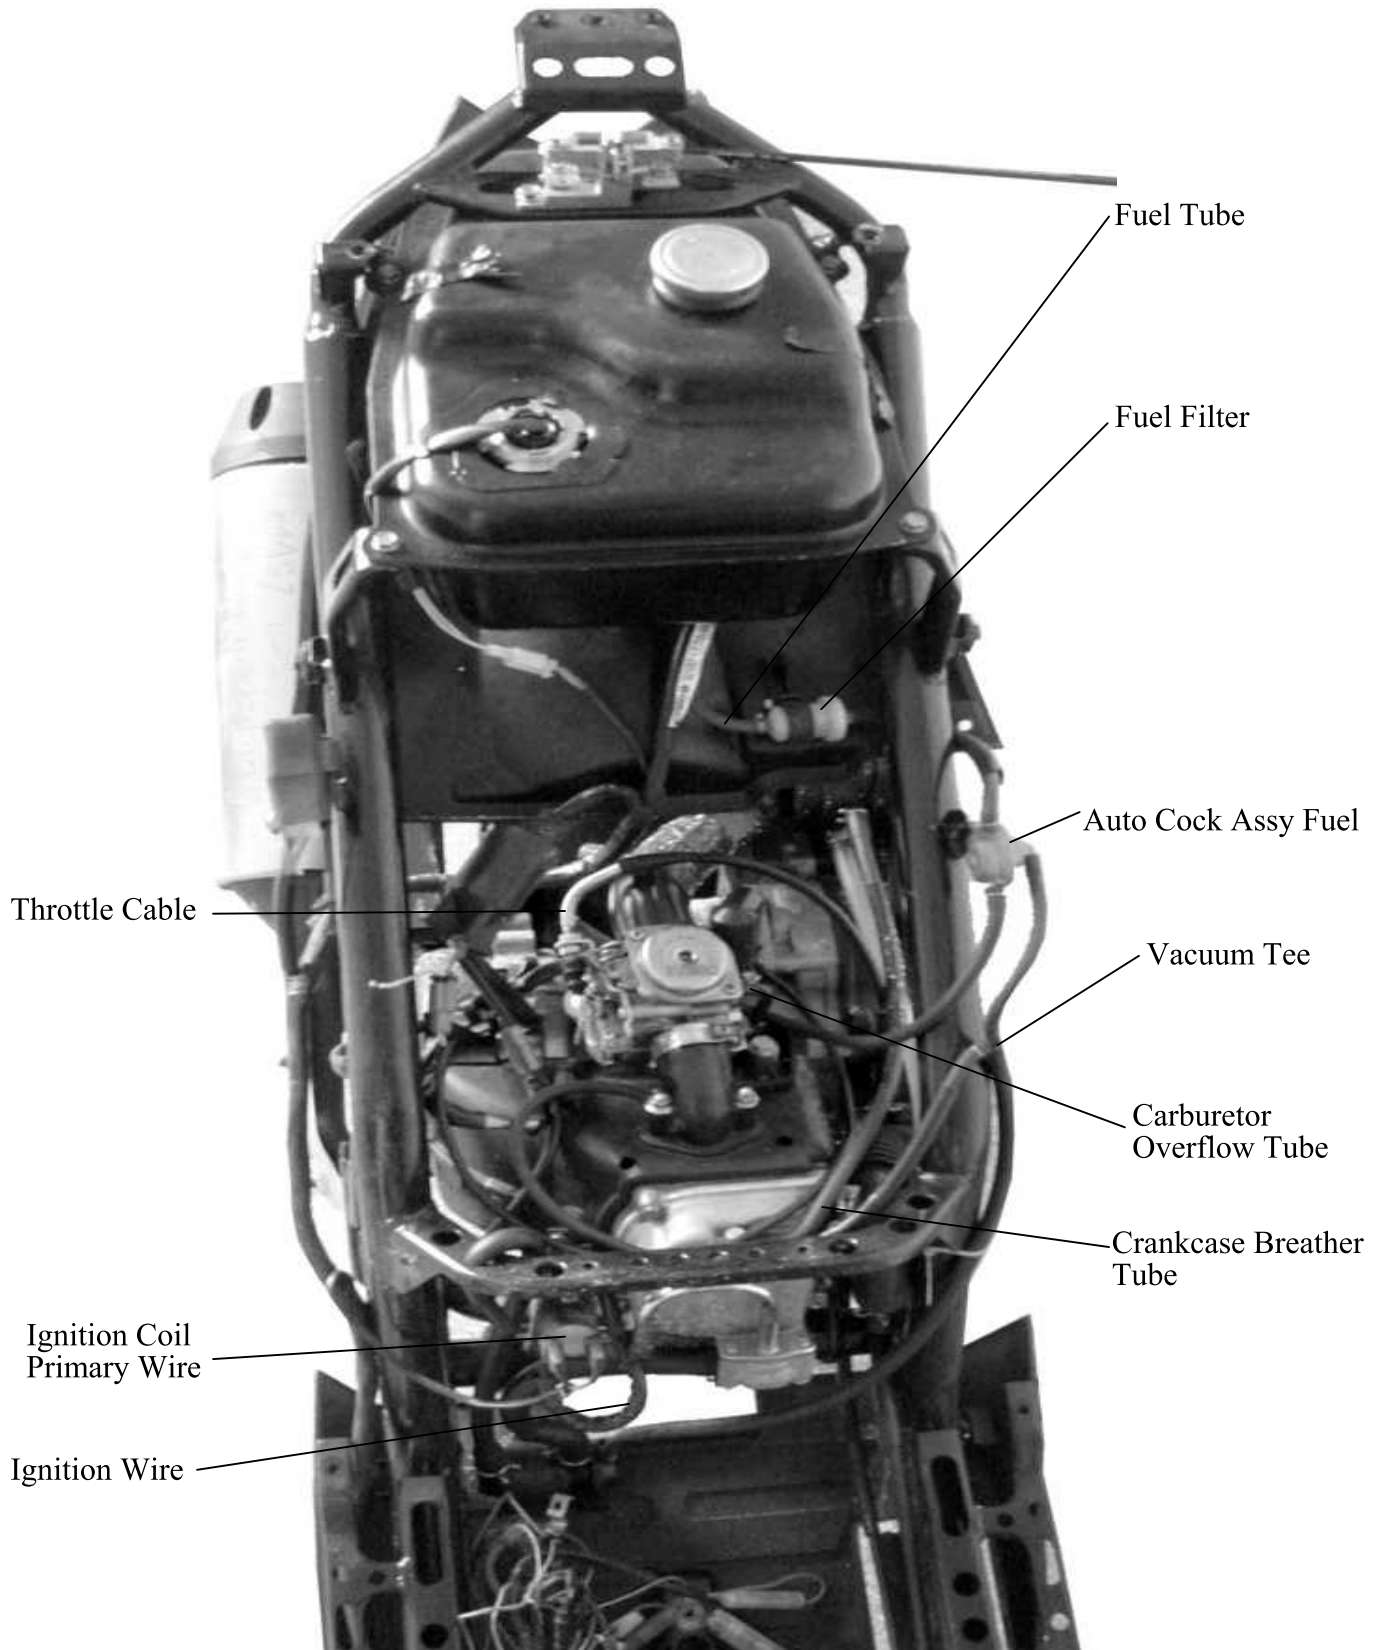

1. GENERAL INFORMATION

SUPER8 125

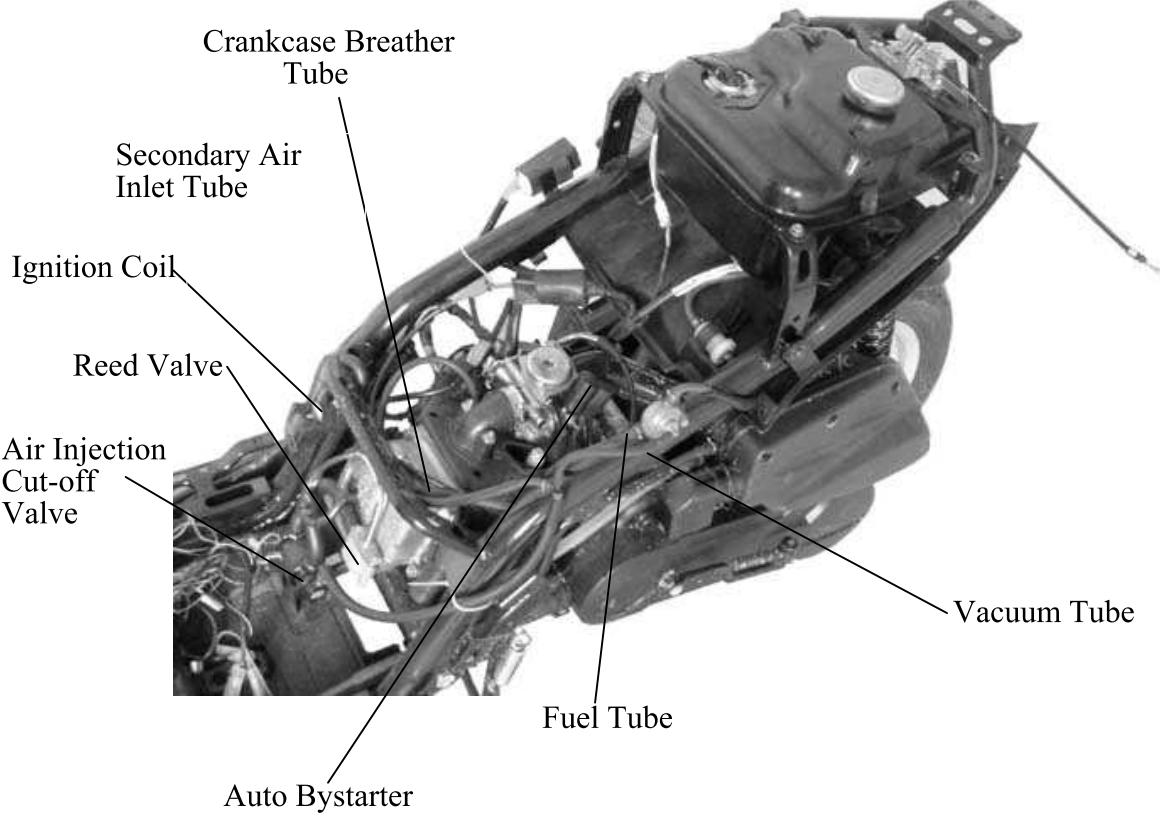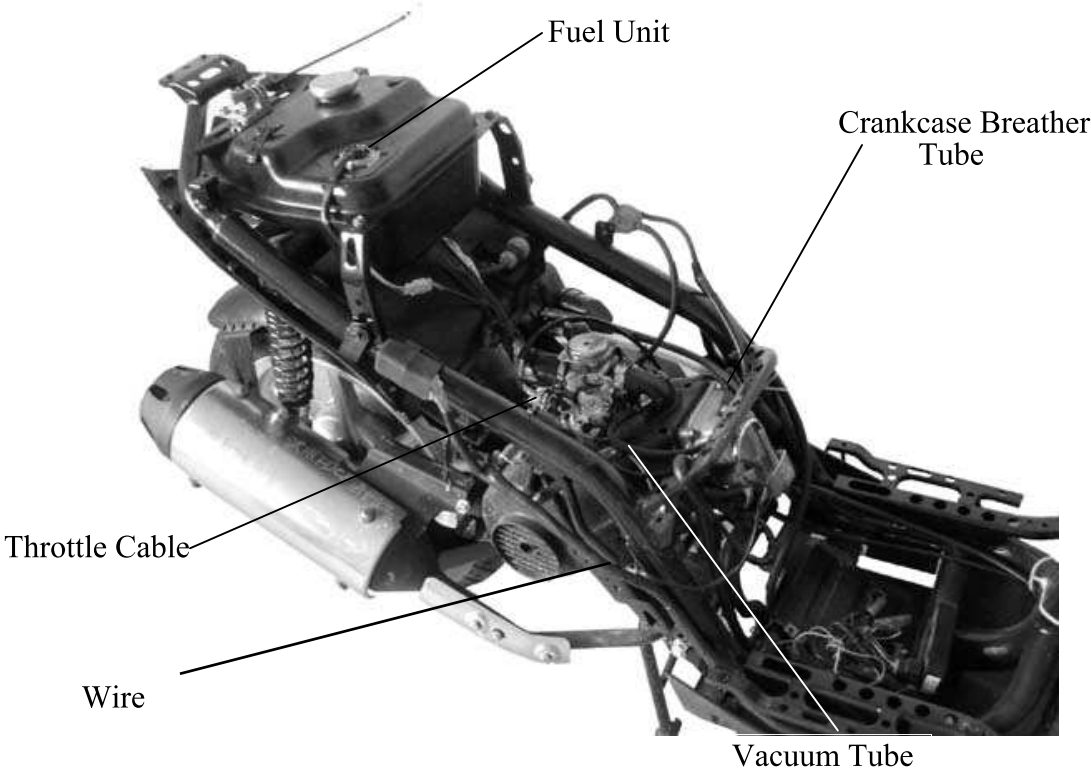

1. GENERAL INFORMATION

SUPER8 125

| AS HEADLIGHT | B | C | D | E |
|--------------|---|---|---|---|
| A | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ |

| START SV | A | B | C | D | E |
|----------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |


| AS STOP/STOP | A | B | C | D | E |
|--------------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |

| AS METER | A | B | C | D | E |
|----------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |

| AS BENCH | A | B | C | D | E |
|----------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |


| AS ENGINE | A | B | C | D | E |
|-----------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |

| AS ENGINE | A | B | C | D | E |
|-----------|---|---|---|---|---|
| A | ○ | ○ | ○ | ○ | ○ |
| B | ○ | ○ | ○ | ○ | ○ |
| C | ○ | ○ | ○ | ○ | ○ |
| D | ○ | ○ | ○ | ○ | ○ |
| E | ○ | ○ | ○ | ○ | ○ |

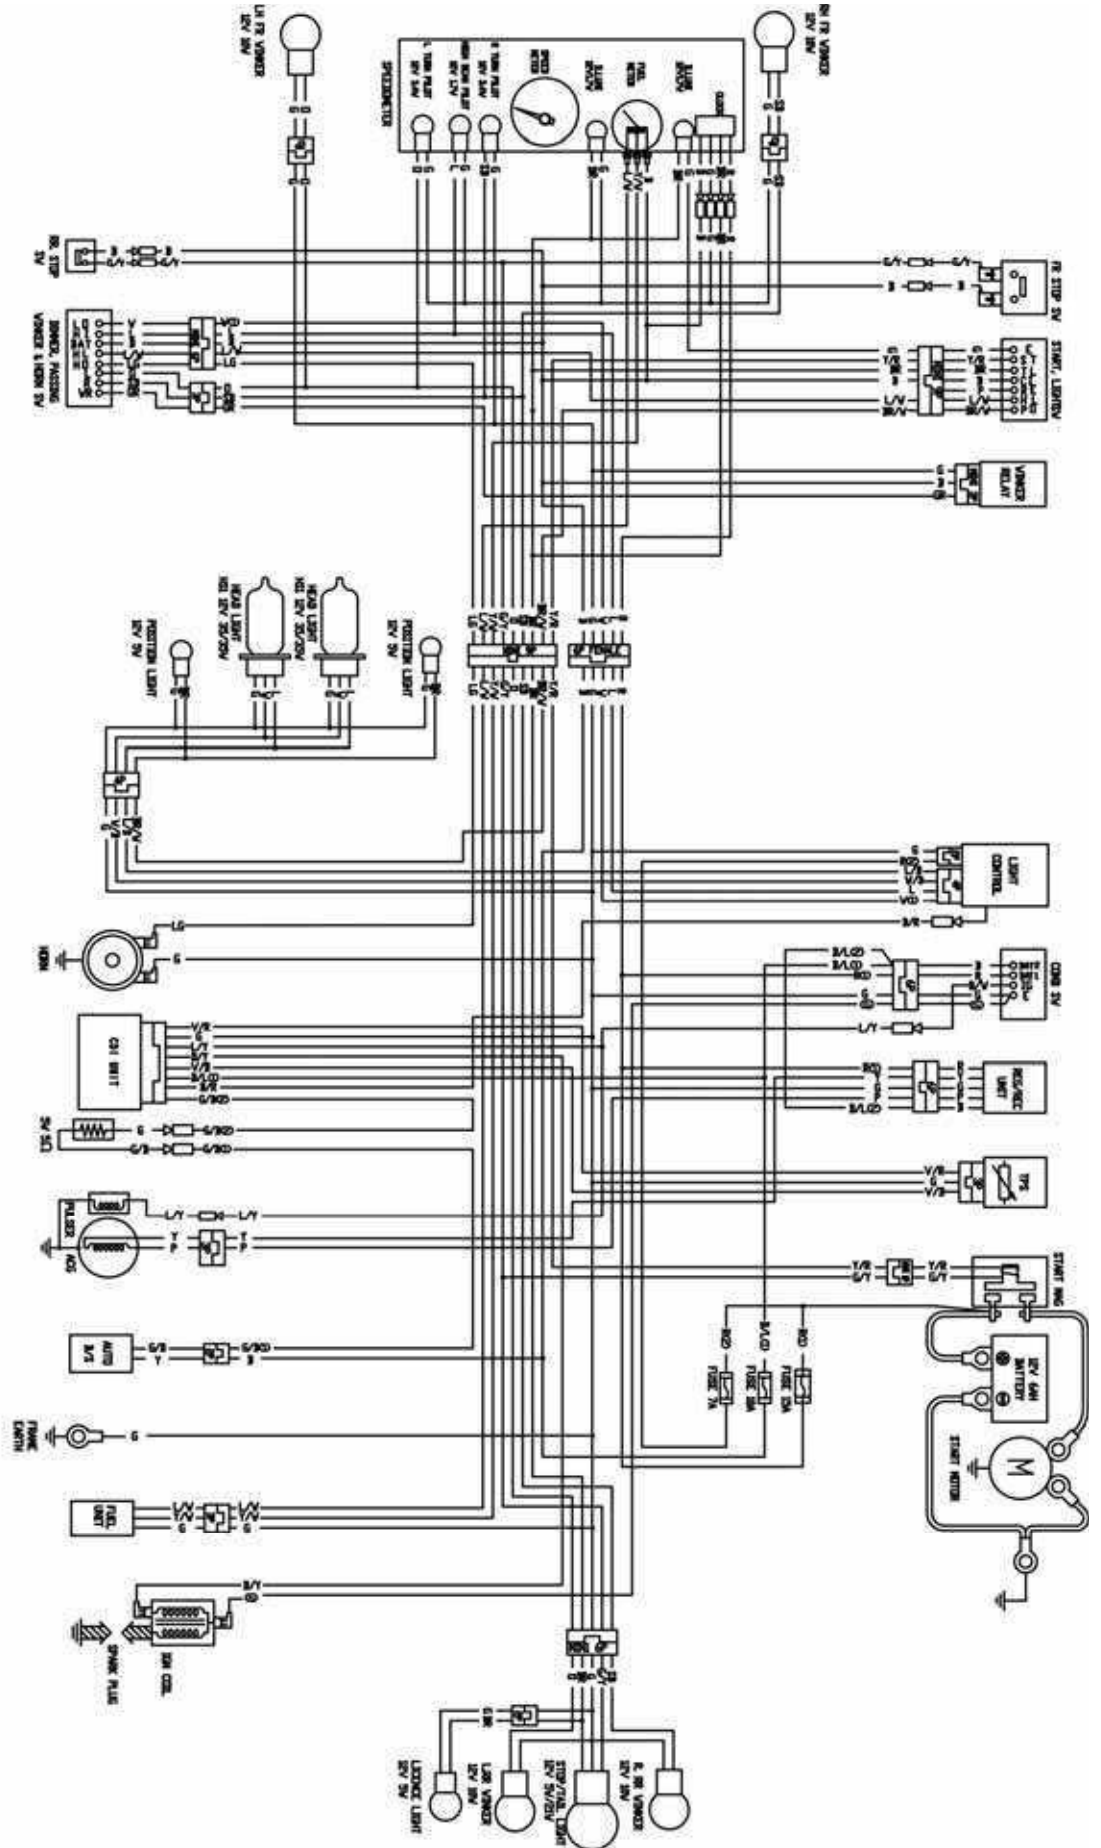

TROUBLESHOOTING


ENGINE WILL NOT START OR IS HARD TO START

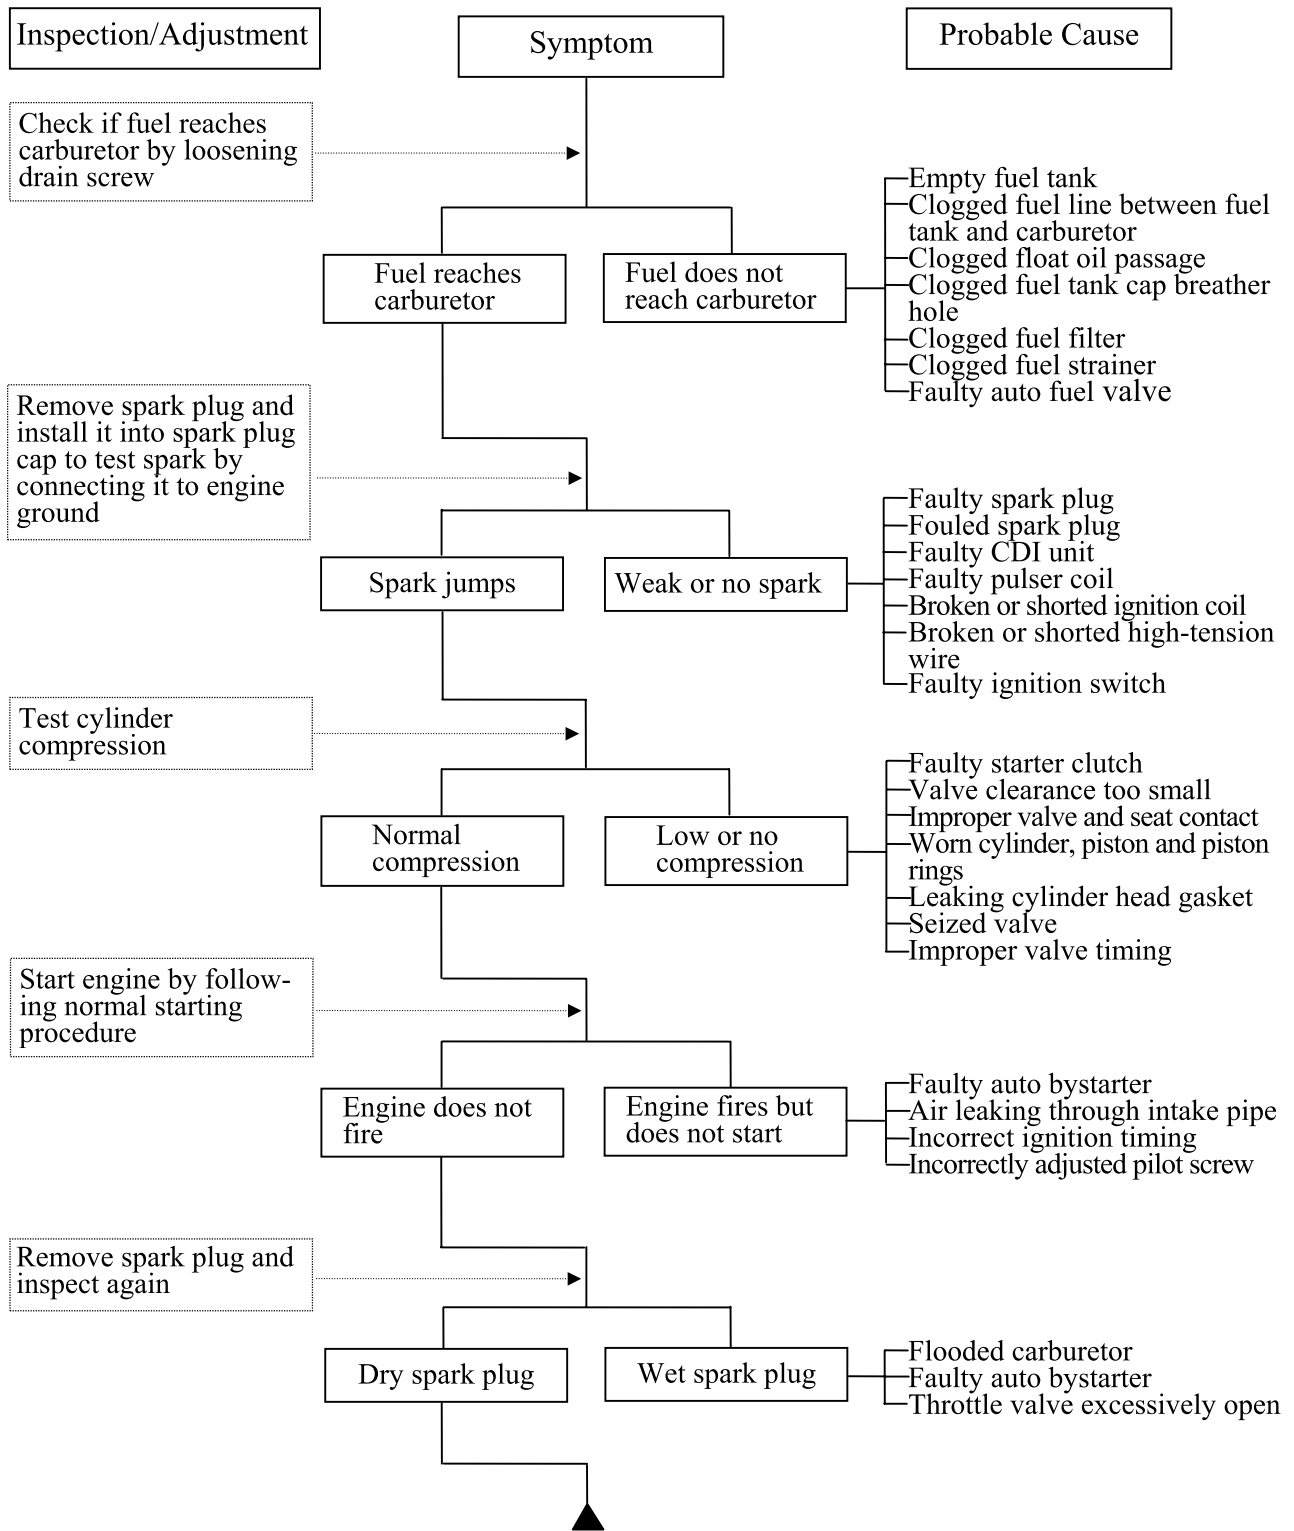


1. GENERAL INFORMATION

SUPER8 125

ENGINE LACKS POWER

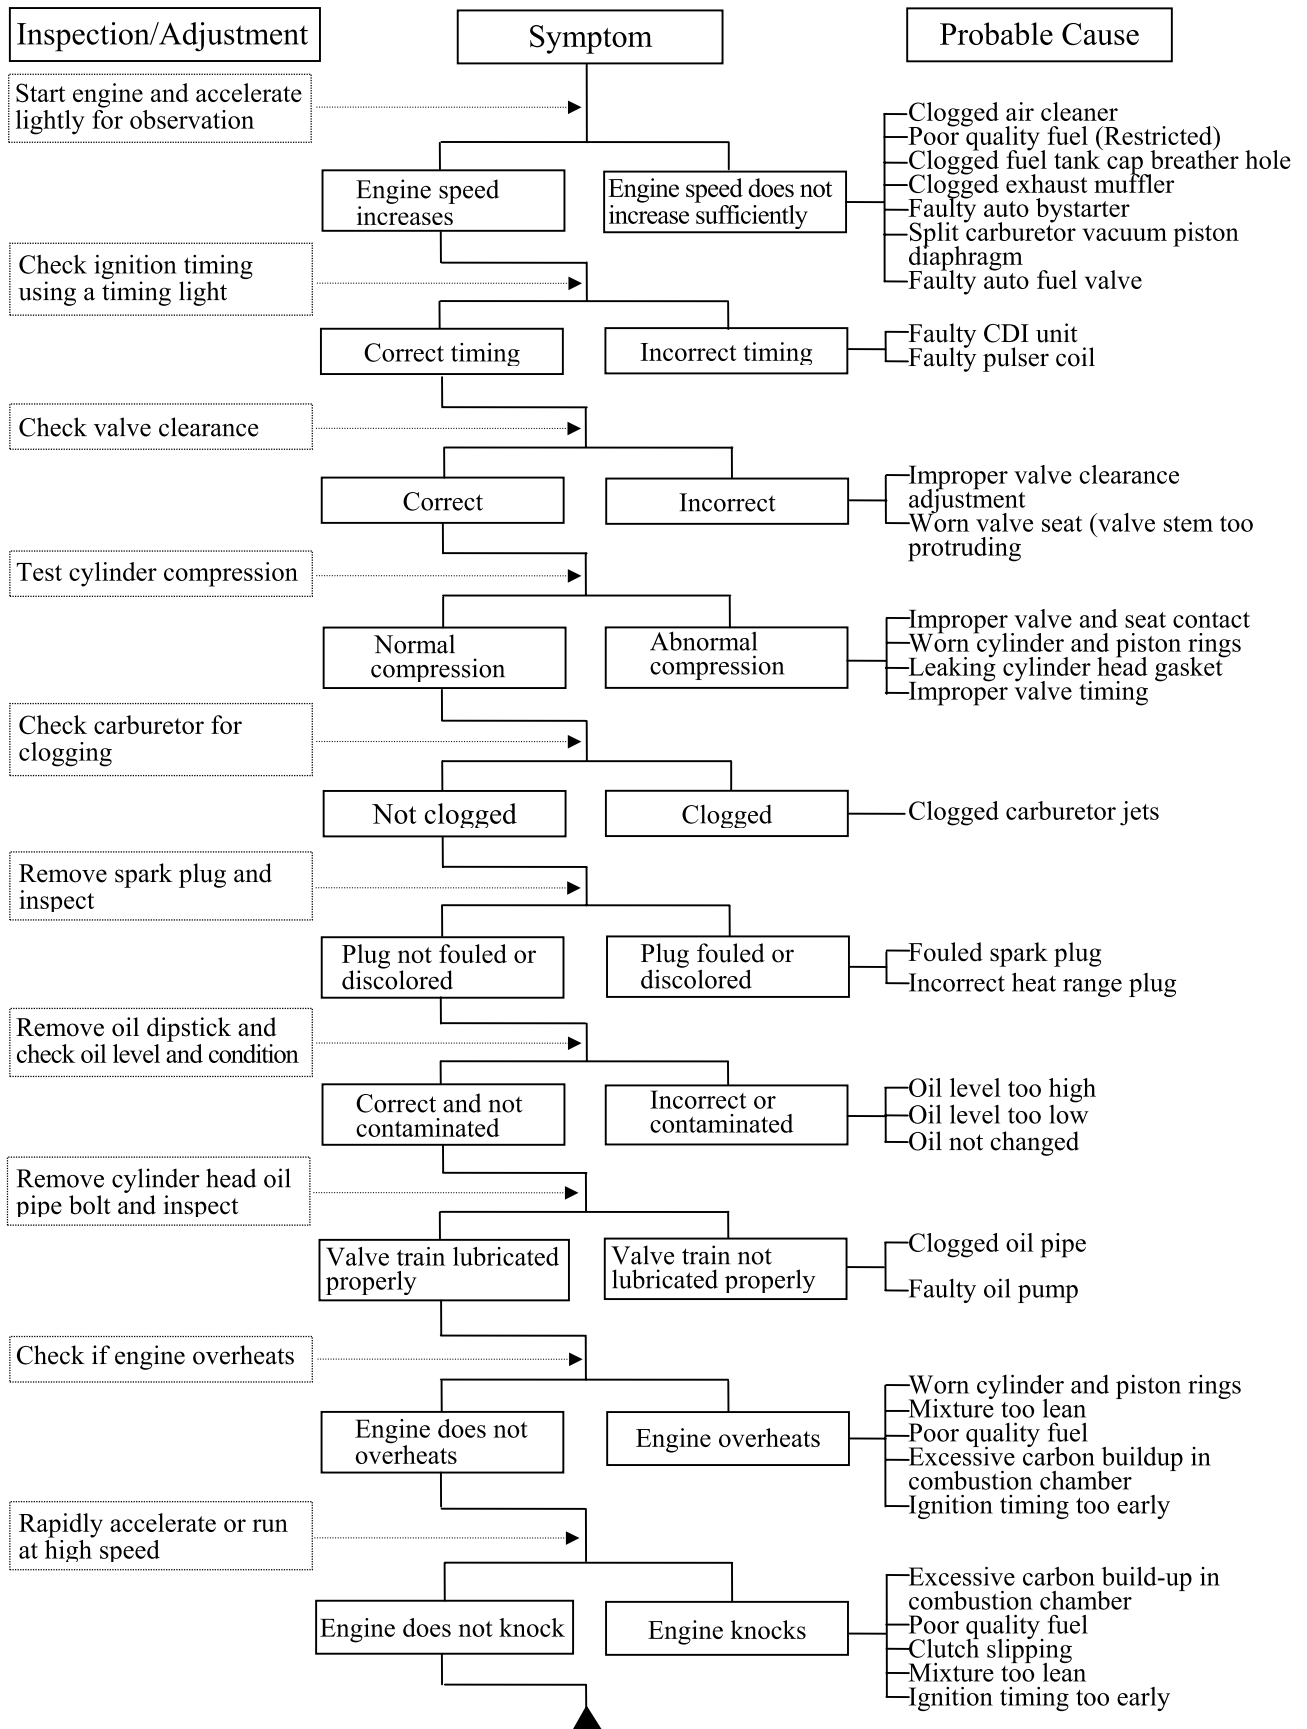


POOR PERFORMANCE (ESPECIALLY AT IDLE AND LOW SPEEDS)

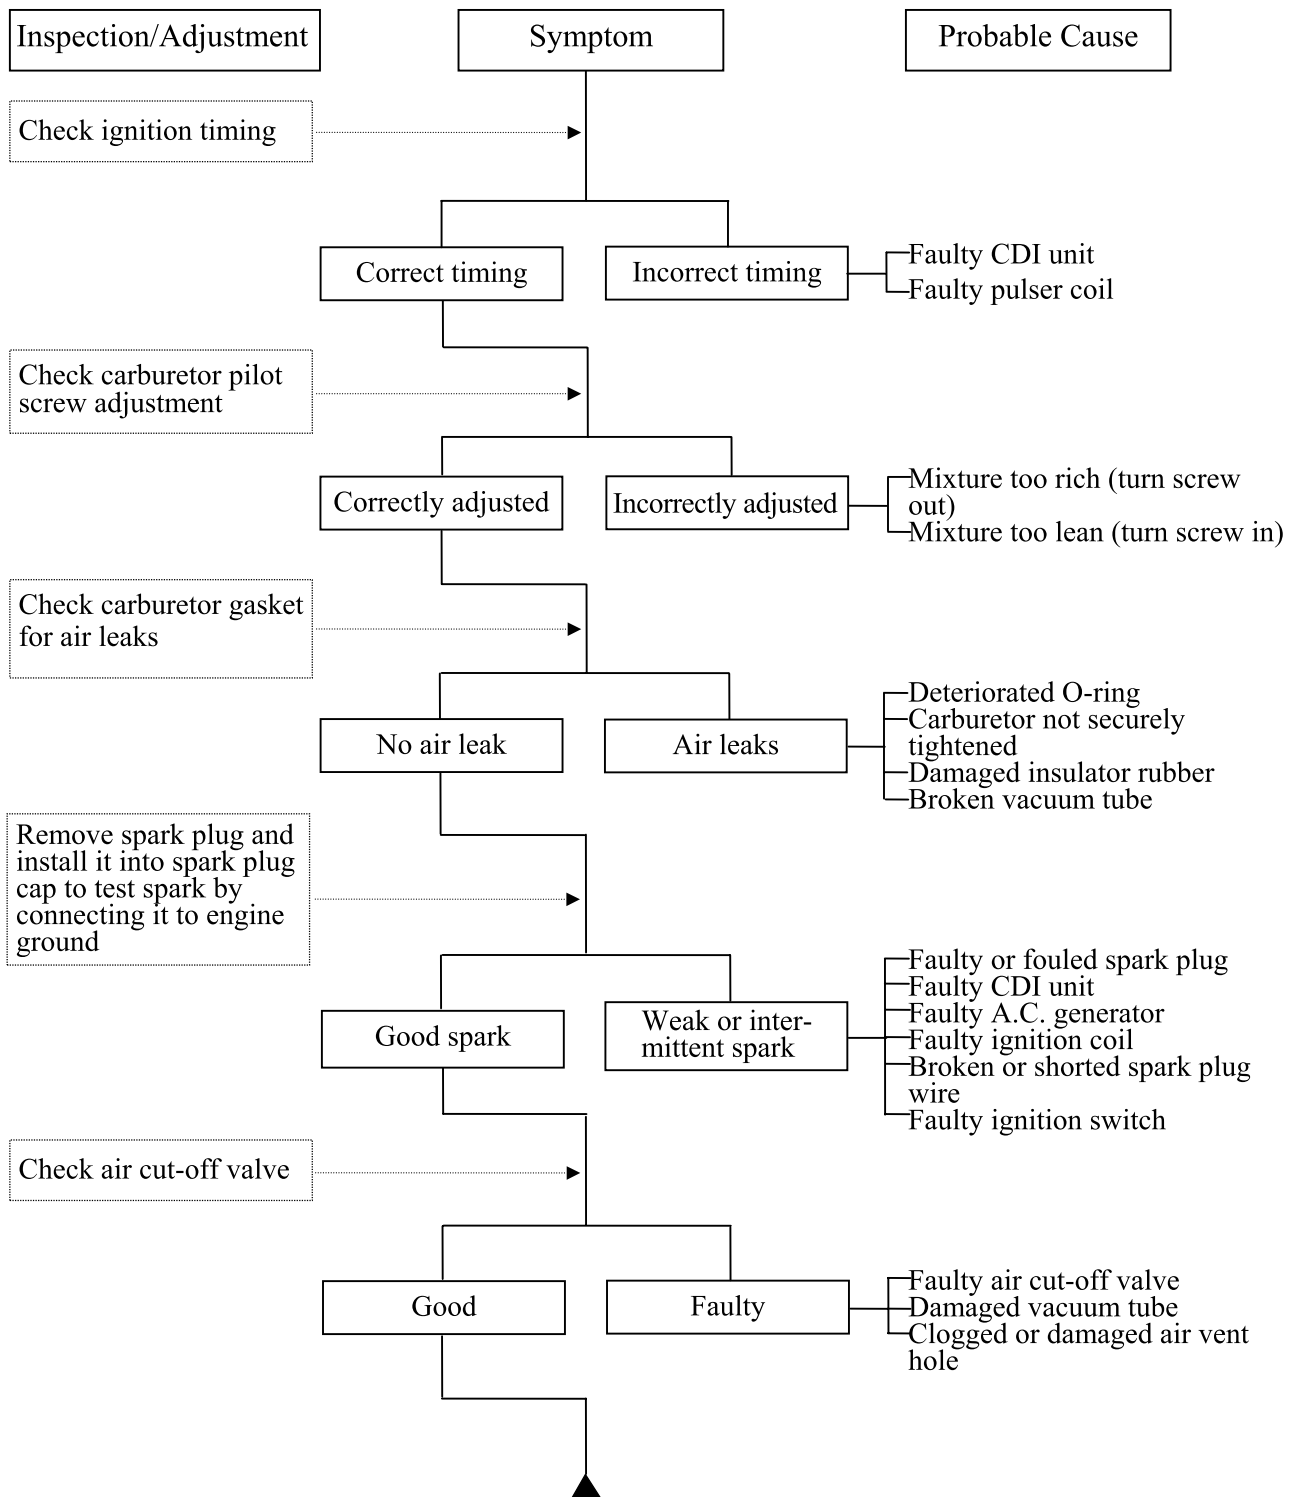

1. GENERAL INFORMATION


SUPER8 125

POOR PERFORMANCE (AT HIGH SPEED)

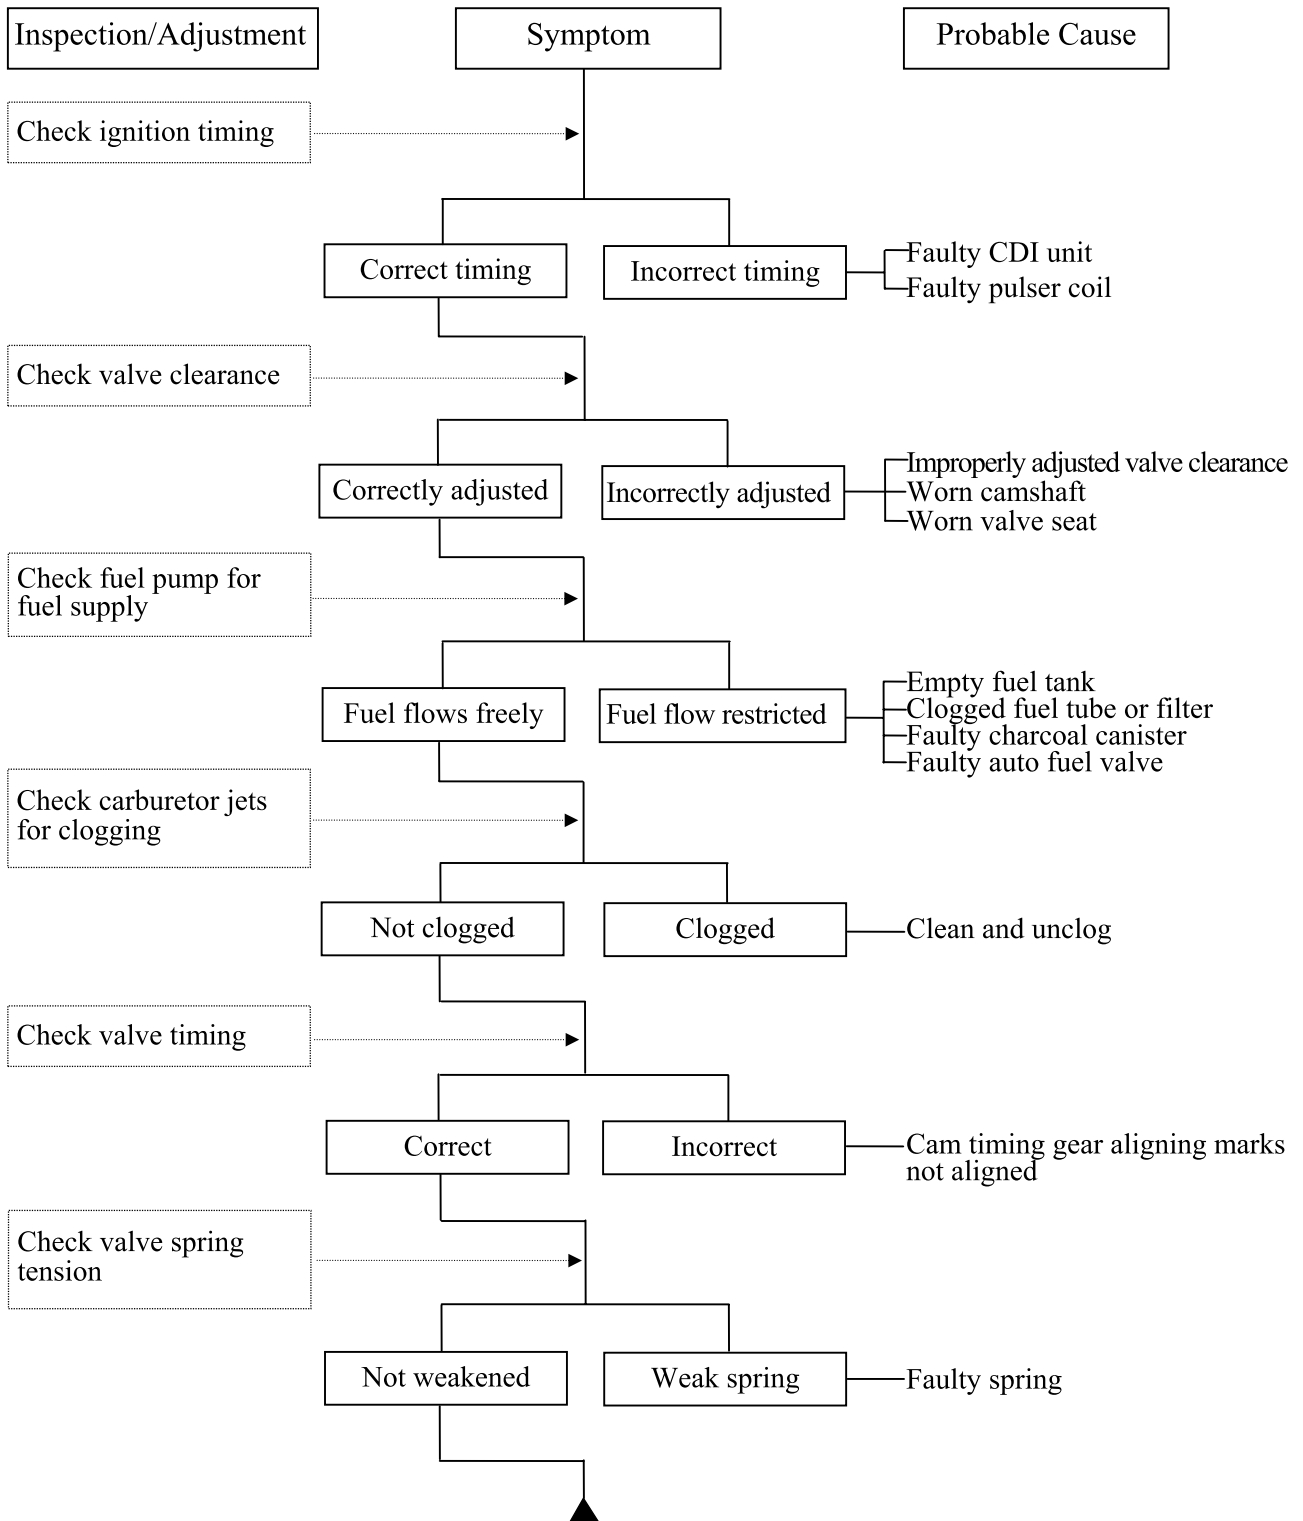


POOR CHARGING (BATTERY OVER DISCHARGING OR OVERCHARGING)


Undercharging

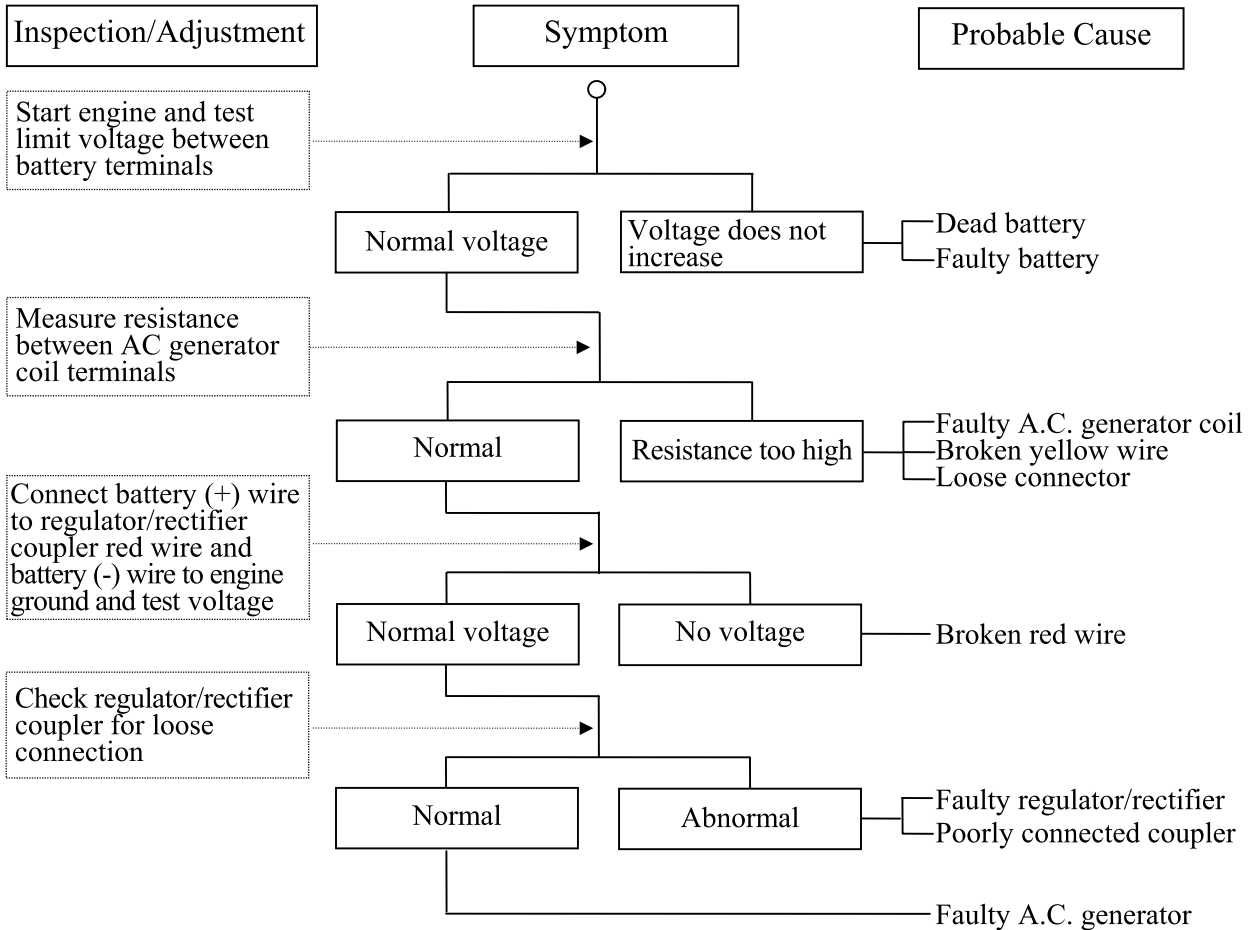

Overcharging

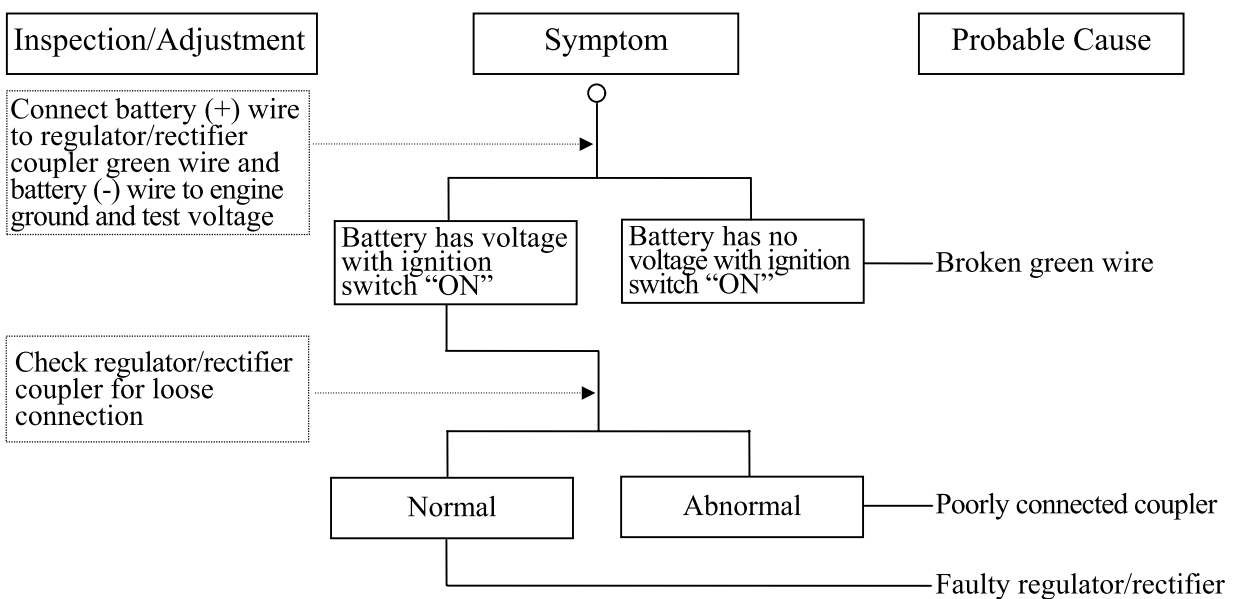


NO SPARK AT SPARK PLUG

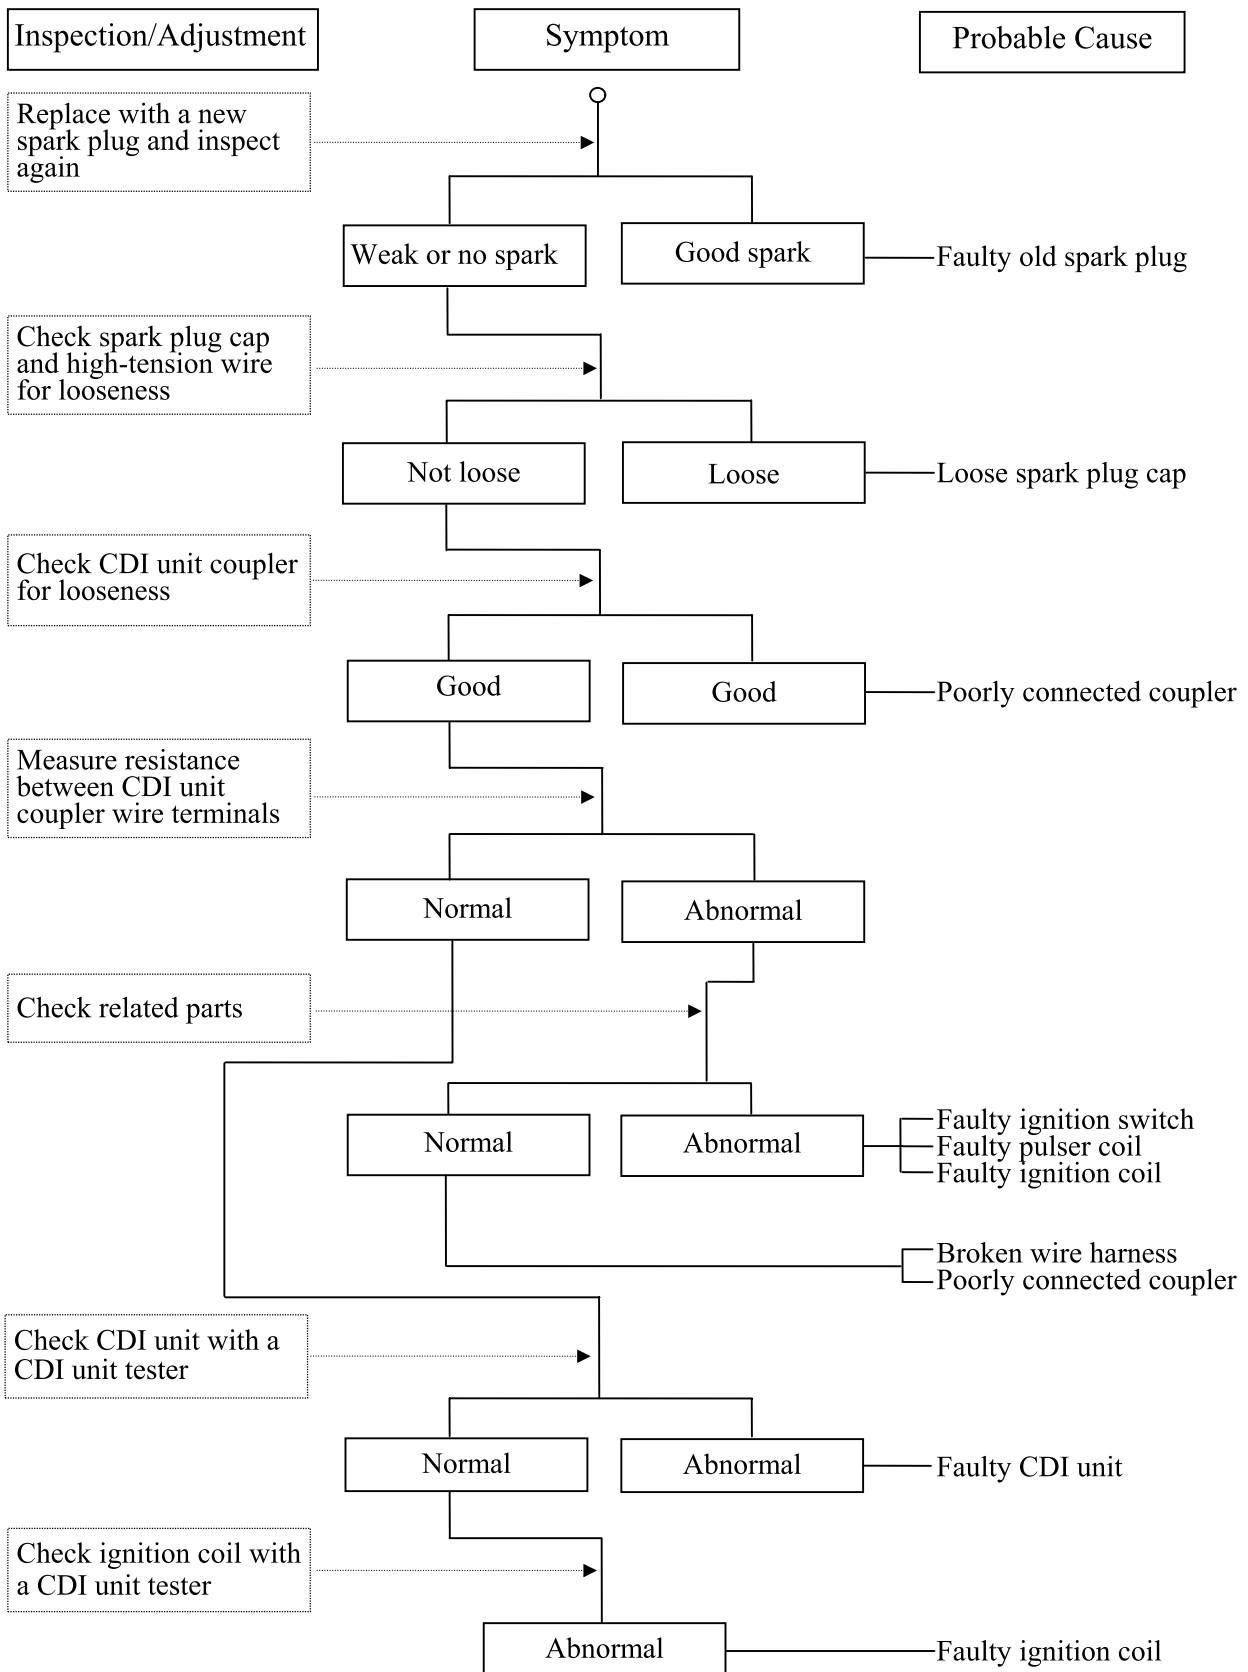

SCHEMATIC DRAWING

2

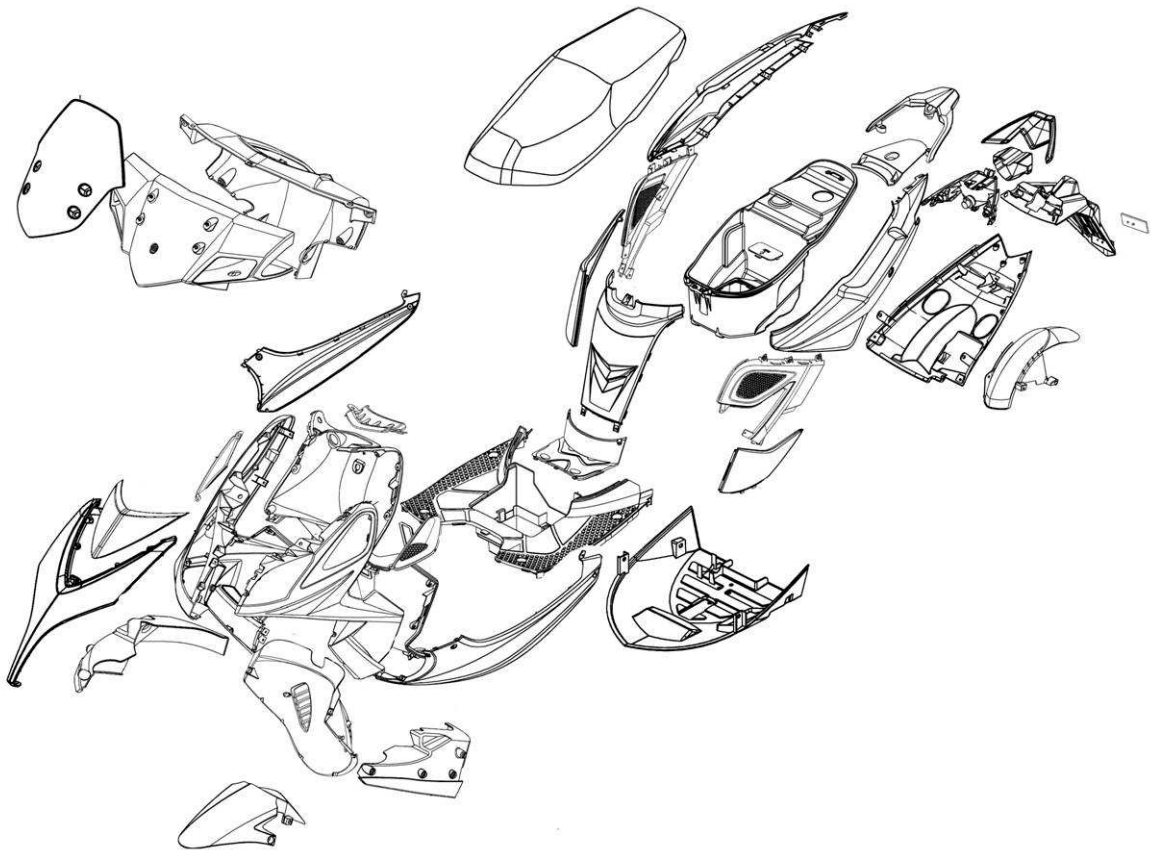

| | | | |
|---------------------------|-----|-------------------------------|-----|
| SERVICE INFORMATION | 2-1 | EXHAUST MUFFLER REMOVAL | 2-5 |
| FRAME COVERS | 2-2 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- When removing frame covers, use special care not to pull them by force because the cover joint claws may be damaged.

Items Related for Removal

- Handlebar front cover ——— Handlebar rear cover
Headlight wire connector
- Handlebar rear cover ——— Speedometer cable and instrument light
wire connectors, etc.
- Frame body cover ——— Met-in box, rear grip, rear turn signal
lights, floor board
- Floor board ——— Frame body cover
Battery and wire connectors
- Leg Shield ——— Front cover, floor board


TORQUE VALUES

- | | |
|--------------------------------|--------------|
| Exhaust muffler joint lock nut | 1.0~1.4kgf-m |
| Exhaust muffler lock bolt | 3.0~3.6kgf-m |

FRAME COVERS


FRONT COVER REMOVAL

Remove the screw on the front cover.
 Remove the two screws on the back of the front cover.
 Remove the front cover.
 Remove the two bolt and ten screws attaching the R/L mole side.
 Remove the R/L mole side
 The installation sequence is the reverse of removal.

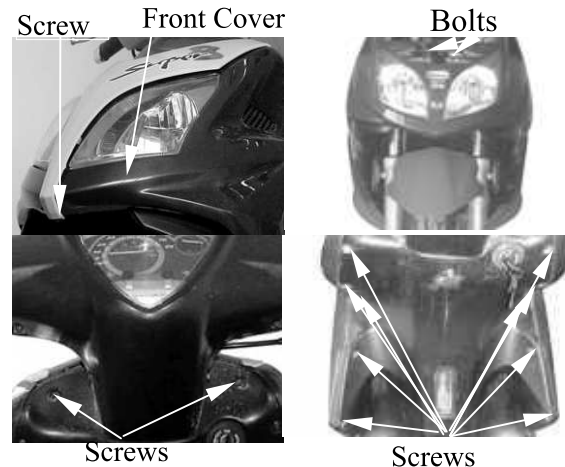


HANDLEBAR REAR COVER REMOVAL

Remove the handlebar rear cover screw.
 Disconnect the speedometer cable, right and left handlebar switch couplers, and the stop switch wire connectors.
 Remove two screws inside the handlebar rear cover and remove the handlebar rear cover.
 The installation sequence is the reverse of removal.

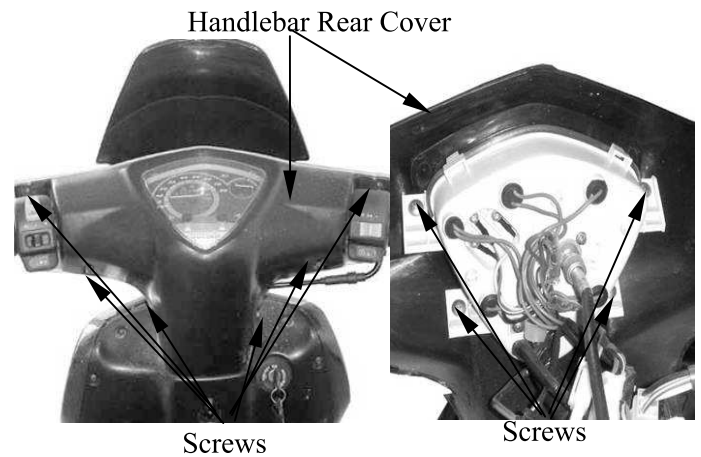


HANDLEBAR FRONT COVER REMOVAL

Remove the bolt attaching the handlebar front cover.
 Remove the handlebar front cover.

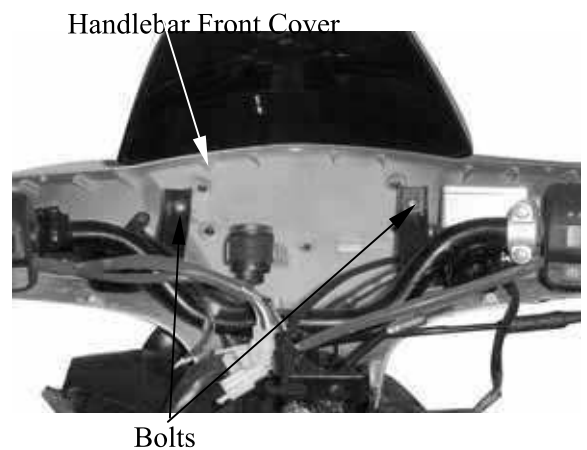

MET-IN BOX REMOVAL

Open the seat and remove the four bolt attaching the met-in box.
 Remove the met-in box .

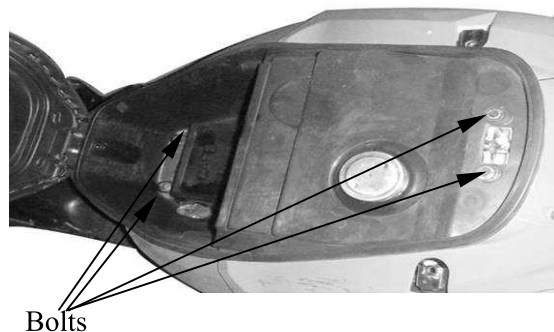


2. FRAME COVERS/EXHAUST MUFFLER


SUPER8 125

FRAME BODY COVER REMOVAL


Remove the two screws on the battery cover.
Remove the center cover

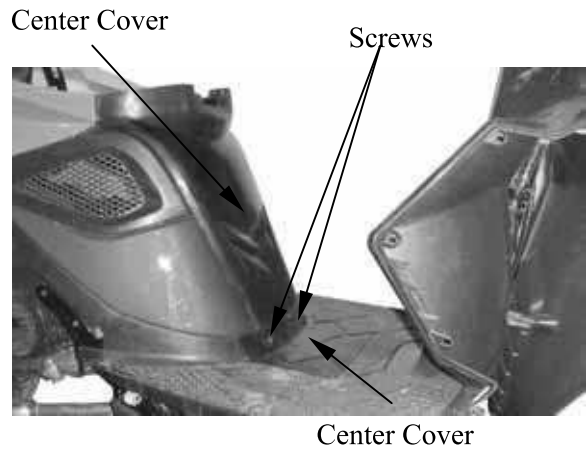

Remove the three bolts attaching the rear carrier.
Remove the rear carrier.

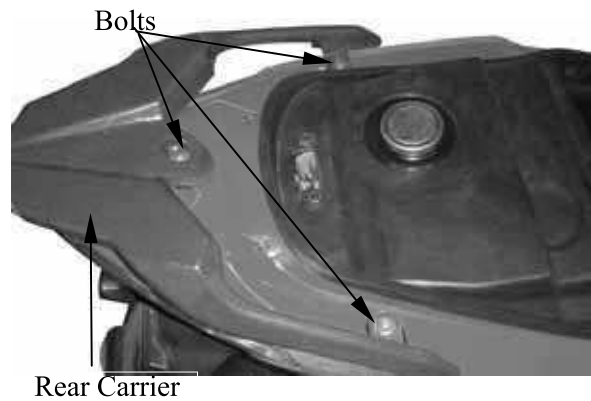


Remove the two bolt attaching the left and right rear step.
Remove the rear step

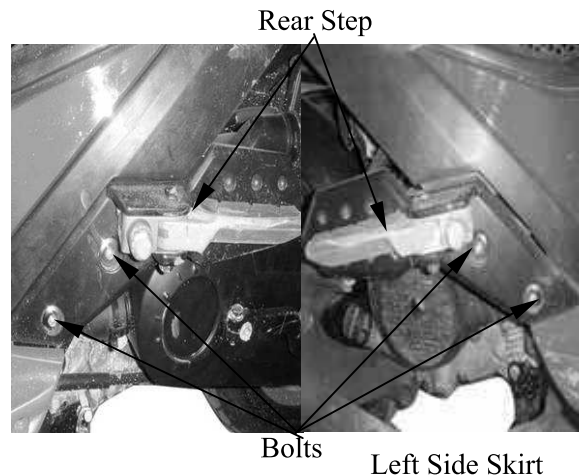

Remove the two screws attaching the left side and right side skirt
Remove the left side and right side skirt

• During removal, do not pull the joint claws forcedly to avoid damage.
• When installing, be sure to connect the seat lock wire.

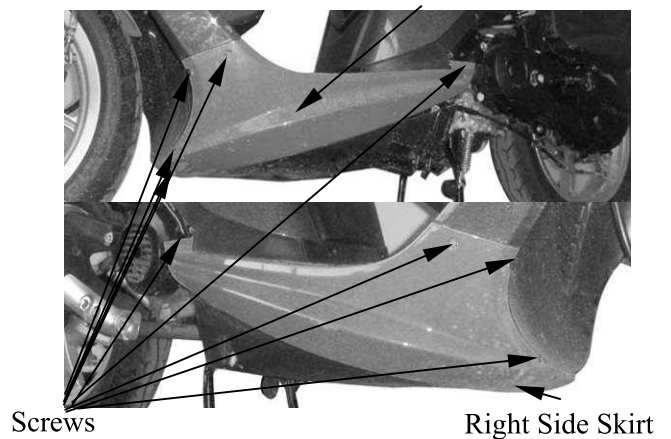


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 125

Remove the two screws on the center rear cover.
Remove the center rear cover.

Center Rear Cover.

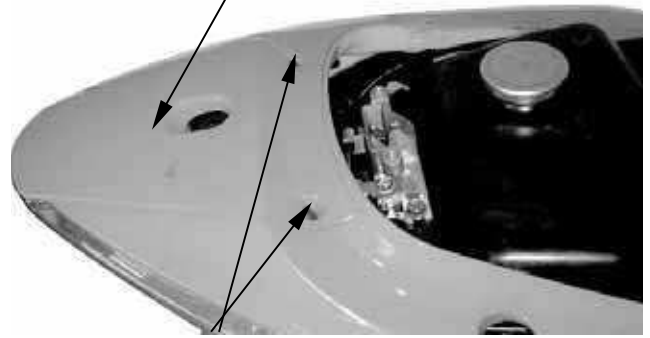


Remove the two bolts attaching the frame body cover.



Bolts

Remove the two bolts attaching the rear fender.
Disconnect the taillight wire connector.
Remove the rear fender.


Bolts

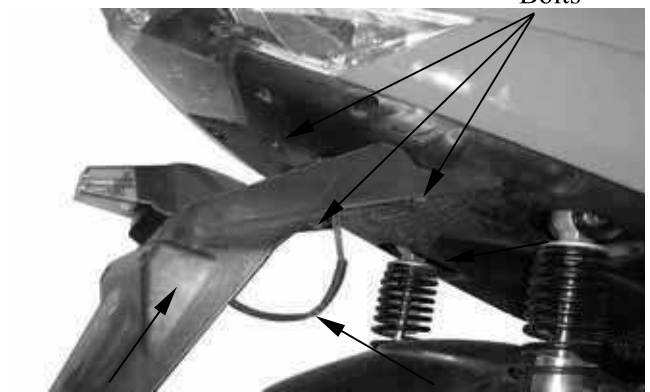

Rear Fender

Wire

Remove the six screws attaching the fender rear inner.

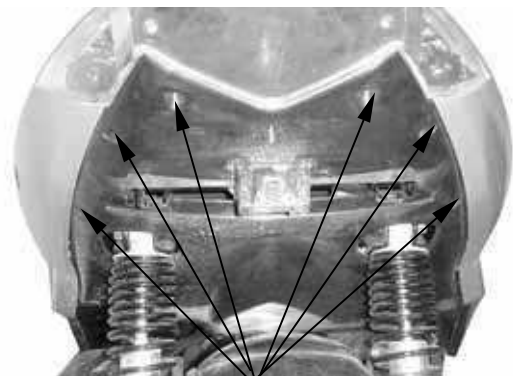

Screws


2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 125

Discornnect the seat lock wire.
 Discornnect the tail lamp wire connectors
 Remove the left and right body cover
 The installation sequence is the reverse of remove

- During removal, do not pull the joint claws forcedly to avoid damage.
- When installing, be sure to connect the seat lock wire.


Seat Lock Wire

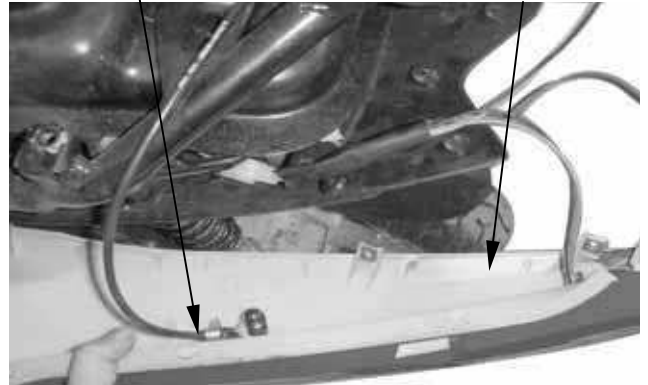

FLOOR BOARD REMOVAL

Remove the rear carrier. (⇒2-3)
 Remove the met-in box. (⇒2-3)
 Remove the frame body cover. (⇒2-4)
 Remove the four bolts attaching the floor board.
 Remove the floor board.

Bolts

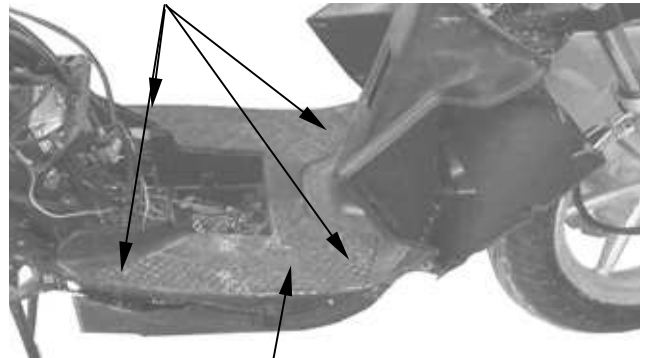


Floor Board.

FRONT FENDER AND UNDER COWL REMOVAL

Remove the two on the under cowl.
 Remove the under cowl.
 Remove the L/R side bolts attaching the front fender and front fender.

Under Cowl

Screws

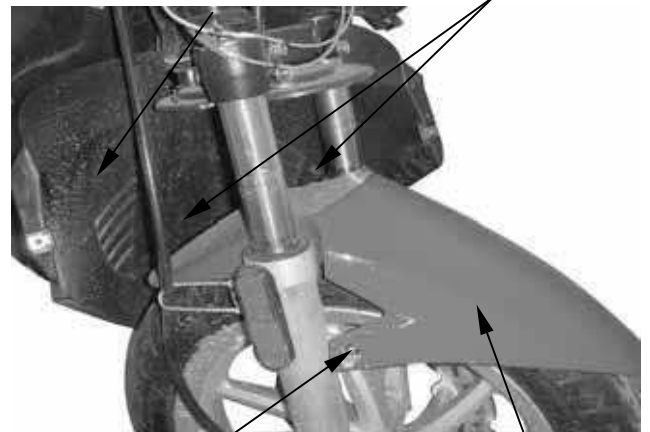

Bolt


Front Fender

LEG SHIELD REMOVAL

Remove the two clip body on the lid leg shield
 Remove the lid leg shield.
 The installation sequence is the reverse of remove

Clip Body.


Lid Leg Shield.

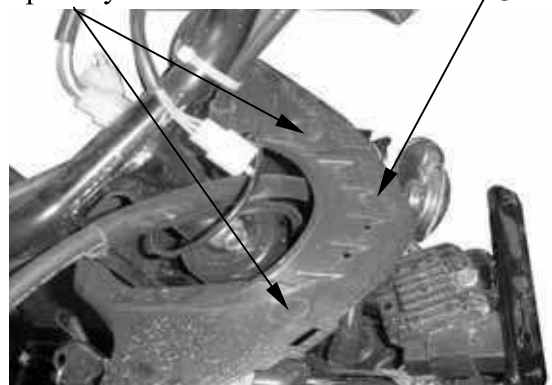

2. FRAME COVERS/EXHAUST MUFFLER

SUPER8 125

Remove the decorative ring.
 Remove the leg shield.
 The installation sequence is the reverse of remove

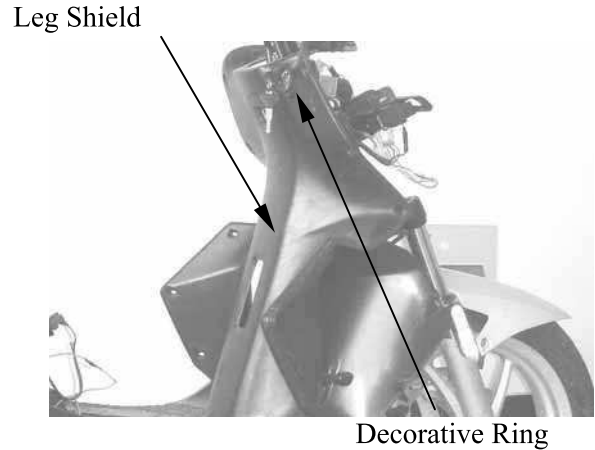

Decorative Ring

EXHAUST MUFFLER REMOVAL

Remove the two exhaust muffler joint lock nuts.
 Remove the two exhaust muffler lock bolts.
 Remove the exhaust muffler.
 Remove the exhaust muffler joint packing collar.

When installing, first install the exhaust muffler packing collar and then install the exhaust muffler.
 First install and tighten the exhaust muffler joint lock nuts. Then, install and tighten the exhaust muffler lock bolts.


Torques:

Exhaust muffler lock bolt: 3.0~3.6kgf-m
 Exhaust muffler joint lock nut: 1.0~1.4kgf-m

- Be sure to install a new exhaust muffler packing collar.



Bolts

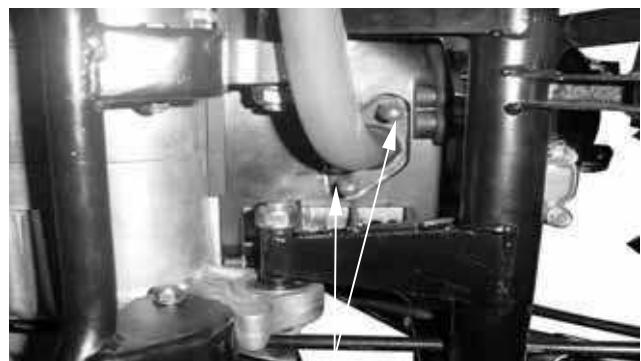

Lock Nut

| | |
|--------------------------------|-----------------------------------|
| SERVICE INFORMATION.....3-0 | FINAL REDUCTION GEAR OIL.....3- 7 |
| MAINTENANCE SCHEDULE.....3-2 | DRIVE BELT.....3- 7 |
| FUEL FILTER.....3-3 | BRAKE SHOE3- 8 |
| THROTTLE OPERATION.....3-3 | BRAKE ADJUSTING NUT.....3- 8 |
| AIR CLEANER3-4 | HEADLIGHT AIM3- 9 |
| SPARK PLUG3-4 | CLUTCH SHOE WEAR.....3- 9 |
| VALVE CLEARANCE3-5 | SUSPENSION3- 9 |
| CARBURETOR IDLE SPEED3-5 | NUTS/BOLTS/FASTENERS.....3-10 |
| IGNITION TIMING3-6 | WHEELS/TIRES.....3-10 |
| CYLINDER COMPRESSION3-6 | STEERING HANDLEBAR3-11 |

SERVICE INFORMATION

GENERAL

 **WARNING**

- Before running the engine, make sure that the working area is well-ventilated. Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas which may cause death to people.
- Gasoline is extremely flammable and is explosive under some conditions. The working area must be well-ventilated and do not smoke or allow flames or sparks near the working area or fuel storage area.

SPECIFICATIONS

ENGINE

- Throttle grip free play : 2~6mm
- Spark plug gap : 0.6~0.7mm
- Spark plug : NGK C7HSA

- Valve clearance : IN: 0.12mm
: EX: 0.12mm
- Idle speed : 1700 ±100rpm
- Engine oil capacity:
 - At disassembly : 0.9 liter
 - At change : 0.8 liter
- Gear oil capacity :
 - At disassembly : 0.2 liter
 - At change : 0.18 liter

3. INSPECTION/ADJUSTMENT

Cylinder compression : 16 kg/cm²
Ignition timing: BTDC 28°/4000rpm
CHASSIS
Front brake free play: 10~20mm
Rear brake free play : 10~20mm

TIRE PRESSURE

| | 1 Rider | 2 Riders |
|-------|-----------------------|------------------------|
| Front | 1.5kg/cm ² | 1.75kg/cm ² |
| Rear | 2.0kg/cm ² | 2.25kg/cm ² |

TIRE SIZE:

Front : 100/80-14
Rear : 120/80-14

TORQUE VALUES

Front axle nut 5.0~7.0kgf-m
Rear axle nut 11~13kgf-m

3. INSPECTION/ADJUSTMENT

MAINTENANCE SCHEDULE

Perform the periodic maintenance at each scheduled maintenance period.

I: Inspect, and Clean, Adjust, Lubricate or Replace if necessary.

A: Adjust C: Clean R: Replace T: Tighten

| Item | Frequency | Whichever comes first ⇒ ↓ | Regular Service Mileage (km) | | | | | | | | | | | |
|--------------------------|-----------|------------------------------|--|------|------|------|------|------|------|------|------|-------|-------|-------|
| | | | 1000 | 2000 | 3000 | 4000 | 5000 | 6000 | 7000 | 8000 | 9000 | 10000 | 11000 | 12000 |
| Engine oil | | | R New Motorcycle 300km | R | | R | | R | | R | | R | | R |
| Engine oil filter screen | | | | | | C | | | | C | | | | |
| Fuel filter screen | | | | | | | | | | | | R | | |
| Gear oil | Note 3 | | R New motorcycle 300km | | | | R | | | | | R | | |
| Valve clearance | | | | A | | A | | | | A | | | | A |
| Carburetor | | | | | | I | | | | I | | | | C |
| Air Cleaner | Note 2,3 | | Replace at every 2000km | | | | | | | | | | | |
| Spark plug | | | Clean at every 3000km and replace if necessary | | | | | | | | | | | |
| Brake system | | | I | I | I | I | I | I | I | I | I | I | I | I |
| Drive belt | | | | | | | | | | I | | | | |
| Suspension | | | | | | I | | | | I | | | | I |
| Nut, bolt, fastener | | | | | | | | | | I | | | | |
| Tire | | | | | | I | | | | I | | | | I |
| Steering head bearing | | | I | | | | | I | | | | | | I |

- In the interest of safety, we recommend these items should be serviced only by an authorized KYMCO motorcycle dealer.

Note: 1. For higher odometer readings, repeat at the frequency interval established here.

2. Service more frequently when riding in dusty or rainy areas.


3. Service more frequently when riding in rain or at full throttle.

3. INSPECTION/ADJUSTMENT

FUEL FILTER

Remove the met-in box. (⇒2-3)
 Check the fuel lines and replace any parts which show signs of deterioration, damage or leakage.


- Do not smoke or allow flames or sparks in your working area.

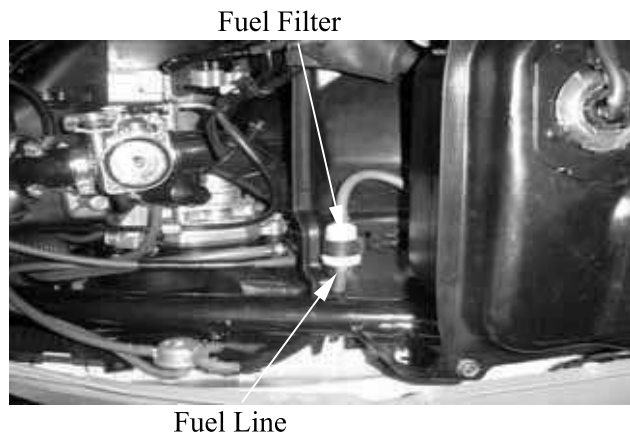


THROTTLE OPERATION

Check the throttle grip for smooth movement.
 Measure the throttle grip free play.


Free Play: 2~6mm

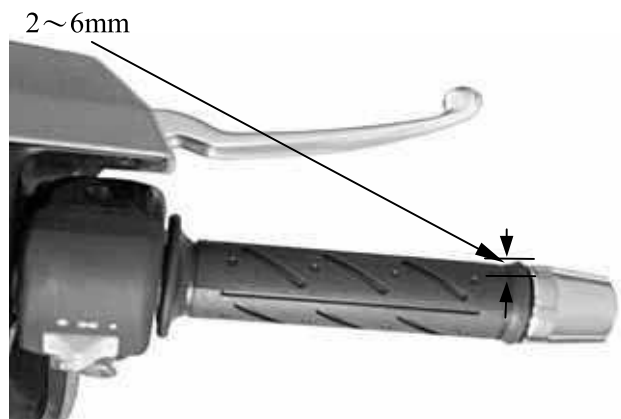

Major adjustment of the throttle grip free play is made at the carburetor side.
 Adjust by loosening the lock nut and turning the adjusting nut.

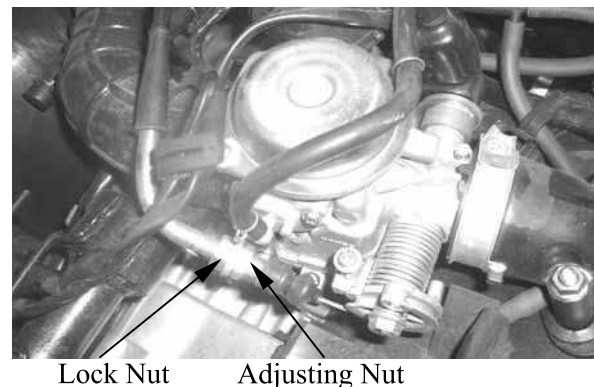

Minor adjustment is made with the adjusting nut at the throttle grip side.
 Slide the rubber cover out and adjust by loosening the lock nut and turning the adjusting nut.

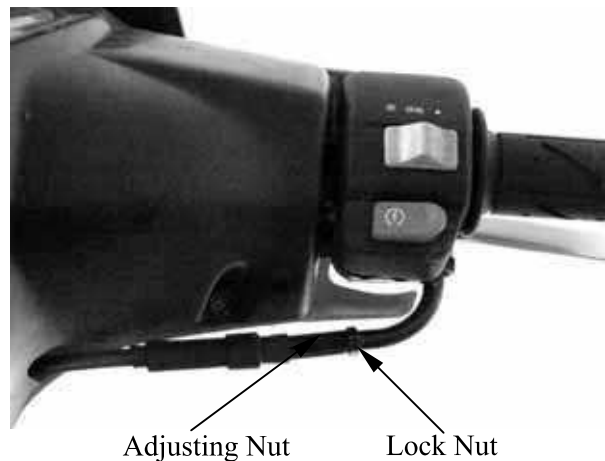

3. INSPECTION/ADJUSTMENT


AIR CLEANER

AIR CLEANER REPLACEMENT

Remove the air cleaner case cover screws and the cover by removing the six screws.


Remove the air cleaner element by removing the four screws.

Check the element and replace it if it is excessively dirty or damaged.

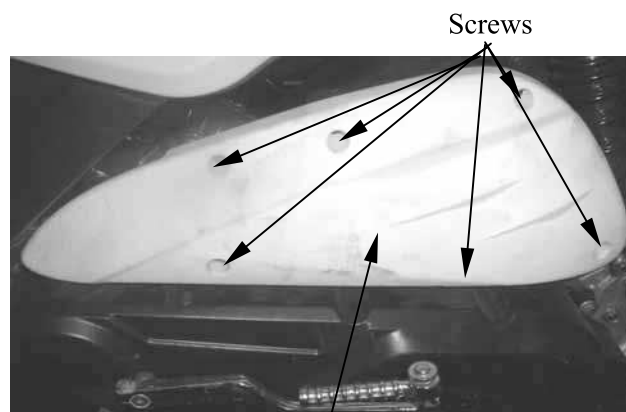

Air Cleaner Case Cover

Air Cleaner Element

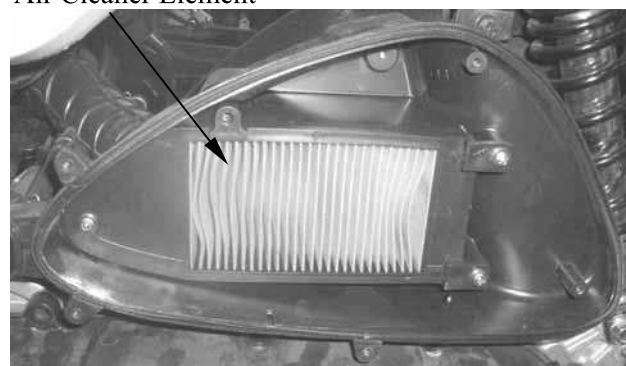

CHANGE INTERVAL

More frequent replacement is required when riding in unusually dusty or rainy areas.

- The air cleaner element has a viscous type paper element. Do not clean it with any fluid.
- Be sure to install the air cleaner element and cover securely.

SPARK PLUG

Remove the spark plug.

Check the spark plug for wear and fouling deposits.

Clean any fouling deposits with a spark plug cleaner or a wire brush.

Specified Spark Plug:

CHAMPION-P-RZ9HC


NGK CR7HSA



Measure the spark plug gap.

Spark Plug Gap: 0.6~0.7mm

- When installing, first screw in the spark plug by hand and then tighten it with a spark plug wrench.

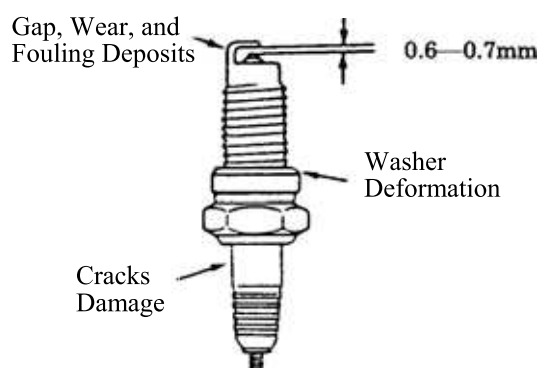

VALVE CLEARANCE

- Inspect and adjust valve clearance while the engine is cold (below 35°C).


Remove the frame cover. (⇒2-3)
 Remove the six bolts on the cylinder head cover.
 Remove the cylinder head cover. (⇒7-3)
 Remove the cylinder head cover..

Cylinder Head Cover



Bolts

Turn the flywheel counterclockwise so that the “T” mark on the flywheel aligns with the index mark on the crankcase to bring the round hole on the camshaft gear facing up to the top dead center on the compression stroke.

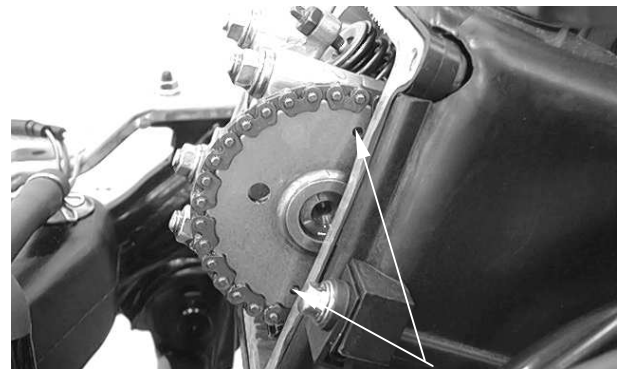

Round Hole

Inspect and adjust the valve clearance.

Valve Clearance: IN : 0.04mm
 EX: 0.04mm

Loosen the lock nut and adjust by turning the adjusting nut

Special

Tappet Adjuster

- Check the valve clearance again after the lock nut is tightened.

Tappet Adjuster



Feeler Gauge

CARBURETOR IDLE SPEED

- The engine must be warm for accurate idle speed inspection and adjustment.

Remove the inspection cover.
 Warm up the engine before this operation.
 Start the engine and connect a tachometer.
 Turn the throttle stop screw to obtain the specified idle speed.

Idle Speed: 1900±100rpm

When the engine misses or run erratic, adjust the pilot screw.



Throttle Stop Screw


3. INSPECTION/ADJUSTMENT

IGNITION TIMING

- The CDI unit is not adjustable. If the ignition timing is incorrect, check the ignition system. (⇒15-5)


Remove the right of the fan cover.

Timing Hole Cap

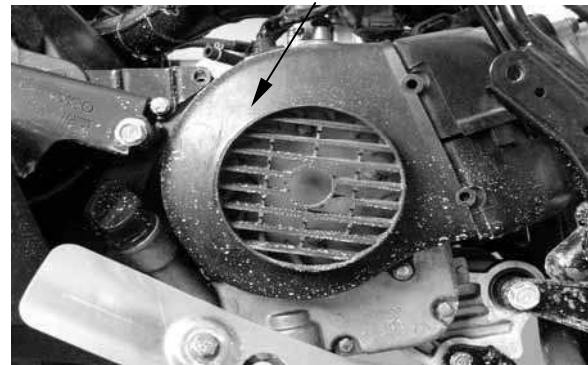

Check the ignition timing with a timing light. When the engine is running at idle speed, the ignition timing is correct if the “F” mark on the flywheel aligns with the index mark on the crankcase.

Timing Light

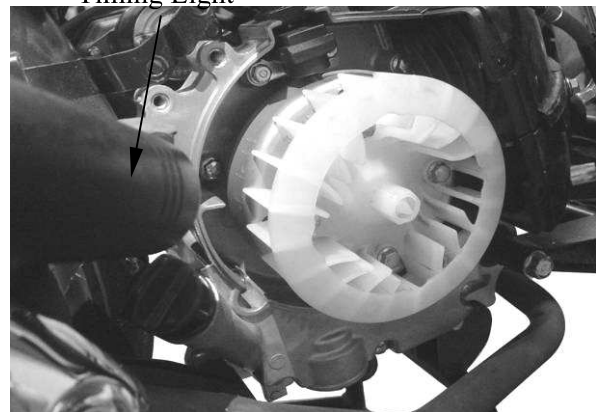

Also use a timing light to check the advance. Raise the engine speed to 4,000rpm and the index mark on the crankcase cover should be aligned with the advance mark on the flywheel.


CYLINDER COMPRESSION

Warm up the engine before compression test. Remove the met-in box and center cover. (⇒2-3)

Remove the spark plug.

Insert a compression gauge.

Open the throttle valve fully and push the starter button to test the compression.

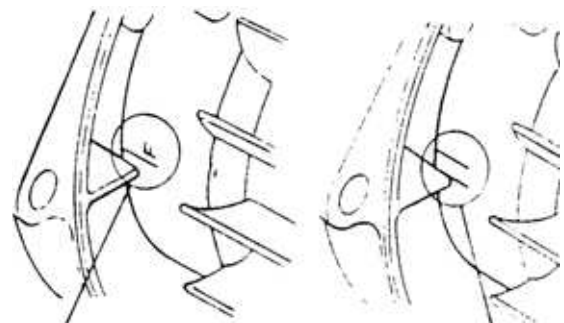

“F” Mark

Advance Mark

Compression: 16kg/cm²rpm

If the compression is low, check for the following:

- Leaky valves
- Valve clearance too small
- Leaking cylinder head gasket
- Worn piston rings
- Worn piston/cylinder

If the compression is high, it indicates that carbon deposits have accumulated on the combustion chamber and the piston head.

Compression Gauge



3. INSPECTION/ADJUSTMENT


FINAL REDUCTION GEAR OIL OIL LEVEL CHECK

- Place the motorcycle on its main stand on level ground for oil level check.

Stop the engine and remove the oil check bolt. The oil level shall be at the oil check bolt hole.

If the oil level is low, add the recommended oil to the proper level.


Recommended Oil: SAE90#

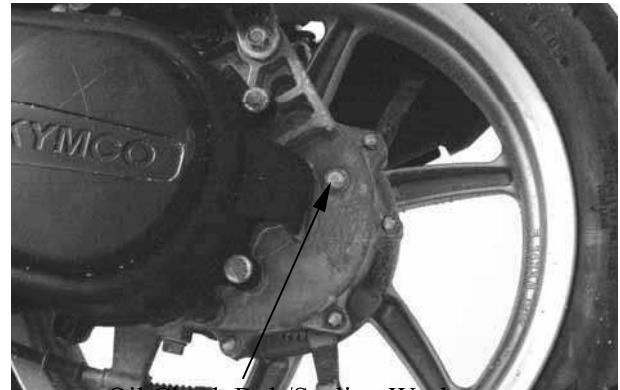

Oil Check Bolt/Sealing Washer

Install the oil check bolt.

- Make sure that the sealing washer is in good condition.

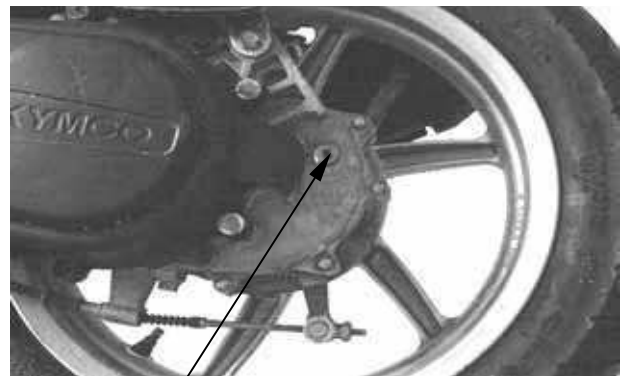

Oil Check Bolt Hole

OIL CHANGE

Remove the oil check bolt.

Remove the oil drain bolt and drain the oil thoroughly.

Install the oil drain bolt.

Torque: 0.8~1.2kgf-m


- Make sure that the sealing washer is in good condition.

Fill with the recommended oil.

Oil Capacity: At disassembly : 0.20 liter
At change : 0.18 liter

Reinstall the oil check bolt and check for oil leaks.

Torque:0.8~1.2kgf-m

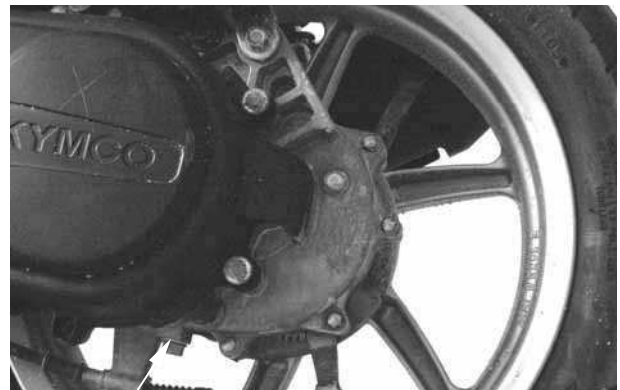

Oil Drain Bolt/ Sealing Washer

DRIVE BELT

Remove the left crankcase cover. (⇒9-2)

Inspect the drive belt for cracks or excessive wear.

Replace the drive belt with a new one if necessary and in accordance with the Maintenance Schedule.




Drive Belt

3. INSPECTION/ADJUSTMENT

BRAKE SHOE

Replace the brake shoes if the arrow on the wear indicator plate aligns with the punch mark on the brake panel when the brake is fully applied.

Refer to page 12-7 and 13-3 for brake shoe replacement.

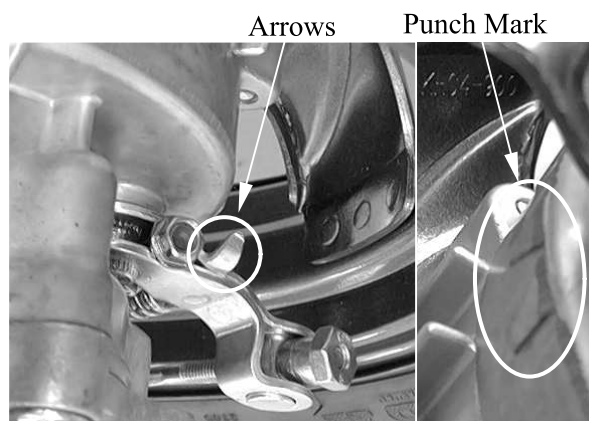

REAR BRAKE


Measure the rear brake lever free play.

Free Play: 10~20mm



BRAKE ADJUSTING NUT

If the free play do not fall within the limit, adjust by turning the adjusting nut.

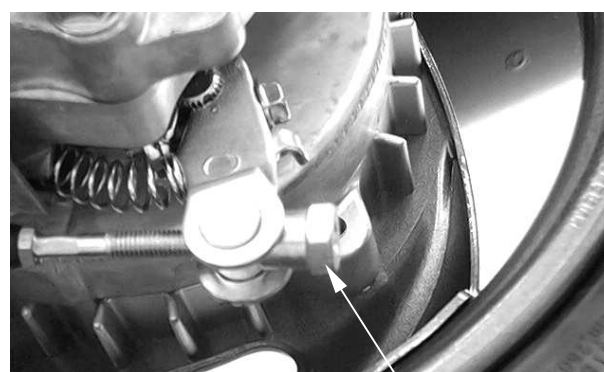


Adjusting Nut

BRAKE FLUID

Turn the steering handlebar upright and check if the rear brake fluid level should be between the upper and lower level lines.

Specified Brake Fluid: DOT-4 ◦

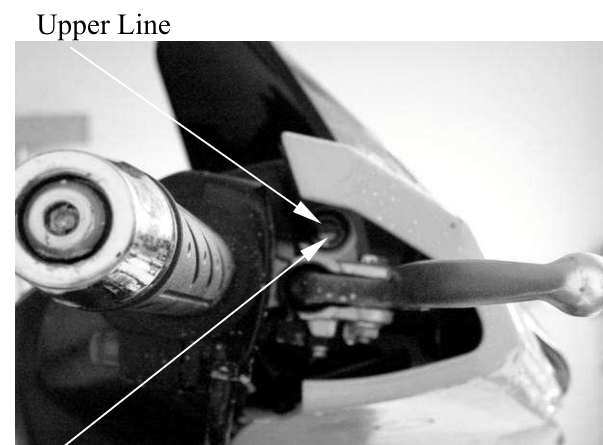


Upper Line

Lower Line

3. INSPECTION/ADJUSTMENT


If the free play do not fall within the limit, adjust by turning the adjusting nut.

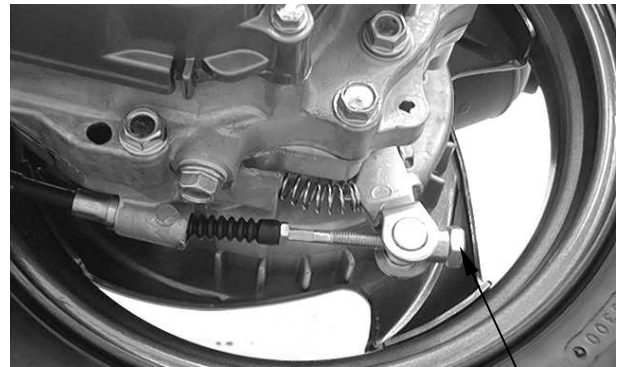

Adjusting Nut

HEADLIGHT AIM

Turn the ignition switch ON and start the engine.
Turn on the headlight switch.
Adjust the headlight aim by turning the headlight aim adjusting screw.

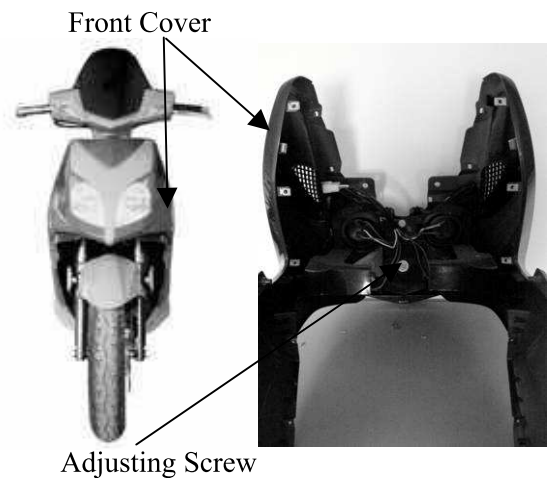

CLUTCH SHOE WEAR

Start the engine and check the clutch operation by increasing the engine speed gradually.
If the motorcycle tends to creep, or the engine stalls, check the clutch shoes for wear and replace if necessary. (⇒9-11)



clutch

SUSPENSION

FRONT

Fully apply the front brake lever and check the action of the front shock absorbers by compressing them several times.
Check the entire shock absorber assembly for oil leaks, looseness or damage.



3. INSPECTION/ADJUSTMENT

REAR

Check the action of the rear shock absorber by compressing it several times.
 Check the entire shock absorber assembly for oil leaks, looseness or damage.
 Jack the rear wheel off the ground and move the rear wheel sideways with force to see if the engine hanger bushings are worn.



NUTS/BOLTS/FASTENERS

Check all important chassis nuts and bolts for looseness.
 Tighten them to their specified torque values if any looseness is found. (⇒1-11)

WHEELS/TIRES

Check the tires for cuts, imbedded nails or other damages.

Check the tire pressure.

- | |
|--|
| Tire pressure should be checked when tires are cold. |
|--|



TIRE PRESSURE

| | 1 Rider | 2 Riders |
|-------|------------------------|------------------------|
| Front | 1.5kg/cm ² | 1.75kg/cm ² |
| Rear | 2.00kg/cm ² | 2.25kg/cm ² |

TIRE SIZE

Front : 120/70-12
Rear : 130/70-12

Check the front axle nut for looseness.
 Check the rear axle nut for looseness.
 If the axle nuts are loose, tighten them to the specified torques.

Torques: Front : 5.0~7.0kgf-m
Rear : 11~13kgf-m



Front Axle Nut


3. INSPECTION/ADJUSTMENT

STEERING HANDLEBAR

Check that the control cables do not interfere with handlebar rotation.

Raise the front wheel off the ground and check that the steering handlebar rotates freely.

If the handlebar moves unevenly, binds, or has vertical movement, adjust the steering head bearing.

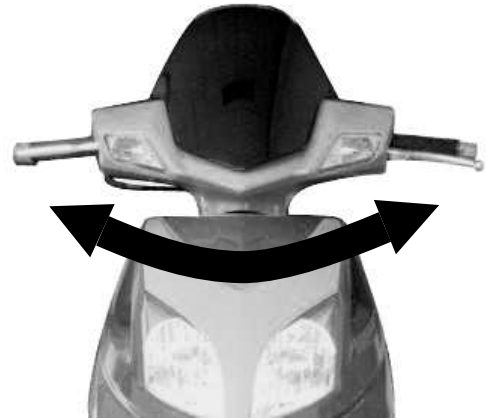

4. LUBRICATION SYSTEM

LUBRICATION SYSTEM

| | |
|-----------------------------|------|
| SERVICE INFORMATION----- | 4- 1 |
| TROUBLESHOOTING----- | 4- 1 |
| ENGINE OIL/OIL FILTER ----- | 4- 2 |
| OIL PUMP----- | 4- 2 |

4. LUBRICATION SYSTEM

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- The maintenance of lubrication system can be performed with the engine installed in the frame.
- Use care when removing and installing the oil pump not to allow dust and foreign matters to enter the engine and oil line.
- Do not attempt to disassemble the oil pump. The oil pump must be replaced as a set when it reaches its service limit.
- After the oil pump is installed, check each part for oil leaks.

SPECIFICATIONS

| Item | | Standard (mm) | Service Limit (mm) |
|----------|--------------------------------------|---------------|--------------------|
| Oil pump | Inner rotor-to-outer rotor clearance | — | 0.12 |
| | Outer rotor-to-pump body clearance | — | 0.12 |
| | Rotor end-to-pump body clearance | 0.05~0.10 | 0.2 |

TROUBLESHOOTING

Oil level too low

- Natural oil consumption
- Oil leaks
- Worn or poorly installed piston rings
- Worn valve guide or seal

Poor lubrication pressure

- Oil level too low
- Clogged oil filter or oil passages
- Not use the specified oil


4. LUBRICATION SYSTEM

ENGINE OIL/OIL FILTER

OIL LEVEL

- * Place the motorcycle upright on level ground for engine oil level check.
- * Run the engine for 2~3 minutes and check the oil level after the engine is stopped for 2~3 minutes.


Remove the oil dipstick and check the oil level with the oil dipstick.
If the level is near the lower level, fill to the upper level with the specified engine oil.

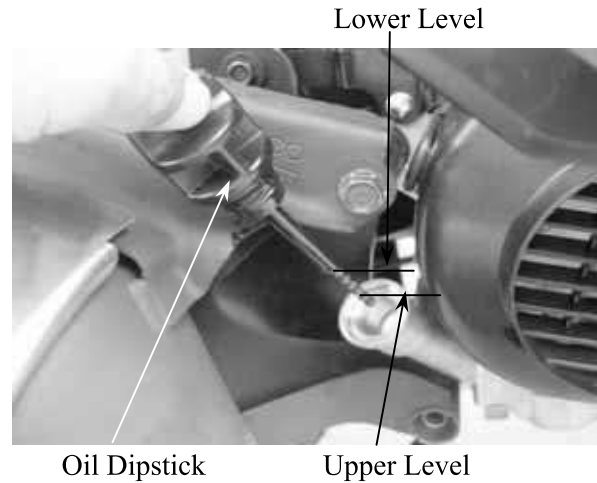

OIL CHANGE

- * The engine oil will drain more easily while the engine is warm.

Remove the oil filter screen cap located on the bottom of the engine to drain the engine oil thoroughly.

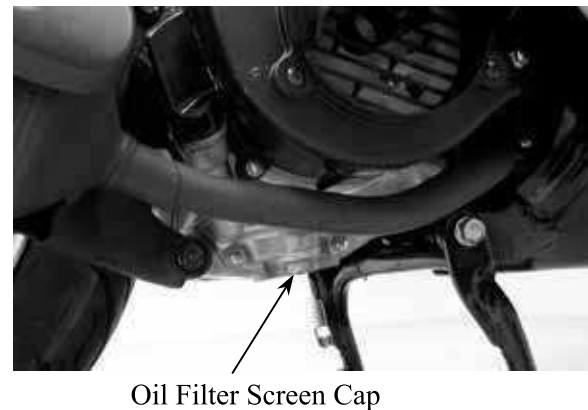


After the oil has been completely drained, check the filter screen O-ring for damage and replace if necessary.
Install the oil filter screen, spring and filter screen cap.

Torque: 1.5kg-m

Fill with the specified SAE15W40#, API: SG engine oil to the proper level.

Oil Capacity: At disassembly : 0.90 liter
At change : 0.80 liter


Check for oil leaks and then start the engine and let it idle for few minutes.
Recheck the oil level.

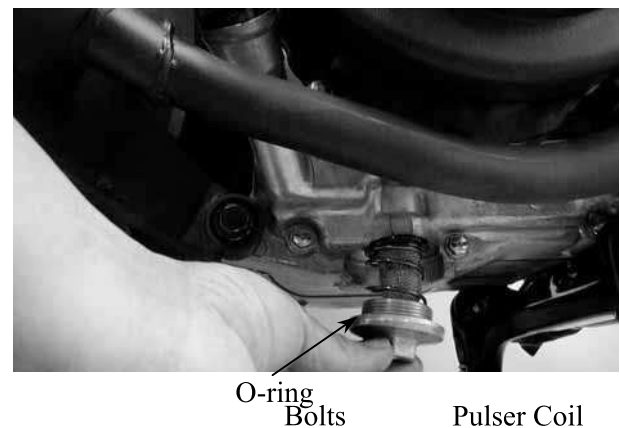

OIL PUMP

REMOVAL

Remove the A.C. generator flywheel.
Remove the nine right crankcase cover bolts and the right crankcase cover.

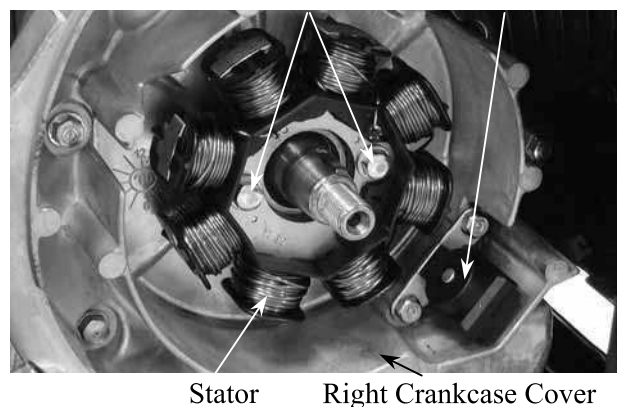


4. LUBRICATION SYSTEM

Remove the gasket and dowel pins.
Remove the starter idle gear and starter clutch.



Gasket


Remove the two bolts and oil separator cover.

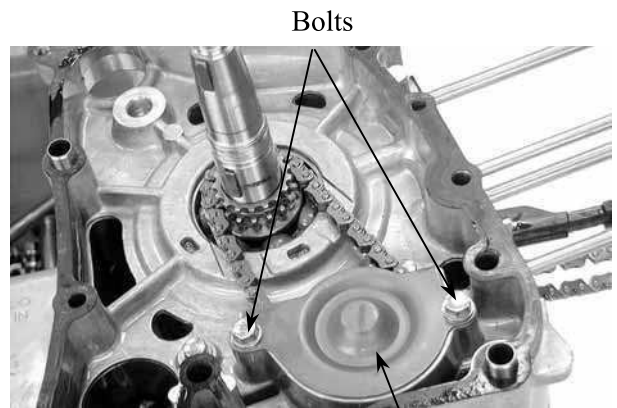

Bolts

Oil Separator Cover


Remove the oil pump driven gear nut to remove the oil pump driven gear and drive chain.

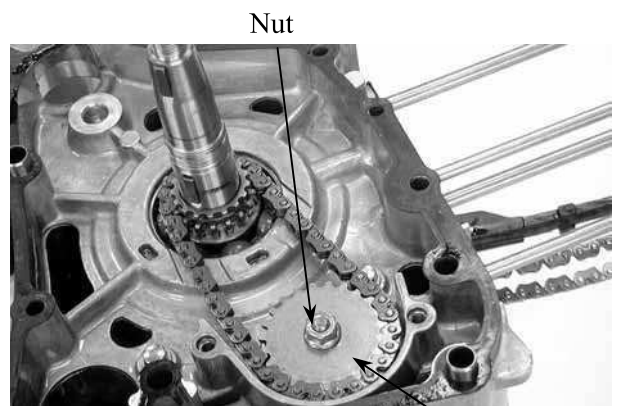

Nut

Oil Pump Driven Gear

Remove the two oil pump mounting bolts and the oil pump.

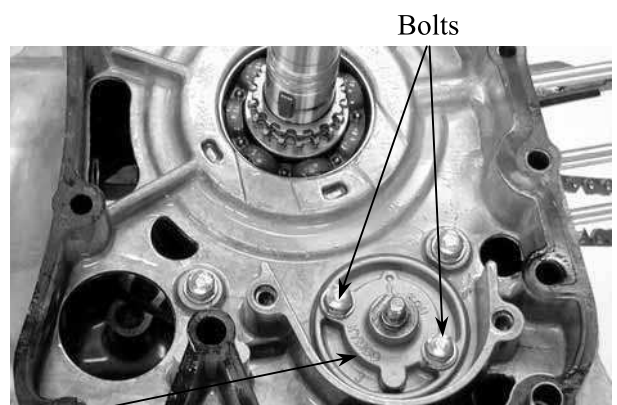

Bolts


Oil Pump

4. LUBRICATION SYSTEM

DISASSEMBLY

Remove the screw and disassemble the oil pump.

Screw

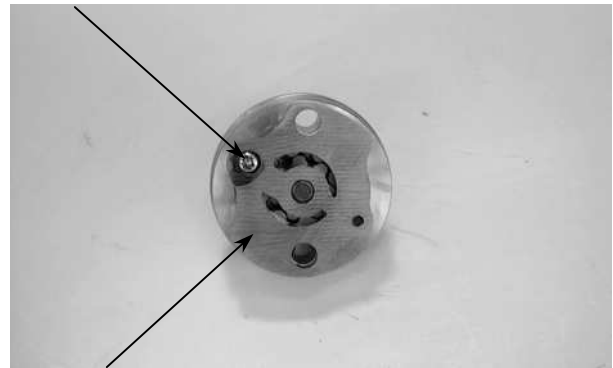


Pump Body

INSPECTION

Measure the pump body-to-outer rotor clearance.

Service Limit: 0.12mm

Outer Rotor

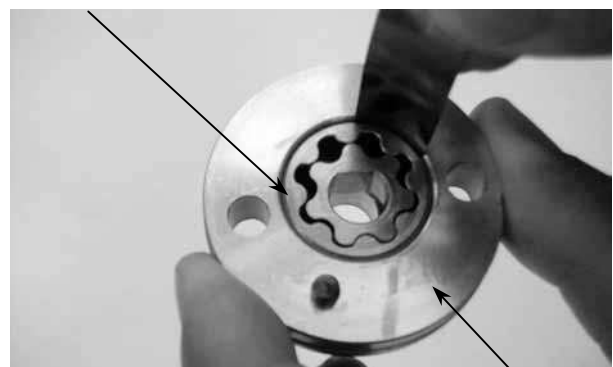


Pump Body

Measure the inner rotor-to-outer rotor clearance.

Service Limit: 0.12mm


Outer Rotor

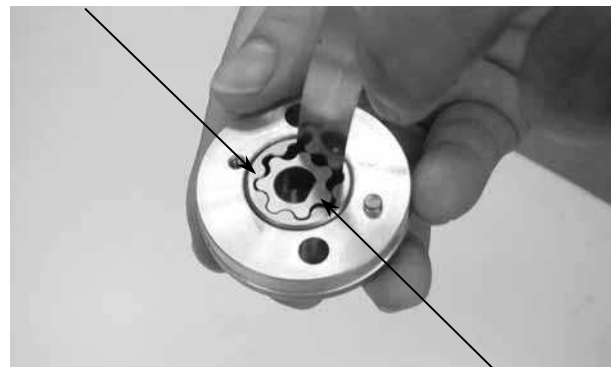

Inner Rotor

Measure the rotor end-to-pump body clearance.

Service Limit: 0.2mm

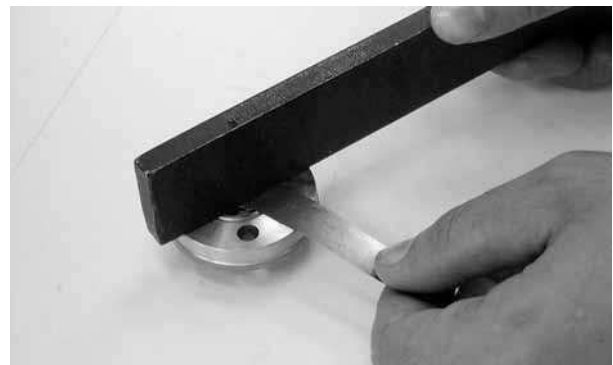

4. LUBRICATION SYSTEM



ASSEMBLY

Install the outer rotor, inner rotor and pump shaft into the pump body.

- * Insert the pump shaft by aligning the flat on the shaft with the flat in the inner rotor.

Install the dowel pin.
Install the pump cover by aligning the hole in the cover with the dowel pin.

Tighten the screw to secure the pump cover.
Make sure that the pump shaft rotates freely without binding.

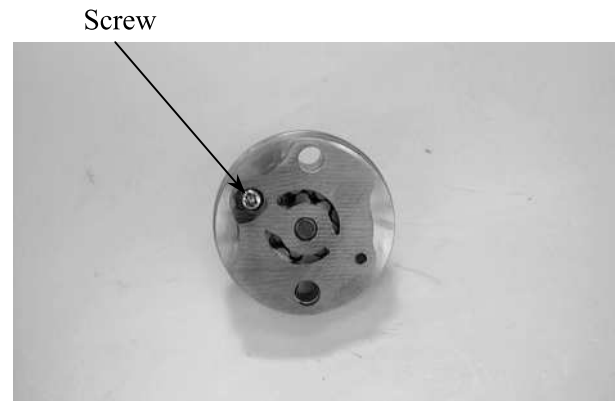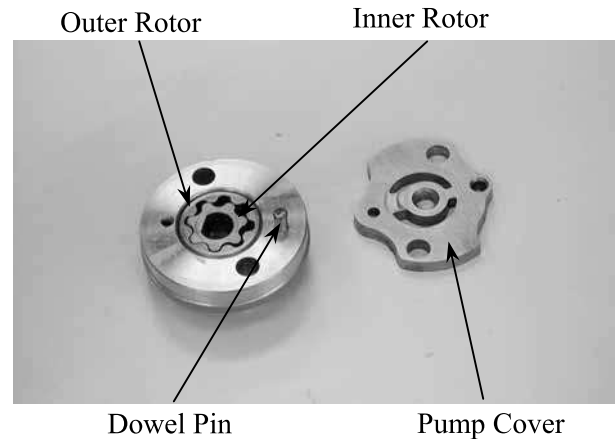


INSTALLATION

Install the oil pump into the crankcase.


- * Install the oil pump with the arrow on the pump body facing up and fill the oil pump with engine oil before installation.

After the oil pump is installed, tighten the two mounting bolts.

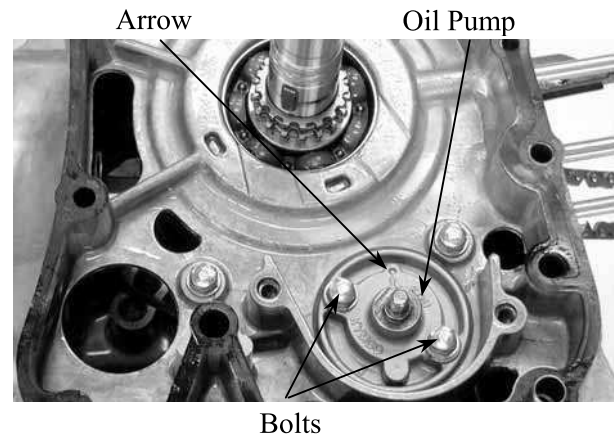


Install the pump driven gear and drive chain by aligning the pump driven gear with the cutout in the pump shaft.
Install and tighten the pump driven gear nut.

Torque: 1.0kg-m

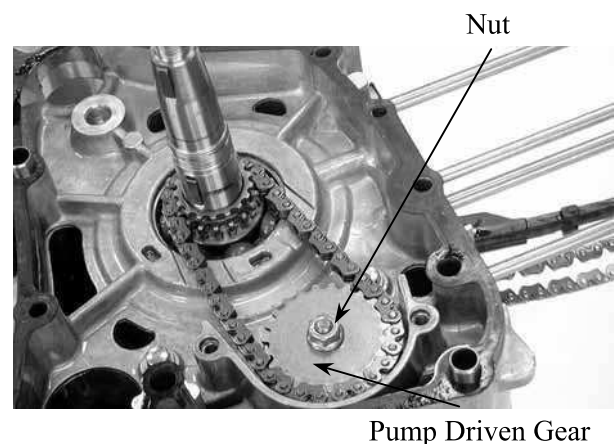


4. LUBRICATION SYSTEM

Install the oil separator cover and tighten the bolts.

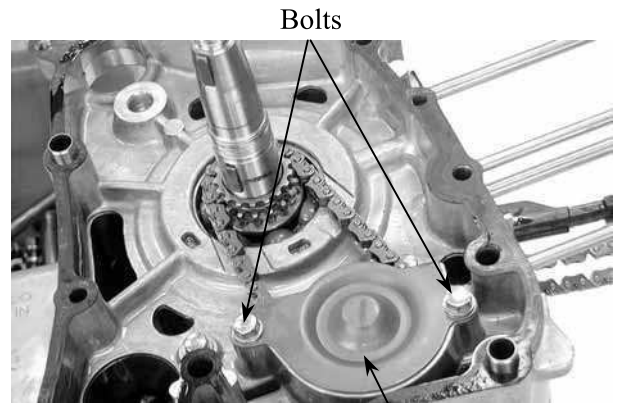

Oil Separator Cover

Install the starter idle gear and starter clutch.
Install the gasket and dowel pins.

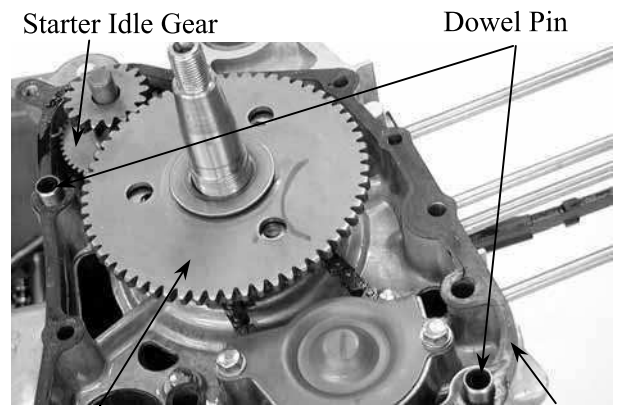


Starter Clutch

Gasket

Install the right crankcase cover and tighten the nine bolts.

Torque: 0.9kg-m

* Diagonally tighten the bolts in 2~3 times.

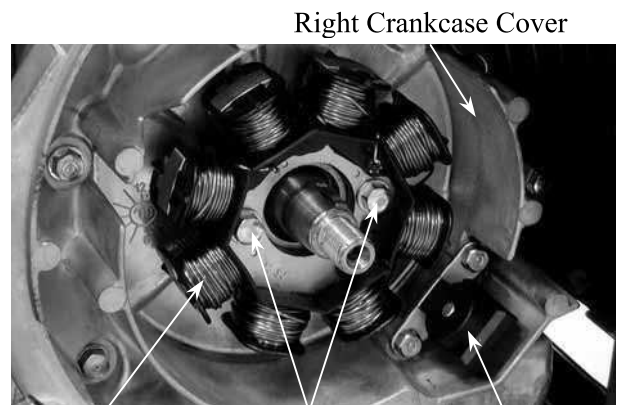


Stator

Bolts

Pulser Coil



5. FUEL SYSTEM

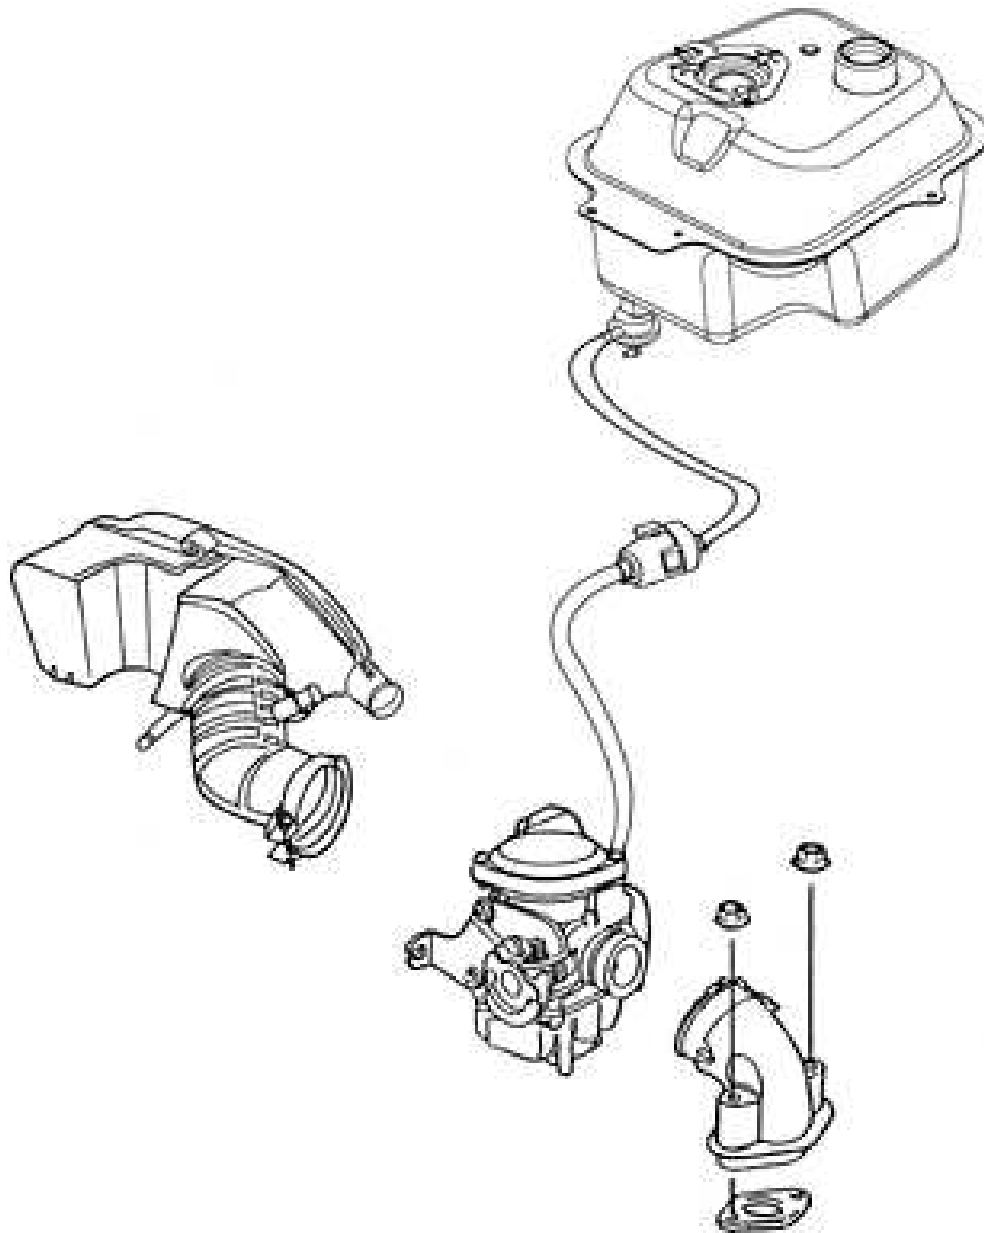

5

5. FUEL SYSTEM

SUPER8 125

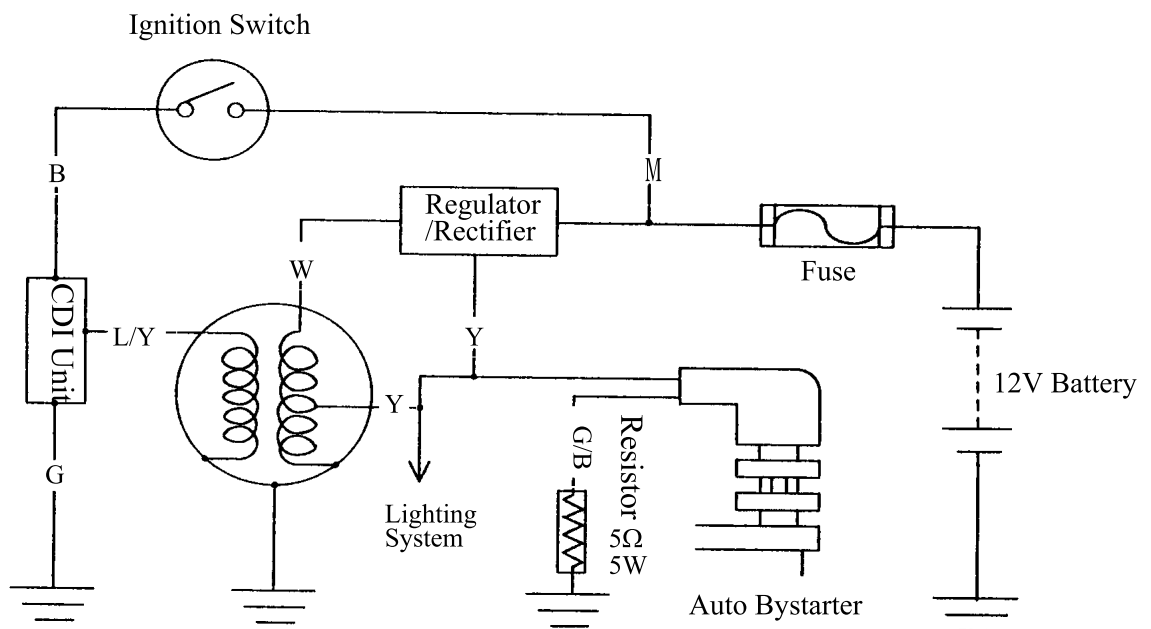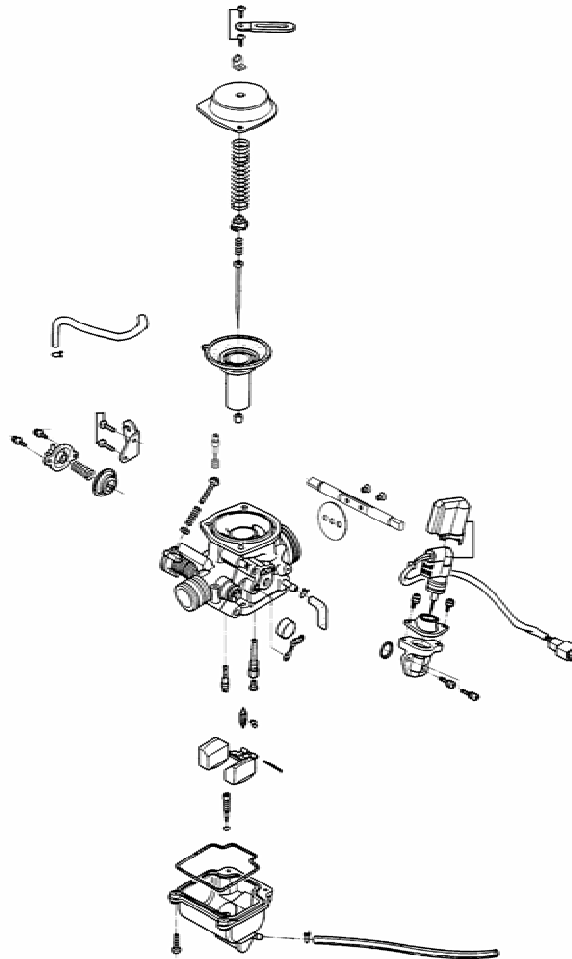

| | | | |
|--------------------------|-----|------------------------------|------|
| SERVICE INFORMATION..... | 5-2 | CARBURETOR INSTALLATION..... | 5-10 |
| TROUBLESHOOTING..... | 5-3 | PILOT SCREW ADJUSTMENT | 5-11 |
| CARBURETOR REMOVAL..... | 5-4 | FUEL TANK..... | 5-12 |
| AUTO BYSTARTER..... | 5-4 | FUEL UNIT..... | 5-13 |
| AIR CUT-OFF VALVE | 5-6 | AIR CLEANER | 5-13 |
| VACUUM CHAMBER..... | 5-6 | | |
| FLOAT CHAMBER..... | 5-8 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS



Gasoline is very dangerous. When working with gasoline, keep sparks and flames away from the working area.
Gasoline is extremely flammable and is explosive under certain conditions. Be sure to work in a well-ventilated area.

- When disassembling the carburetor, be sure to service the vacuum piston and float chamber.
- Do not bend or twist control cables. Damaged control cables will not operate smoothly.
- When disassembling fuel system parts, note the locations of O-rings. Replace them with new ones during assembly.
- Before float chamber disassembly, loosen the drain screw to drain the residual gasoline into a clean container.
- After the carburetor is removed, plug the intake manifold side with a clean shop towel to prevent foreign matters from entering.
- Remove the vacuum diaphragm before cleaning the carburetor air and fuel passages with compressed air to avoid damaging the vacuum diaphragm.
- When the motorcycle is not used for over one month, drain the residual gasoline from the float chamber to avoid erratic idling and clogged slow jet due to deteriorated fuel.

SPECIFICATIONS

| Item | Standard |
|-------------------------|--------------|
| Venturi dia. (mm) | φ26 |
| Type | VE |
| Float level (mm) | 17 |
| Main jet | #104 |
| Slow jet | #35 |
| Idle speed | 1700rpm• 100 |
| Throttle grip free play | 2~6mm |
| Pilot screw opening | 3±1/2 |

5. FUEL SYSTEM

TROUBLESHOOTING

Engine is hard to start

- No spark at plug (⇒Section 15)
- Compression too low
- No fuel to carburetor
 - Clogged fuel filter
 - Restricted fuel line
 - Faulty float valve
 - Incorrectly adjusted float level
- Engine flooded with fuel
 - Clogged air cleaner
 - Fuel overflowing
- Intake air leak
- Contaminated fuel
- Faulty auto bystarter
- Clogged idle system or auto bystarter passages

Rich mixture

- Faulty auto bystarter
- Faulty float valve
- Float level too high
- Clogged air jets
- Dirty air cleaner
- Flooded carburetor

Backfiring at deceleration

- Lean mixture in idle system
- Improper air cut-off valve operation

Misfiring during acceleration

- Faulty ignition system
- Lean mixture
- Faulty accelerating pump

Engine idles roughly, stalls or runs poorly

- Clogged fuel system
- Ignition malfunction
- Rich or lean mixture
- Contaminated fuel
- Intake air leak
- Incorrect idle speed
- Incorrectly adjusted pilot screw
- Clogged idle system or auto bystarter passages
- Incorrectly adjusted float level

Lean mixture


- Clogged fuel jets
- Faulty float valve
- Float level too low
- Clogged fuel system
- Intake air leak
- Improper vacuum piston operation
- Improper throttle operation

5. FUEL SYSTEM

CARBURETOR REMOVAL


Remove the frame right side cover. (⇒2-4)
 Disconnect the auto bystarter wire connector.
 Remove the met-in box. (⇒2-3)

Auto Bystarter

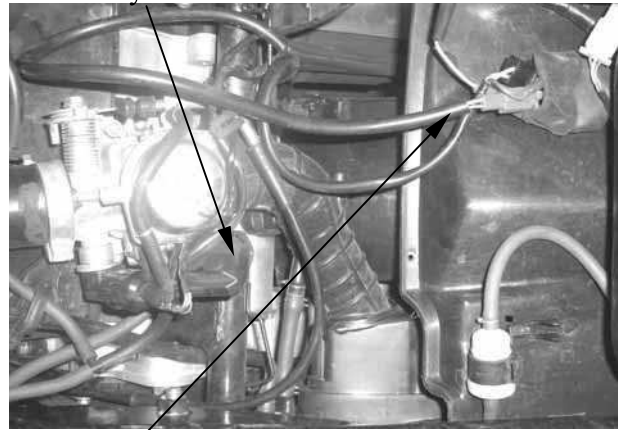

Auto Bystarter Wire


Loosen the drain screw and drain the fuel from the float chamber.
 Disconnect the fuel tube and vacuum tube at the carburetor.
 Disconnect the TPS coupler and remove the TPS unit

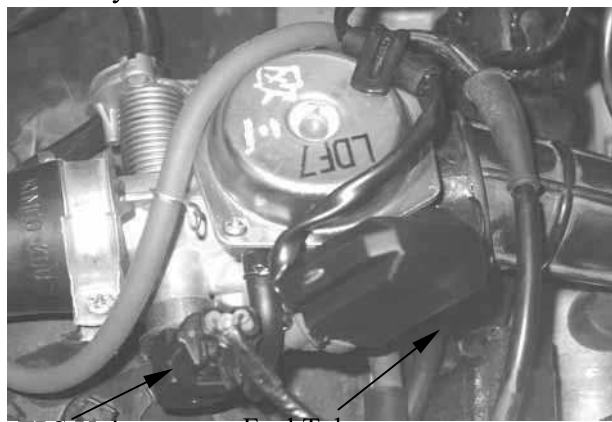

TPS Unit

Fuel Tube

Loosen the throttle cable adjusting nut and lock nut, and disconnect the throttle cable from the carburetor.
 Loosen the carburetor intake manifold band and air cleaner connecting tube band screws and then remove the carburetor.

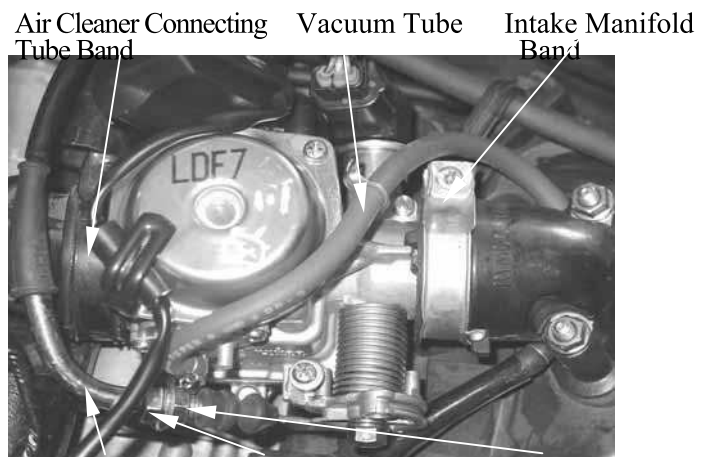

Throttle Cable

Adjusting Nut

Lock Nut

AUTO BYSTARTER

OPERATION INSPECTION

Measure the resistance between the auto bystarter wire terminals.

Resistance: 10Ω max. (10 minutes minimum after stopping the engine)

If the reading is not within the limit, replace the auto bystarter with a new one.





5. FUEL SYSTEM

SUPER8 125

Connect a hose to the fuel enriching circuit of the carburetor. Connect the auto bystarter yellow wire to the positive (+) terminal of a battery and green wire to the negative (-) terminal. Wait 5 minutes and blow the hose with mouth or vacuum pump. If the passage is blocked, the auto bystarter is normal.

Disconnect the auto bystarter from the battery. Wait 30 minutes and blow the hose with mouth or vacuum pump. If air can be blown into the hose, the auto bystarter is normal.

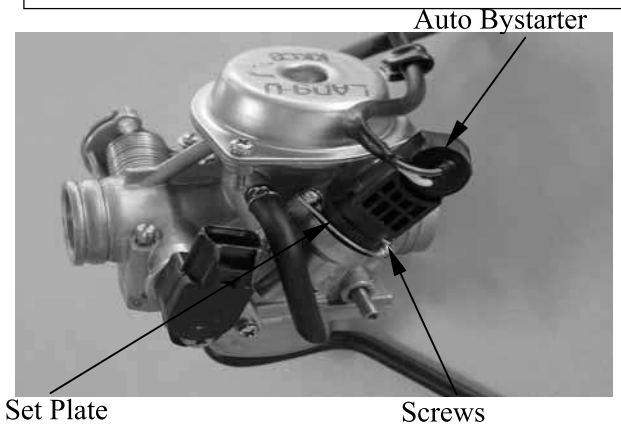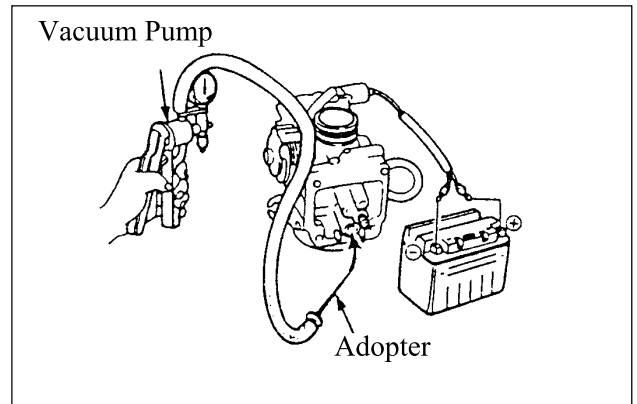

Set Plate


Screws

REMOVAL

Remove the set plate screws and set plate. Remove the auto bystarter from the carburetor.

AUTO BYSTARTER INSPECTION

Check the auto bystarter valve and needle for nicks, wear or damage. If any faulty part is found, replace the auto bystarter as a set.

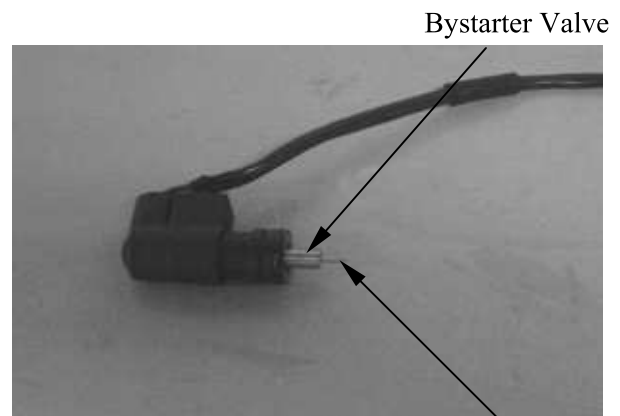


Bystarter Valve

Bystarter Needle

INSTALLATION

Insert the auto bystarter into the carburetor body until it bottoms. Position the set plate into the groove in the auto bystarter and tighten the screws.

- Be sure to install the auto bystarter and set plate properly.
- Install the set plate with its bottom face facing down.

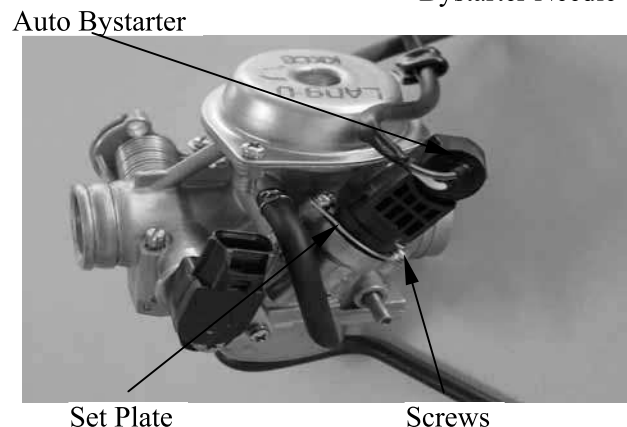


Set Plate

Screws

AIR CUT-OFF VALVE

DISASSEMBLY

Remove the two screws attaching the air cut-off valve.
 Remove the spring and vacuum diaphragm.
 Check the vacuum diaphragm for cracks or damage and check each passage for clogging.

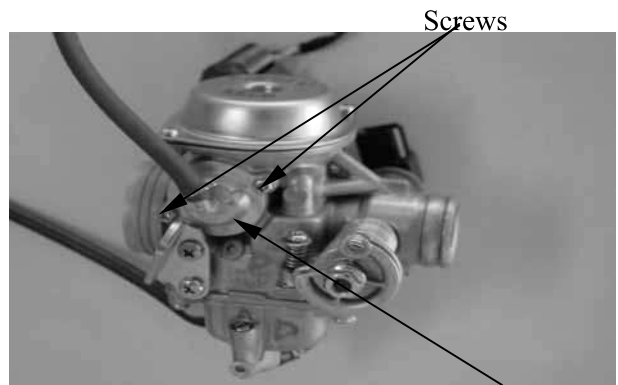


Screws
Air Cut-off Valve Cover

ASSEMBLY

Install the vacuum diaphragm onto the carburetor.
 Install the spring and air cut-off valve cover.
 Install the throttle cable set plate and tighten the two screws.

- - Be sure to set the vacuum diaphragm lip into the groove on the carburetor.
 - When installing the air cut-off valve cover, make sure that the vacuum diaphragm is properly installed.

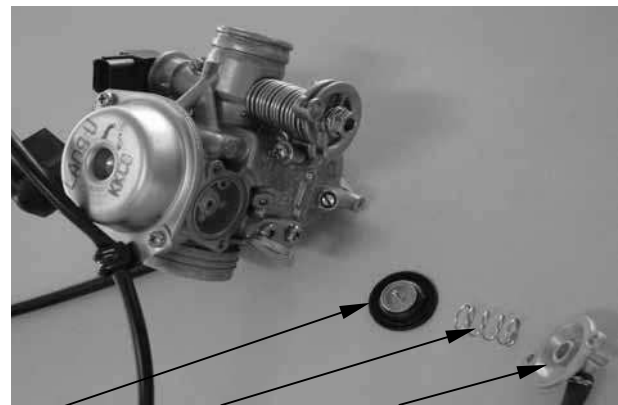

Diaphragm Spring Cover

VACUUM CHAMBER


DISASSEMBLY

Remove the two vacuum chamber cover screws and the cover.



Screws
Vacuum Chamber Cover

Remove the spring and vacuum diaphragm/piston.

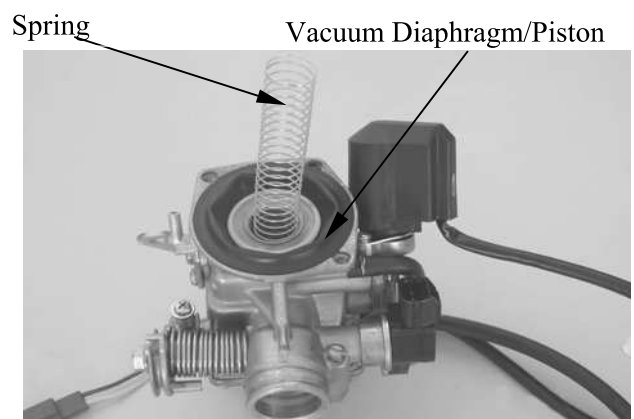

Spring Vacuum Diaphragm/Piston

5. FUEL SYSTEM


Remove the needle holder and jet needle.

- Be careful not to damage the vacuum diaphragm.



INSPECTION

Inspect the needle for stepped wear.
 Inspect the vacuum piston for wear or damage.
 Inspect the diaphragm for deterioration and tears.

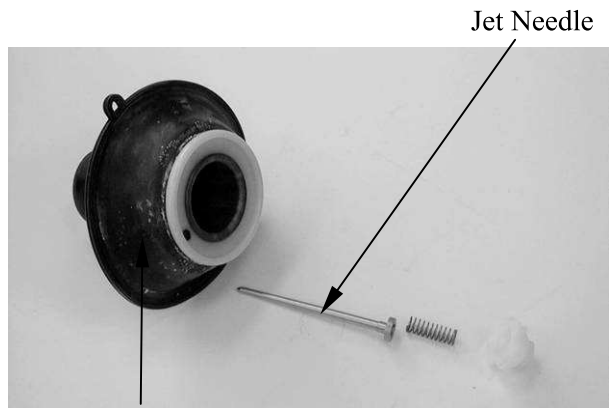


Jet Needle

Vacuum Diaphragm

ASSEMBLY

Install the vacuum piston/diaphragm in the carburetor body.
 Install the spring and then install the vacuum chamber cover.
 Tighten the two screws.

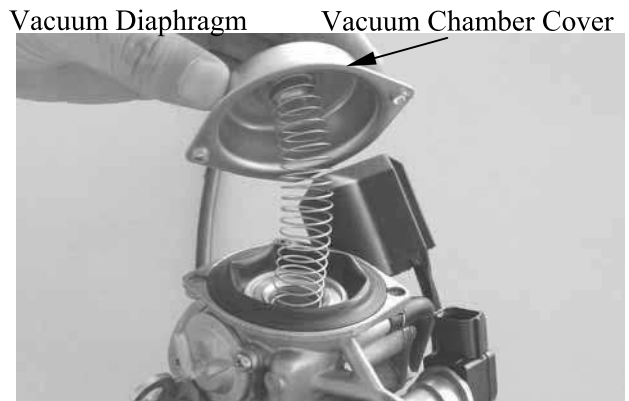


Vacuum Diaphragm

Vacuum Chamber Cover


TPS Reatainer

FLOAT CHAMBER DISASSEMBLY

Remove the three float chamber screws and the float chamber.

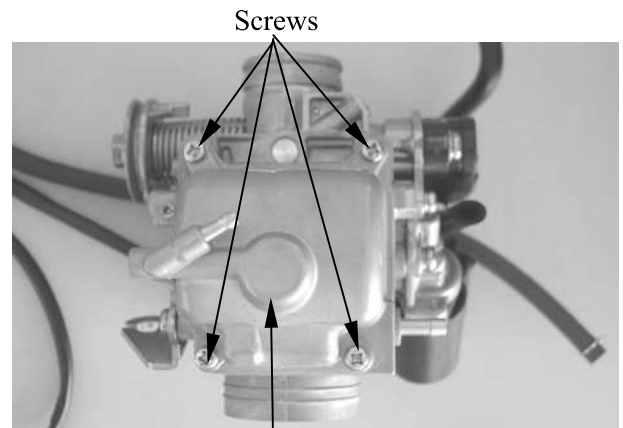


Loosen the float pin screw.
Remove the float pin, float and float valve.

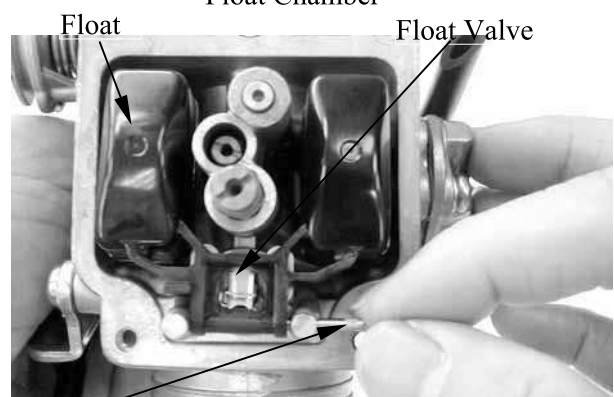


Remove the main jet, needle jet holder, needle jet, slow jet and pilot screw.

- - Be careful not to damage the fuel jets and pilot screw.
 - Before removing, turn the pilot screw in and carefully count the number of turns until it seats lightly and then make a note of this.
 - Do not force the pilot screw against its seat to avoid seat damage.

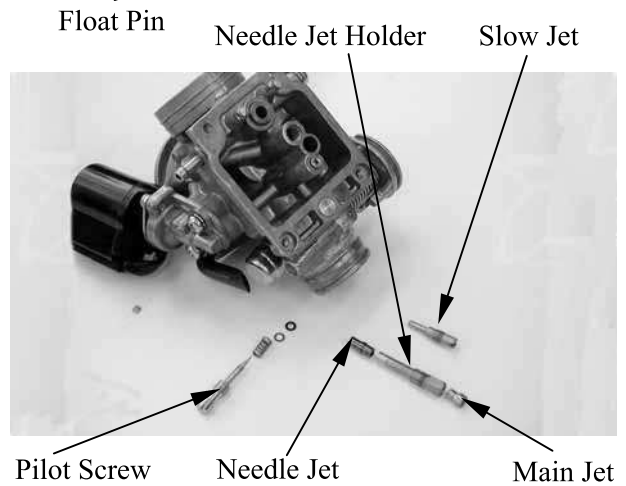

Clean the removed fuel jets with detergent oil and blow them open with compressed air.
Blow compressed air through all passages of the carburetor body.

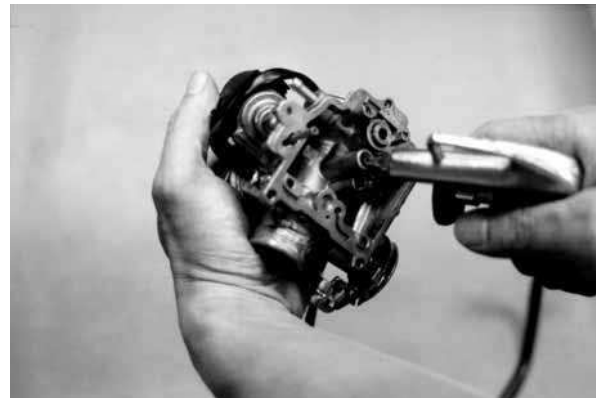

5. FUEL SYSTEM

INSPECTION

Inspect the float valve and valve seat for damage or clogging.

Inspect the float valve and valve seat contact area for stepped wear or contamination.

- Worn or contaminated float valve and valve seat must be replaced because it will result in float level too high due to incomplete airtightness.

ASSEMBLY

Install the slow jet, needle jet, needle jet holder, main jet and pilot screw.

- Return the pilot screw to the original position as noted during removal.

Standard Opening: $3 \pm 1/2$ turns

Install the float valve, float and float pin.





FLOAT LEVEL INSPECTION

- Check the operation of the float valve and float before this inspection.
- Measure the float level by placing the float level gauge on the float chamber face parallel with the main jet.

Measure the float level.

Float Level: 17.0mm

This installation sequence is the reverse of removal.

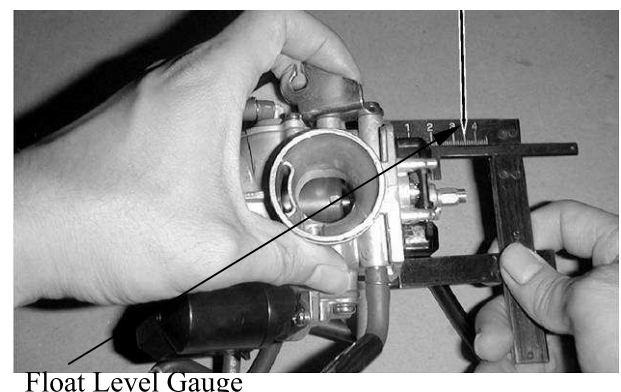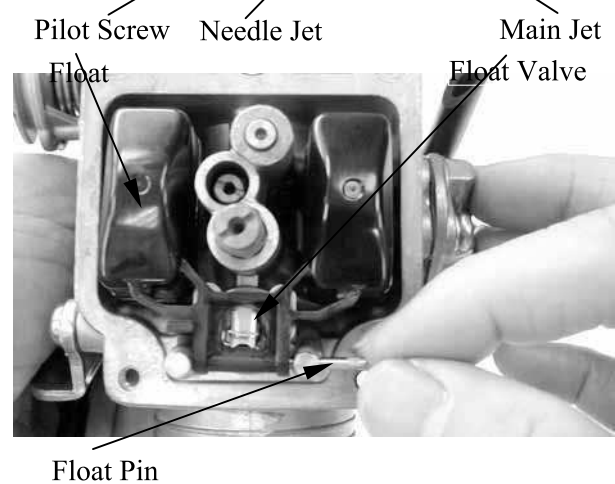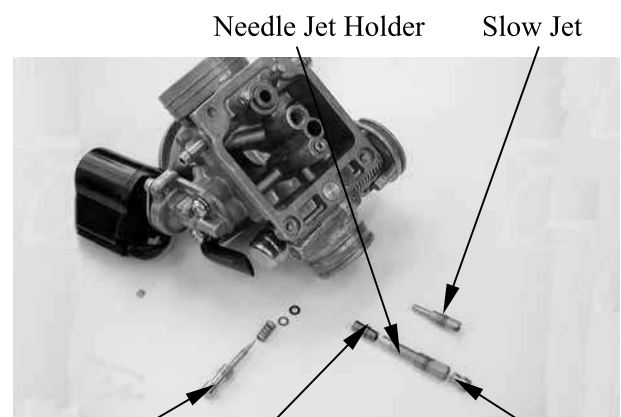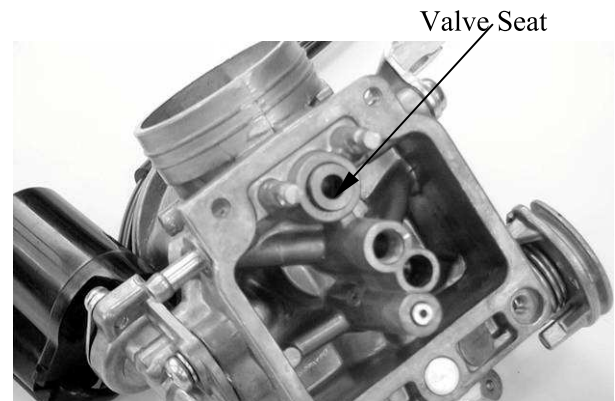

CARBURETOR INSTALLATION


Tighten the drain screw.
 Install the carburetor onto the intake manifold, aligning the tab on the carburetor with the cutout in the intake manifold.
 Tighten the intake manifold band screw.
 Install the air cleaner connecting tube and tighten the band screw.
 Connect the throttle cable to the throttle wheel on the carburetor.
 Tighten the lock nut.

Air Cleaner Connecting Tube Band Vacuum Tube Intake Manifold Band



Throttle Cable Adjusting Nut Lock Nut

Connect the fuel tube and vacuum tube to the carburetor.

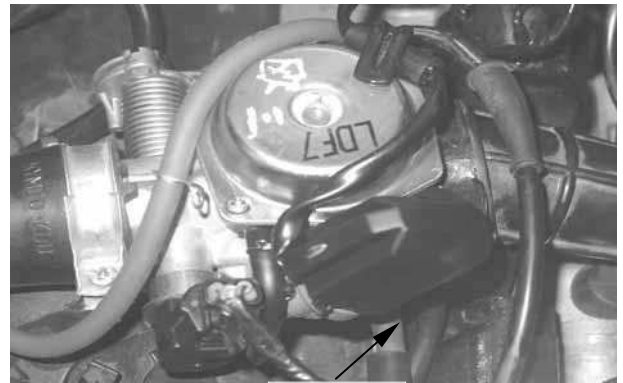


Fuel Tube

Connect the auto bystarter wire connector.
 Perform the following inspections and adjustments:

- Throttle grip free play (⇒3-3)
- Carburetor idle speed (⇒3-5)

Connect the auto TPS unit wire connector.

TPS Nut

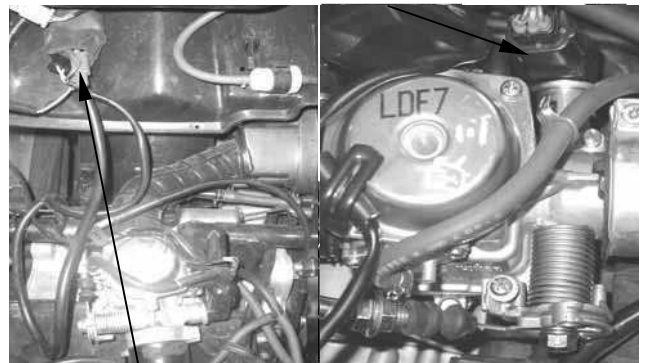

Auto Bystarter Wire Connector

PILOT SCREW ADJUSTMENT

* ADJUSTMENT

- The pilot screw is factory pre-set and no adjustment is necessary. During carburetor disassembly, note the number of turns of the pilot screw and use as a reference when reinstalling it.
- Place the motorcycle on its main stand on level ground for this operation.

A tachometer must be used when adjusting the engine speed. Turn the pilot screw clockwise until it seats lightly and back it out to the specification given.

Standard Opening: $3\pm\frac{1}{2}$ turns

- The carburetor must be adjusted when the engine is warm and the auto bystarter is closed.
- Do not force the pilot screw against its seat to prevent damage.

Warm up the engine and adjust the throttle stop screw to obtain the specified idle speed.

Idle Speed: 1700 ± 100 rpm

Turn the pilot screw in or out slowly to obtain the highest engine speed. Slightly accelerate several times to make sure that the idle speed is within the specified range. If the engine misses or runs erratic, repeat the above steps.



Pilot Screw


Throttle Stop Screw



5. FUEL SYSTEM

FUEL TANK REMOVE

Remove the net-in box. (⇒2-3)
 Remove the frame center cover.
 Remove the frame body cover. (⇒2-3)
 Remove the four bolts on the fuel tank, take the upper seat lock off.
 Disconnect the fuel unit wire connector.
 Remove the fuel tank.
 The installation sequence is the reverse of removal.

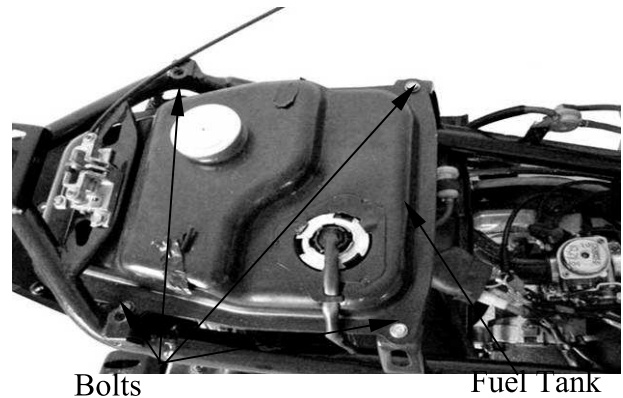

FUEL STRAINER REMOVAL

Remove the fuel strainer from the fuel tank.

INSPECTION


Inspect if the fuel strainer is clogged and clean it with compressed air.

- • When removing the fuel strainer, do not allow flames or sparks near the working area and drain the residual gasoline into a container.



INSTALLATION

Install the fuel strainer with its arrow mark toward the fuel pump.

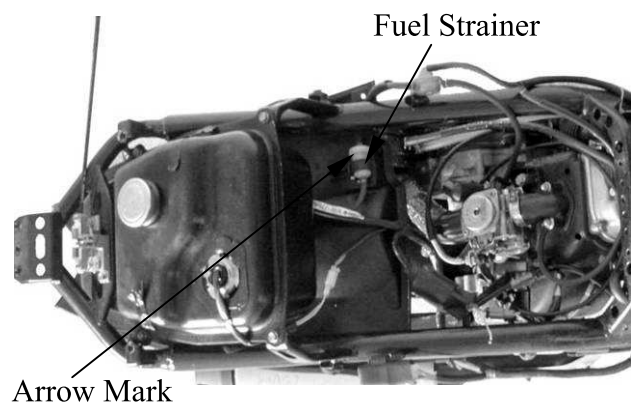


5. FUEL SYSTEM

FUEL UNIT

REMOVAL

Remove the related parts.
 Disconnect the fuel unit wire connector.
 Turn the fixed plate on the fuel unit, take the fuel unit off.


- Do not bend the float arm on the fuel unit, otherwise the figure on the fuel meter will not correct.

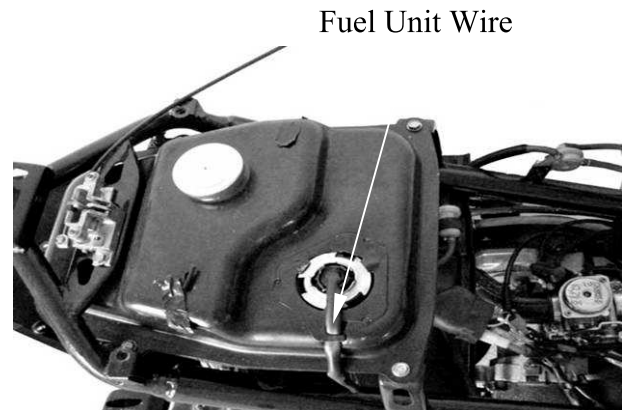

INSTALLATION


Inspect if the fuel unit is damaged, or hardened.
 Assemble the fuel unit in the reverse order of disassembly.

- Align the groove on the fuel unit with the angle on the fuel tank.
- Inspect if the fuel tank leaked after installing and filling the gasoling.

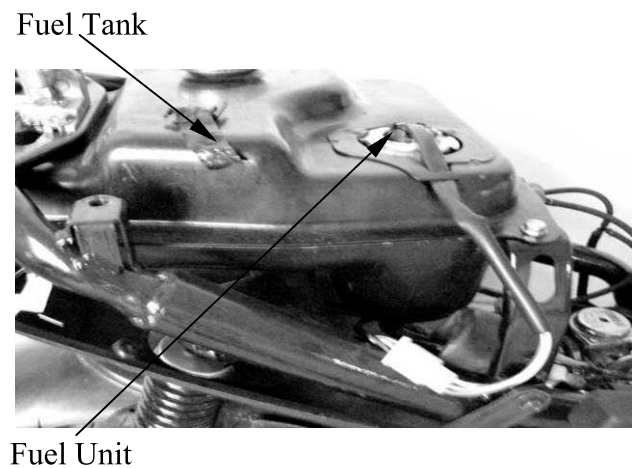

AIR CLEANER

Loosen the air cleaner connecting tube band screw.
 Disconnect the cylinder head cover breather tube from the air cleaner.
 Remove the two bolts and air cleaner case.

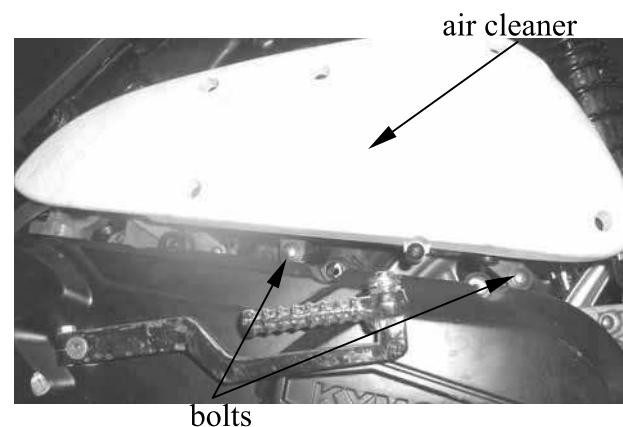


5. FUEL SYSTEM

TPS REMOVE

Remove the TPS stay screw.
Remove the TPS and TPS stay assembled.

- • While clean the carburetor, must remove the TPS unit.

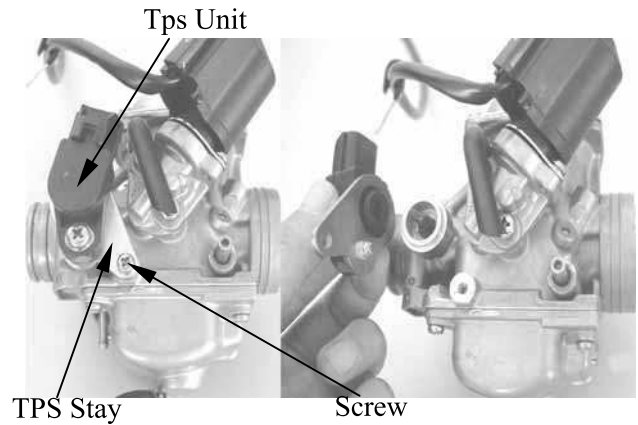

TPS UNIT INSPECTION


Measure the TPS resistance between the violet/black and green wire terminals.

Measure the resistance: $5K\Omega \cdot 30 \cdot$


Measure the TPS resistance between the violet/red and green wire terminals.

Measure the resistance: $5K\Omega \cdot 30 \cdot$


- • When measure the TPS resistance carburetor throttle open the max place .

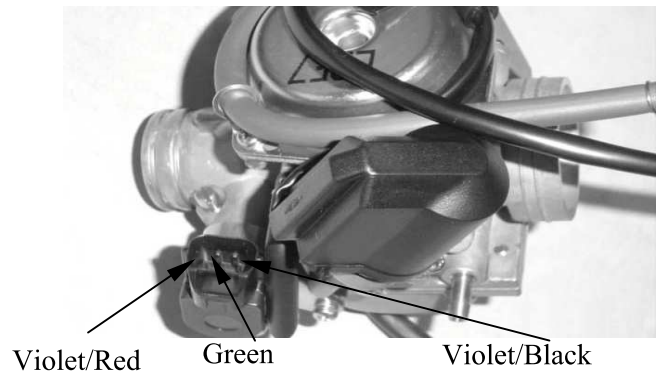

The installation sequence is the reverse of removal.

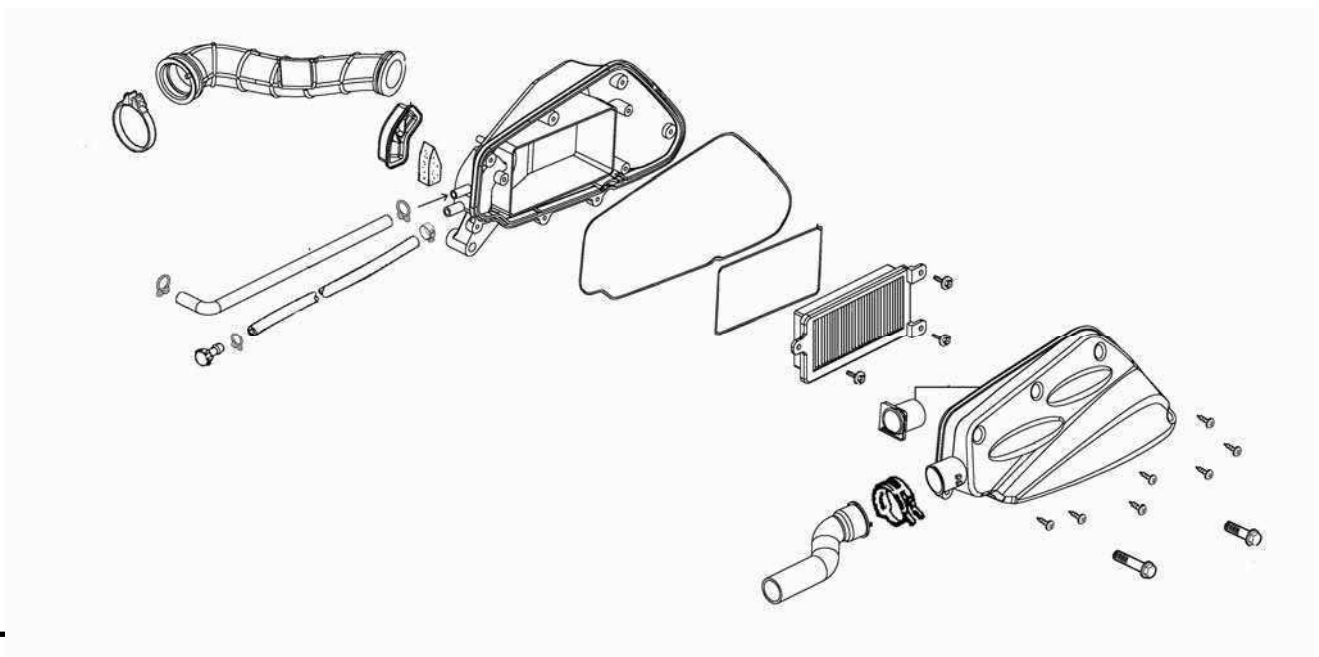

6. ENGINE REMOVAL/INSTALLATION

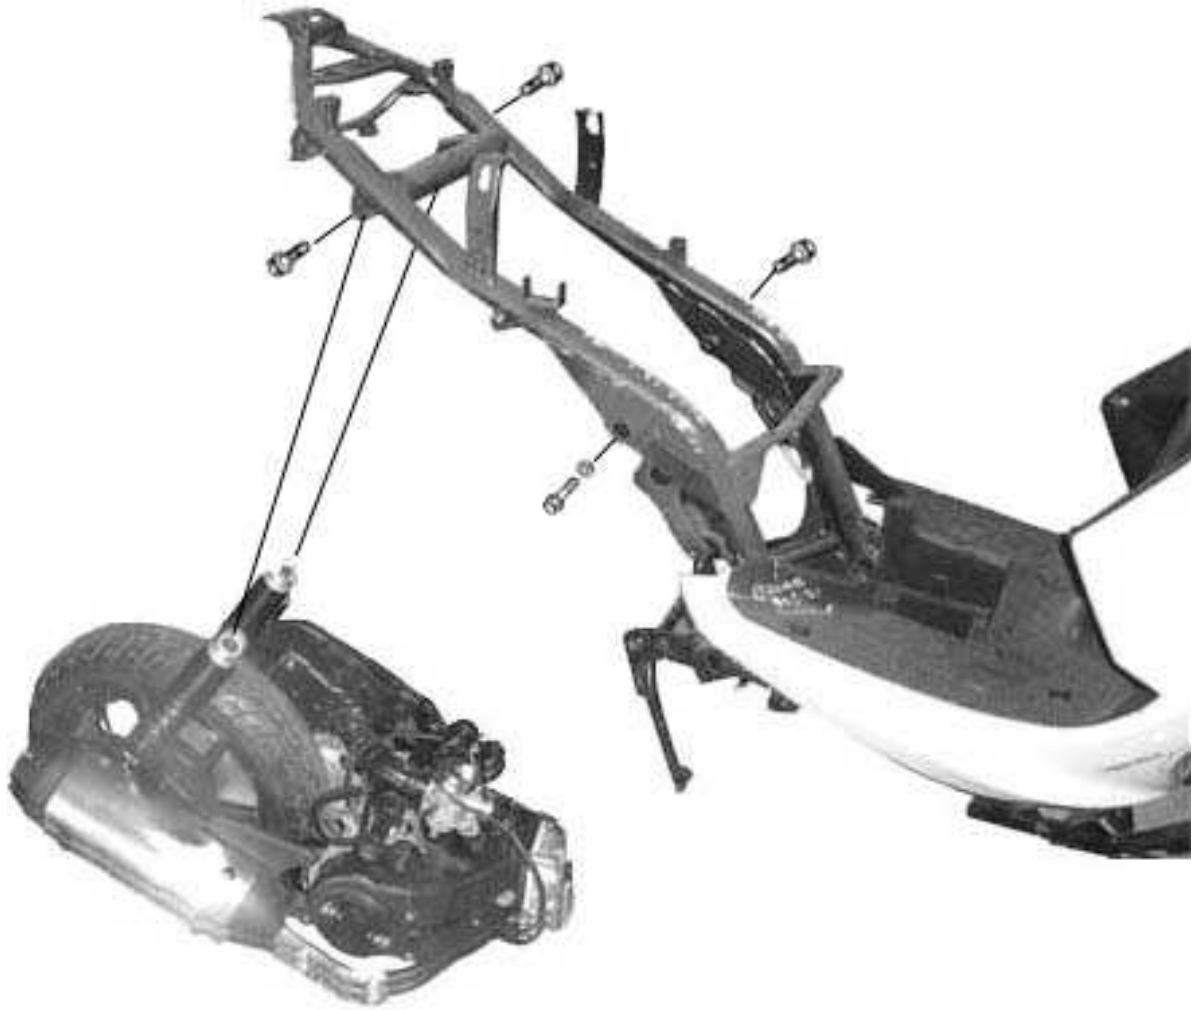

6

6. ENGINE REMOVAL/INSTALLATION

| | | | |
|---------------------------|-----|---------------------------|-----|
| SERVICE INFORMATION | 6-1 | ENGINE INSTALLATION | 6-4 |
| ENGINE REMOVAL | 6-2 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- A floor jack or other adjustable support is required to support and maneuver the engine. Be careful not to damage the motorcycle body, cables and wires during engine removal.
- Use shop towels to protect the motorcycle body during engine removal.
- Parts requiring engine removal for servicing:
 - Crankcase
 - Crankshaft

6. ENGINE REMOVAL/INSTALLATION


ENGINE REMOVAL

Disconnect the battery negative cable.
Remove the frame body cover.
Disconnect the engine negative cable.
Disconnect the spark plug high tension wire.
Disconnect the auto bystarter wire connector.




Auto Bystarter Wire Connector

Disconnect the starter motor cable from the starter relay.
Remove the spark plug cap and disconnect the ignition coil wire from the set plate.

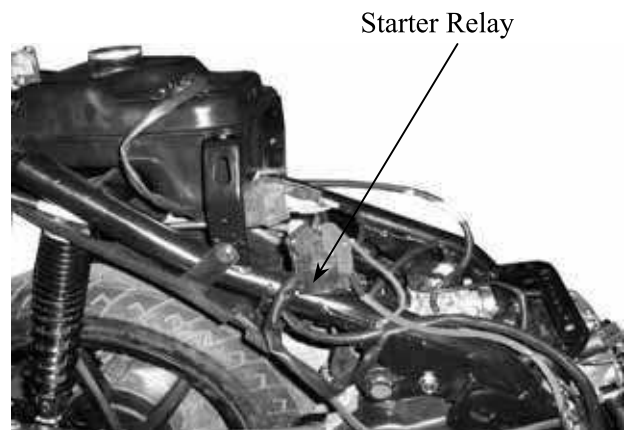

Starter Relay

Disconnect the fuel tube and vacuum tube that go to the carburetor from the fuel pump.
Disconnect the vacuum tube from the air cut-off valve.
Disconnect the throttle cable from the carburetor.

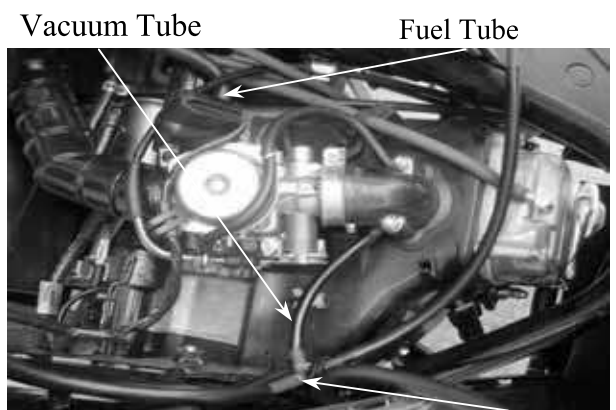


Vacuum Tube

Fuel Tube

Tee Tube

Loosen the drive belt air cleaner connecting tube band screw and remove the connecting tube.

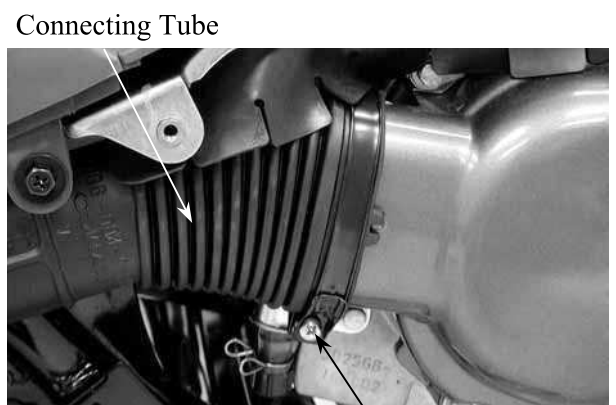

Connecting Tube

Screw

6. ENGINE REMOVAL/INSTALLATION


Remove the air cleaner bolts.
Remove the rear brake adjusting nut, connecting pin and rear brake cable.

Brake Adjusting Nut




Remove the rear shock absorber lower mount bolt.

Rear Shock Absorber Lower Mount Bolt

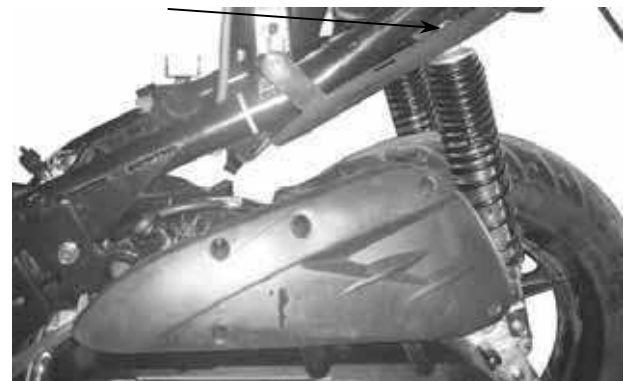

Remove the four A.C. generator cooling fan cover bolts and cooling fan cover.
Remove the engine mounting bolt and pull out the engine with the engine hanger bracket backward.


Engine Mounting Bolt

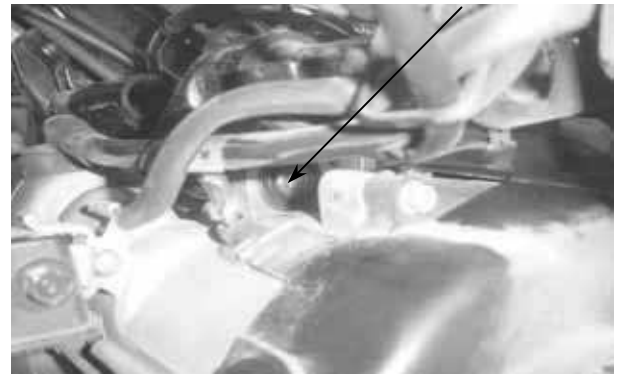

ENGINE HANGER BRACKET REMOVAL


Remove the ignition coil from the engine hanger.
Remove the engine hanger bracket bolt and nut.
Remove the engine hanger bracket.

Engine Hanger Bracket

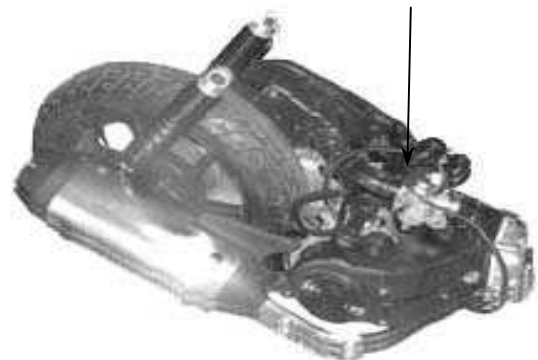


6. ENGINE REMOVAL/INSTALLATION

Inspect the engine hanger bushings and stopper rubbers for wear or damage.

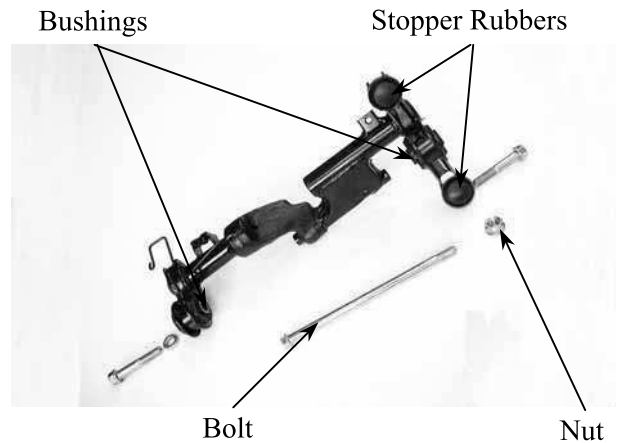

ENGINE HANGER BRACKET INSTALLATION

Install the engine hanger bracket to the engine.
Install the engine hanger bracket bolt and tighten the nut.

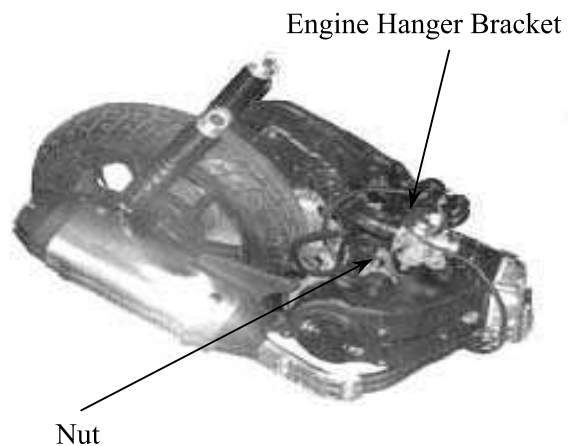


ENGINE INSTALLATION

Install the engine and tighten the engine mounting bolt.

Torque: 7.0kg-m

Tighten the rear shock absorber upper mount bolt.

Torque: 4.0kg-m

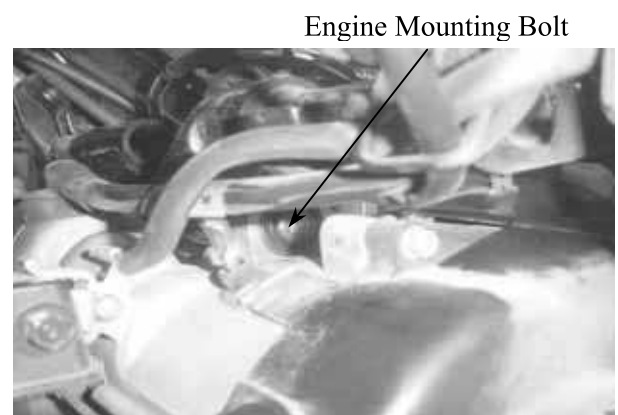

Install the removed parts in the reverse order of removal.

- Route the wires and cables properly.


After installation, inspect and adjust the following:

- Throttle grip free play.
- Rear brake adjustment.



7. CYLINDER HEAD/VALVES

7

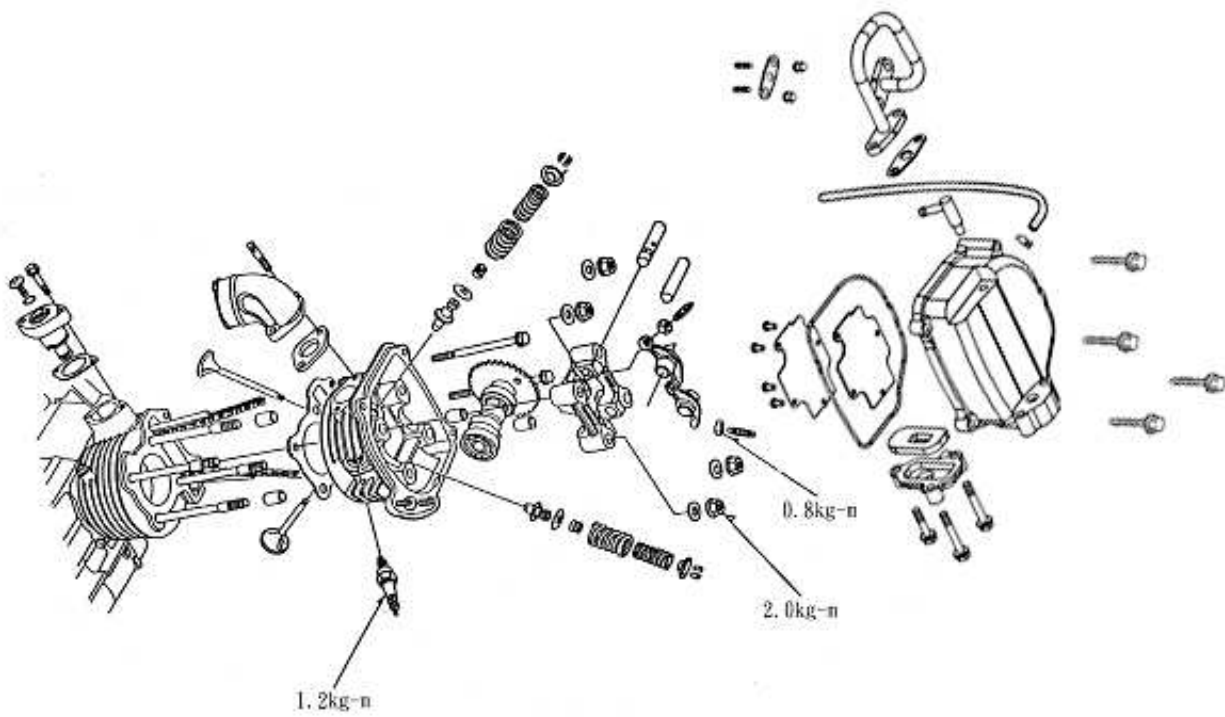

7. CYLINDER HEAD/VALVES

| | | | |
|-----------------------------|-----|----------------------------------|-----|
| SERVICE INFORMATION..... | 7-1 | CYLINDER HEAD DISASSEMBLY | 7-7 |
| TROUBLESHOOTING | 7-2 | CYLINDER HEAD ASSEMBLY | 7-8 |
| CAMSHAFT REMOVAL..... | 7-3 | CYLINDER HEAD INSTALLATION | 7-8 |
| CYLINDER HEAD REMOVAL | 7-5 | CAMSHAFT INSTALLATION..... | 7-9 |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- The cylinder head can be serviced with the engine installed in the frame.
- When assembling, apply molybdenum disulfide grease or engine oil to the valve guide movable parts, valve arm and camshaft sliding surfaces for initial lubrication.
- The camshaft is lubricated by engine oil through the cylinder head engine oil passages. Clean and unclog the oil passages before assembling the cylinder head.
- After disassembly, clean the removed parts and dry them with compressed air before inspection.
- After removal, mark and arrange the removed parts in order. When assembling, install them in the reverse order of removal.

SPECIFICATIONS

| Item | | Standard (mm) | Service Limit (mm) |
|------------------------------------|----|----------------------|--------------------|
| Valve clearance (cold) | IN | 0.12 | — |
| | EX | 0.12 | — |
| Cylinder head compression pressure | | 13kg/cm ² | |
| Cylinder head warpage | | — | |
| Camshaft cam height | IN | 29.803 | 29.40 |
| | EX | 29.5637 | 29.16 |
| Valve rocker arm I.D. | IN | 10.000~10.015 | 10.10 |
| | EX | 10.000~10.015 | 10.10 |
| Valve rocker arm shaft O.D. | IN | 9.972~9.987 | 9.91 |
| | EX | 9.972~9.987 | 9.91 |
| Valve seat width | IN | 1.0 | 1.8 |
| | EX | 1.0 | 1.8 |
| Valve stem O.D. | IN | 4.975~4.990 | 4.90 |
| | EX | 4.955~4.970 | 4.90 |
| Valve guide I.D. | IN | 5.000~5.012 | 5.03 |
| | EX | 5.000~5.012 | 5.03 |
| Valve stem-to-guide clearance | IN | 0.010~0.037 | 0.08 |
| | EX | 0.030~0.057 | 0.10 |

7. CYLINDER HEAD/VALVES

TORQUE VALUES

| | | |
|-------------------------------|-------------|-----------------------------|
| Cylinder head nut | 2.0kg-m | Apply engine oil to threads |
| Valve clearance adjusting nut | 0.9kg-m | Apply engine oil to threads |
| Stud bolt | 0.9~1.1kg-m | |

SPECIAL TOOLS

Valve spring compressor

TROUBLESHOOTING

- The poor cylinder head operation can be diagnosed by a compression test or by tracing engine top-end noises.

Poor performance at idle speed

- Compression too low

Compression too low

- Incorrect valve clearance adjustment
- Burned or bend valves
- Incorrect valve timing
- Broken valve spring
- Poor valve and seat contact
- Leaking cylinder head gasket
- Warped or cracked cylinder head
- Poorly installed spark plug

Compression too high

- Excessive carbon build-up in combustion chamber

White smoke from exhaust muffler

- Worn valve stem or valve guide
- Damaged valve stem seal

Abnormal noise

- Incorrect valve clearance adjustment
- Sticking valve or broken valve spring
- Damaged or worn camshaft
- Worn cam chain guide
- Worn camshaft and rocker arm

7. CYLINDER HEAD/VALVES

CAMSHAFT REMOVAL

Remove the center cover.
Remove the four cylinder head cover bolts to remove the cylinder head cover.
Remove the two nuts attaching the secondary air inlet tube.

Cylinder Head Cover



Remove the cam chain tensioner cap screw and the O-ring.

O-ring



Screw

Turn the cam chain tensioner screw clockwise to tighten it.



Tensioner Screw

Turn the flywheel counterclockwise so that the "T" mark on the flywheel aligns with the index mark on the crankcase to bring the round hole on the camshaft gear facing up to the top dead center on the compression stroke.

Camshaft Gear



Round Hole

Punch Marks

7. CYLINDER HEAD/VALVES


Remove the two cylinder head bolts.
Remove the four cylinder head nuts and washers.

* Diagonally loosen the cylinder head nuts in 2 or 3 times.




Washer

Remove the camshaft holder and dowel pins.

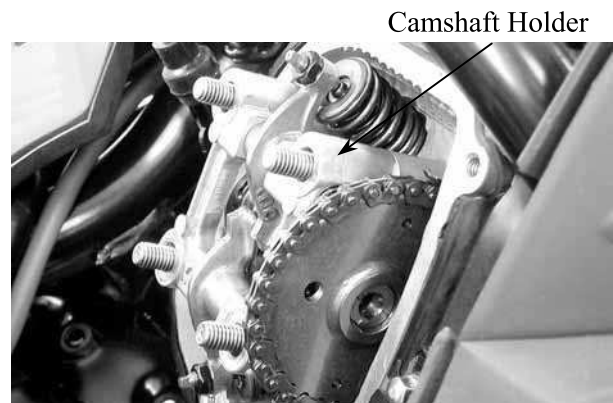

Remove the camshaft gear from the cam chain and remove the camshaft.

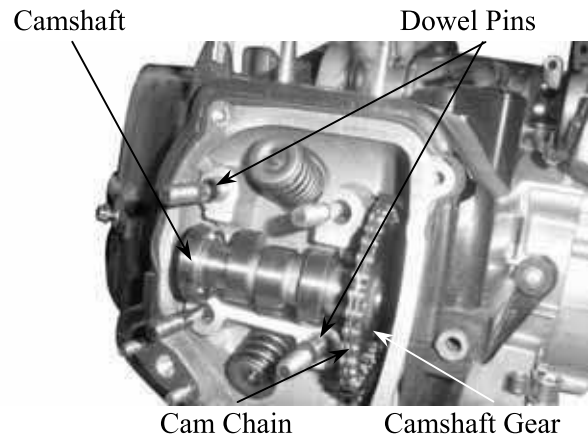

CAMSHAFT INSPECTION

Check each cam lobe for wear or damage.
Measure the cam lobe height.

Service Limits:


IN : 29.40mm replace if below

EX: 29.16mm replace if below




7. CYLINDER HEAD/VALVES

Check each camshaft bearing for play or damage. Replace the camshaft assembly with a new one if the bearings are noisy or have excessive play.

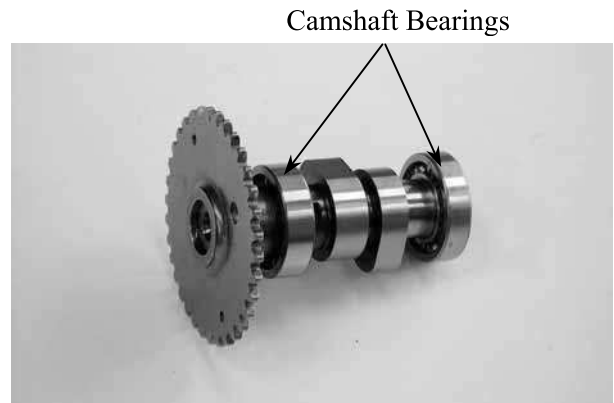

CAMSHAFT HOLDER DISASSEMBLY

Take out the valve rocker arm shafts using a 5mm bolt.
Remove the valve rocker arms.

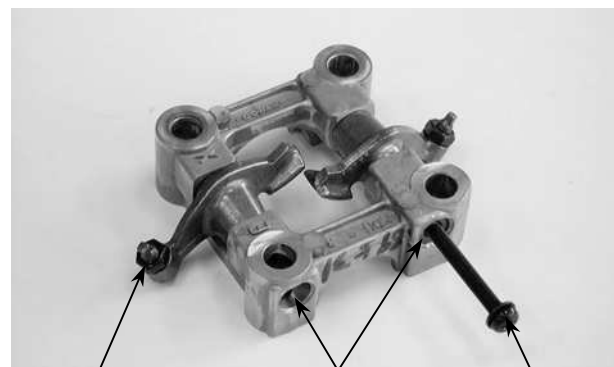


Camshaft Holder

CAMSHAFT HOLDER INSPECTION

Inspect the camshaft holder, valve rocker arms and rocker arm shafts for wear or damage.

* If the valve rocker arm contact surface is worn, check each cam lobe for wear or damage.

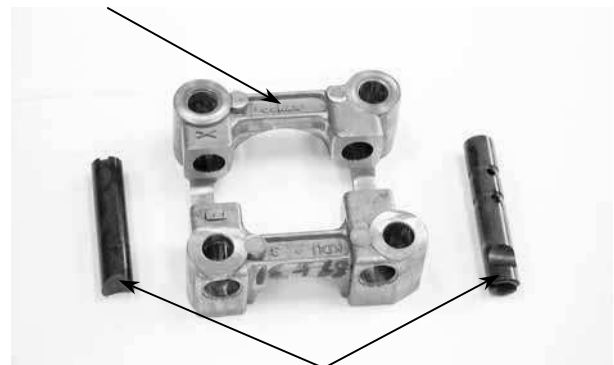

Rocker Arm Shafts

Measure the I.D. of each valve rocker arm.

Service Limits:

IN: 10.10mm replace if over

EX: 10.10mm replace if over

Measure each rocker arm shaft O.D.

Service Limits:

IN: 9.91mm replace if over

EX: 9.91mm replace if over




7. CYLINDER HEAD/VALVES

CYLINDER HEAD REMOVE

Remove the camshaft.
Remove the carburetor.
Remove the exhaust muffler.
Remove the carburetor intake manifold.
Remove the cooling fan cover.
Remove the engine cover bolts and screws.
Separate the engine cover joint claws.

Intake Manifold

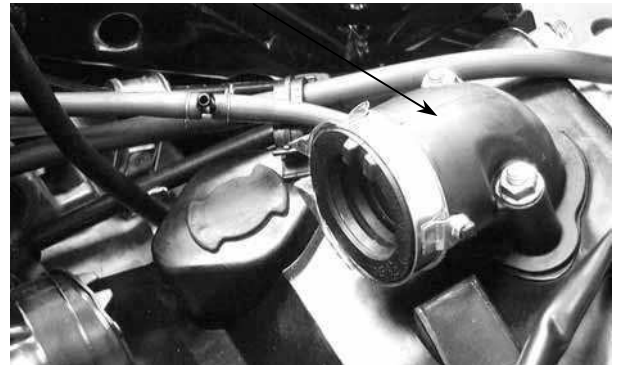

Remove the cylinder head.

Cylinder Head




Bolts

Remove the dowel pins and cylinder head gasket.
Remove the cam chain guide.

Dowel Pins


Cylinder Head Gasket

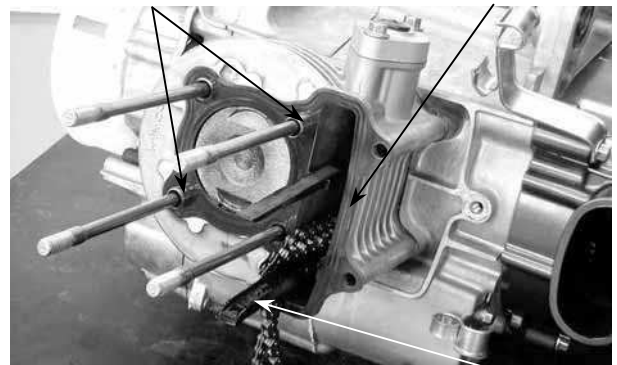

Cam Chain Guide

Remove all gasket material from the cylinder mating surface.

- *
- Avoid damaging the cylinder mating surface.
 - Be careful not to drop any gasket material into the engine.

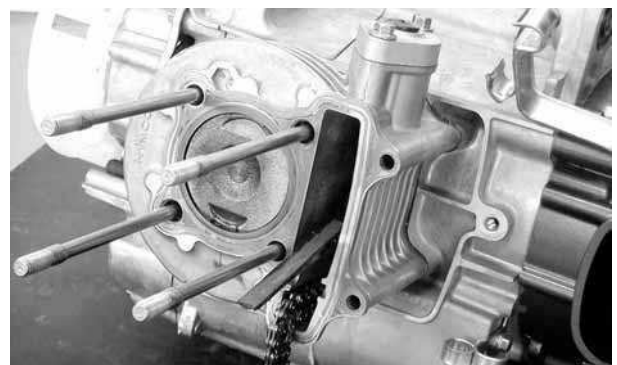

7. CYLINDER HEAD/VALVES


CYLINDER HEAD DISASSEMBLY

Remove the valve spring cotters, retainers, springs, spring seats and valve stem seals using a valve spring compressor.

- * Be sure to compress the valve springs with a valve spring compressor.
- * Mark all disassembled parts to ensure correct reassembly.


Special

Valve Spring Compressor

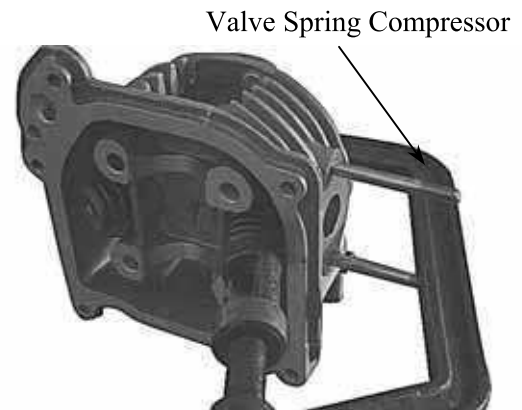

Remove carbon deposits from the combustion chamber.
Clean off any gasket material from the cylinder head mating surface.


- * Be careful not to damage the cylinder head mating surface.

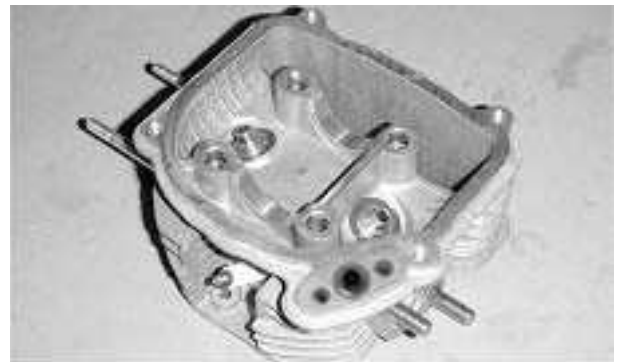

INSPECTION CYLINDER HEAD

Check the spark plug hole and valve areas for cracks.
Check the cylinder head for warpage with a straight edge and feeler gauge.

Service Limit: 0.05mm repair or replace if over

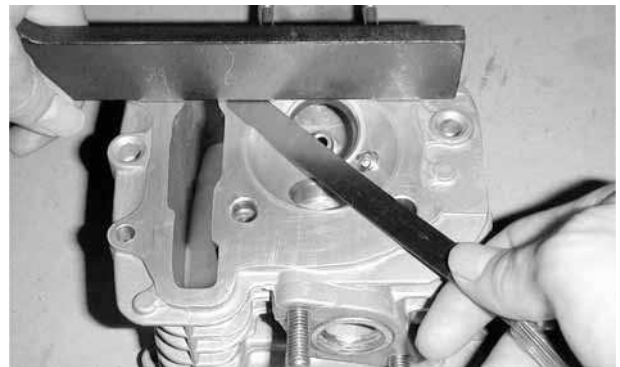


VALVE SPRING FREE LENGTH

Measure the free length of the inner and outer valve springs.

Service Limits:

Inner : 32.3mm replace if below

Outer : 35.0mm replace if below

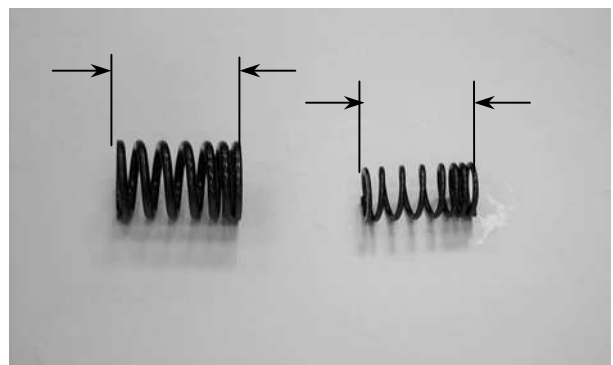

7. CYLINDER HEAD/VALVES

VALVE /VALVE GUIDE

Inspect each valve for bending, burning, scratches or abnormal stem wear.


Check valve movement in the guide.

Measure each valve stem O.D.

Service Limits:

IN : 4.90mm replace if below

EX: 4.90mm replace if below

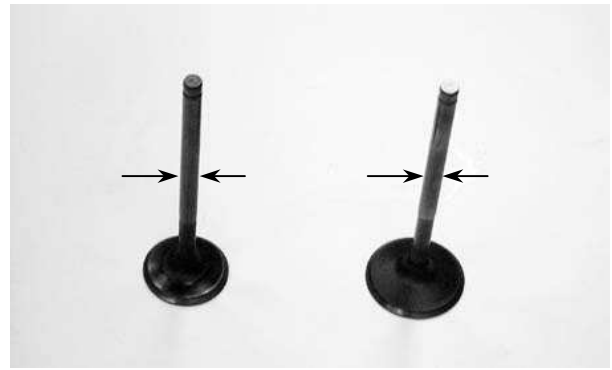

Measure each valve guide I.D.


Service Limits: IN : 5.03mm replace if over

EX: 5.03mm replace if over

Subtract each valve stem O.D. from the corresponding guide I.D. to obtain the stem-to-guide clearance.

Service Limits: IN : 0.08mm replace if over

EX: 0.10mm replace if over

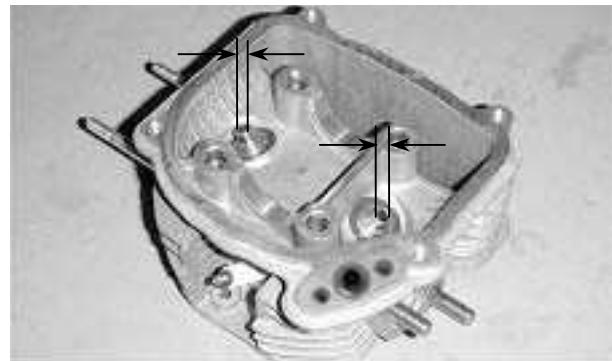

* If the stem-to-guide clearance exceeds the service limits, replace the cylinder head as necessary.

CYLINDER HEAD ASSEMBLY

Install the valve spring seats and valve stem seals.

* Be sure to install new valve stem seals.

Lubricate each valve stem with engine oil and insert the valves into the valve guides. Install the valve springs and retainers.




Compress the valve springs using the valve spring compressor, then install the valve cotters.

* • When assembling, a valve spring compressor must be used.
• Install the cotters with the pointed ends facing down from the upper side of the cylinder head.

Special

Valve Spring Compressor


Valve Spring Compressor

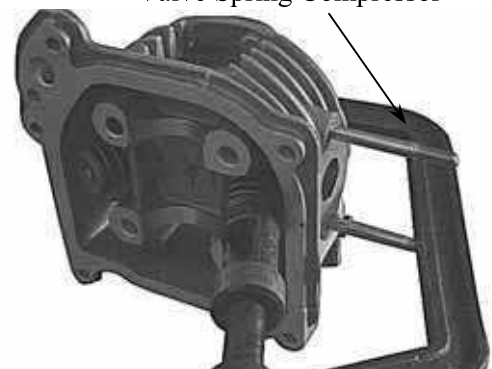

7. CYLINDER HEAD/VALVES

Tap the valve stems gently with a plastic hammer for 2~3 times to firmly seat the cotters.

* Be careful not to damage the valves.

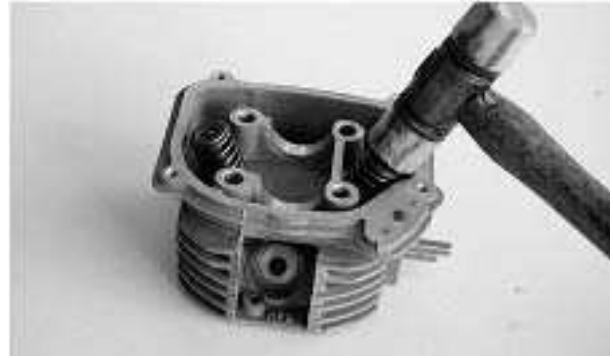


CYLINDER HEAD INSTALLATION

Tighten the four stud bolts.


Install the dowel pins and a new cylinder head gasket.

Install the cam chain guide.

Torque: Stud Bolts :0.7~1.1kg-m

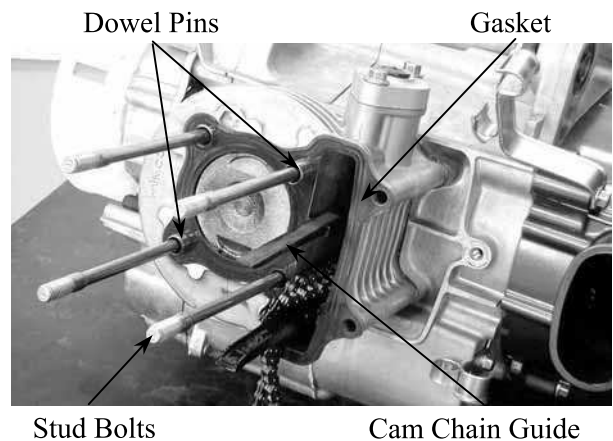

Install the cylinder head.

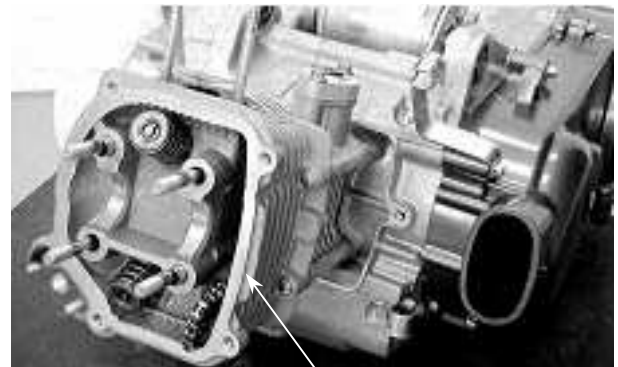

Cylinder Head


CAMSHAFT HOLDER ASSEMBLY

Install the exhaust valve rocker arm to the "EX" mark side of the camshaft holder.

Install the intake valve rocker arm and the rocker arm shafts.

- *
- Align the cutout on the front end of the intake valve rocker arm shaft with the bolt of the camshaft holder.
 - Align the cross cutout on the exhaust valve rocker arm shaft with the bolt of the camshaft holder.

Camshaft Holder

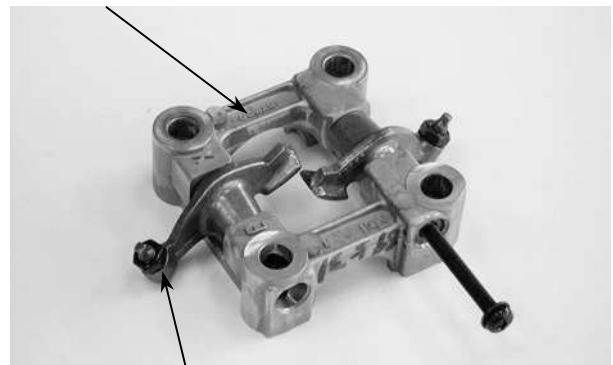

Valve Rocker Arm


7. CYLINDER HEAD/VALVES

CAMSHAFT INSTALLATION


Turn the flywheel so that the “T” mark on the flywheel aligns with the index mark on the crankcase.

Keep the round hole on the camshaft gear facing up and align the punch marks on the camshaft gear with the cylinder head surface (Position the intake and exhaust cam lobes down.) and install the camshaft onto the cylinder head.

Install the cam chain over the camshaft gear.

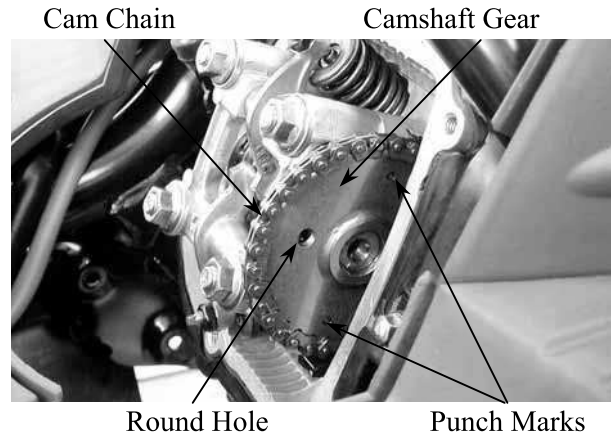

Install the dowel pins.

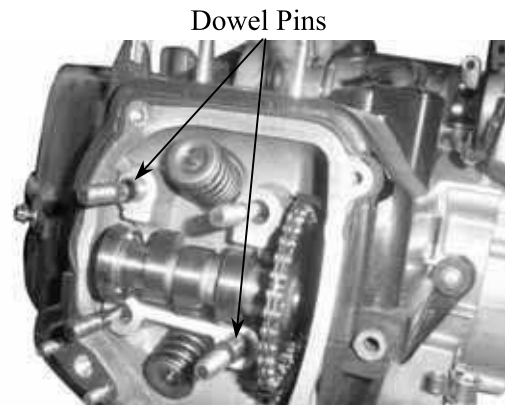


Install the camshaft holder, washers and nuts on the cylinder head.

Tighten the four cylinder head nuts and two bolts.


Torque: Cylinder head nut: 2.0kg-m

- *
 - Apply engine oil to the threads of the cylinder head nuts.
 - Diagonally tighten the cylinder head nuts in 2~3 times.

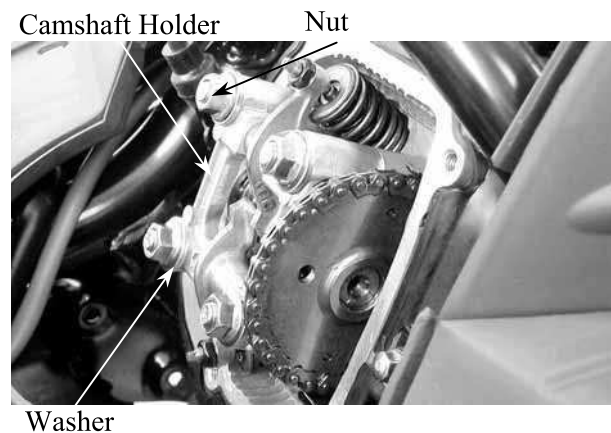

Adjust the valve clearance.

Turn the cam chain tensioner screw counter-clockwise to release it.

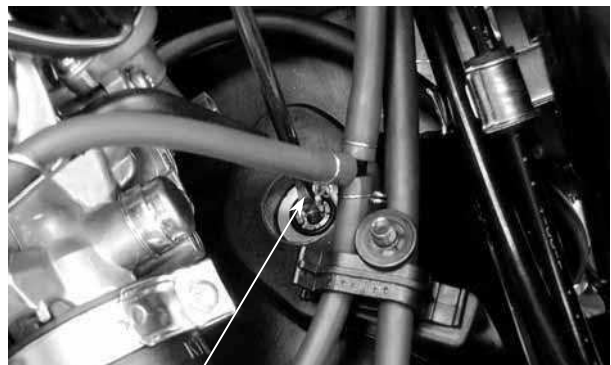

Tensioner Screw

7. CYLINDER HEAD/VALVES

Apply engine oil to a new O-ring and install it.

Tighten the cam chain tensioner cap screw.


* Be sure to install the O-ring into the groove properly.



O-ring


Install a new cylinder head cover O-ring and install the cylinder head cover.
Install and tighten the cylinder head cover bolts.

* Be sure to install the O-ring into the groove properly.

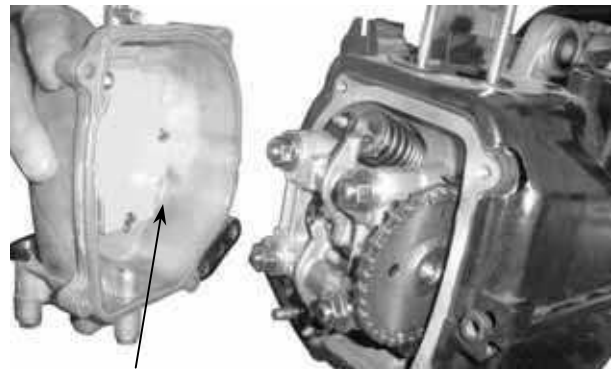

Cylinder Head Cover

8. CYLINDER/PISTON

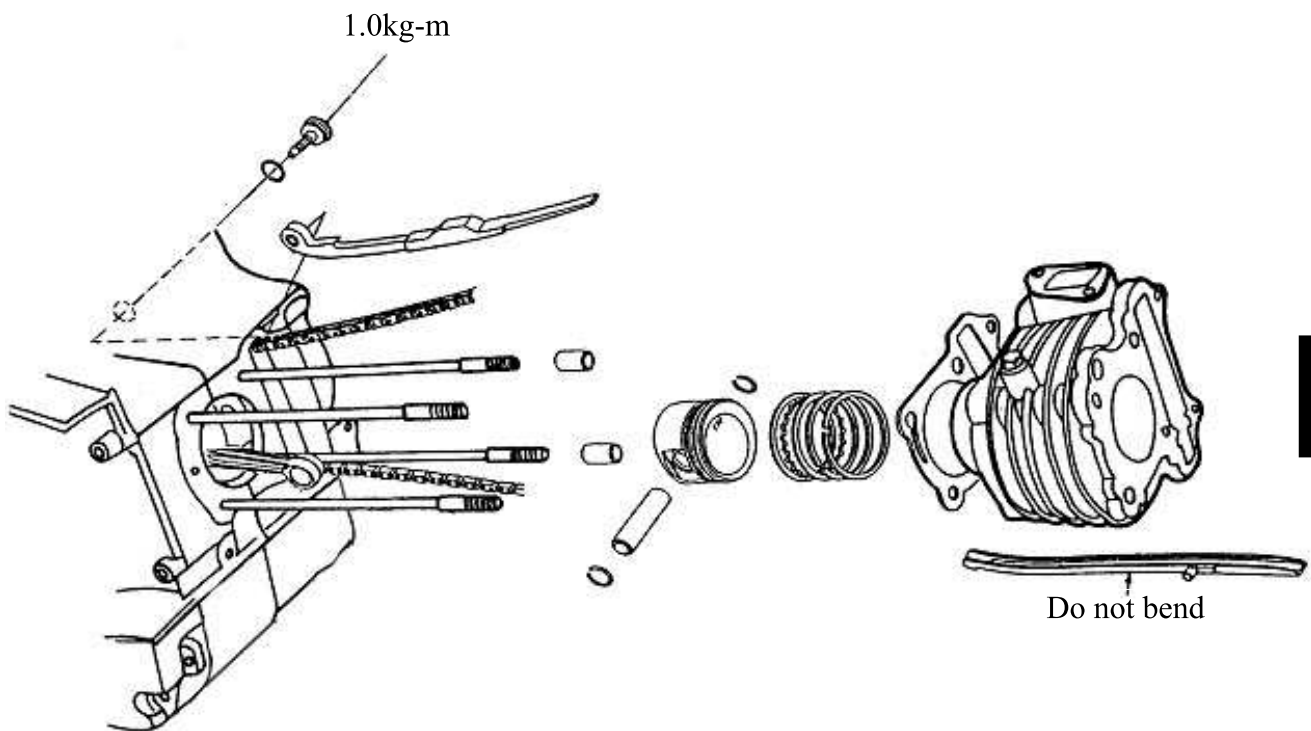

8. CYLINDER/PISTON

SUPER8 125

| | |
|-----------------------------|--------------------------------|
| SERVICE INFORMATION.....8-1 | PISTON REMOVAL.....8-2 |
| TROUBLESHOOTING.....8-1 | PISTON INSTALLATION.....8-6 |
| CYLINDER REMOVAL8-2 | CYLINDER INSTALLATION8-6 |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- The cylinder and piston can be serviced with the engine installed in the frame.
- After disassembly, clean the removed parts and dry them with compressed air before inspection.

SPECIFICATIONS

| Item | | Standard (mm) | Service Limit (mm) | |
|------------------------------------|--------------------------------|---------------|--------------------------|------|
| Cylinder | I.D. | 52.4~52.410 | 52.50 | |
| | Warpage | — | 0.05 | |
| | Cylindricity | — | 0.05 | |
| | True roundness | — | 0.05 | |
| Piston, piston ring | Ring-to-groove clearance | Top | 0.015~0.055 | 0.09 |
| | | Second | 0.015~0.055 | 0.09 |
| | Ring end gap | Top | 0.10~0.25 | 0.5 |
| | | Second | 0.10~0.25 | 0.5 |
| | | Oil side rail | 0.2~0.7 | — |
| | Piston O.D. | | 52.370~52.390 | 52.3 |
| | Piston O.D. measuring position | | 9mm from bottom of skirt | — |
| | Piston-to-cylinder clearance | | 0.010~0.040 | 0.1 |
| Piston pin hole I.D. | | 15.002~15.008 | 15.04 | |
| Piston pin O.D | | 14.994~15.000 | 14.96 | |
| Piston-to-piston pin clearance | | 0.002~0.014 | 0.02 | |
| Connecting rod small end I.D. bore | | 15.016~15.034 | 15.06 | |

TROUBLESHOOTING

- When hard starting or poor performance at low speed occurs, check the crankcase breather for white smoke. If white smoke is found, it means that the piston rings are worn, stuck or broken.

Compression too low or uneven compression

- Worn, stuck or broken piston rings
- Worn or damaged cylinder and piston

Compression too high

- Excessive carbon build-up in combustion chamber or on piston head

Excessive smoke from exhaust muffler

- Worn or damaged piston rings
- Worn or damaged cylinder and piston


Abnormal noisy piston

- Worn cylinder, piston and piston rings
- Worn piston pin hole and piston pin


8. CYLINDER/PISTON

CYLINDER REMOVAL

Remove the cylinder head.
Remove the cam chain guide.
Remove the cylinder base bolts.
Remove the cylinder.

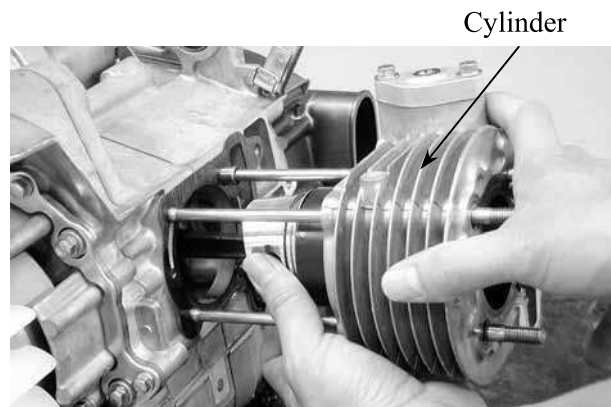

Remove the cylinder gasket and dowel pins.
Clean any gasket material from the cylinder surface.

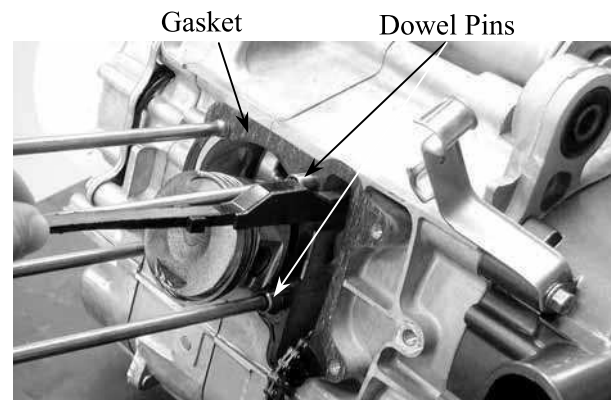

PISTON REMOVAL

Remove the piston pin clip.

* Place a clean shop towel in the crankcase to keep the piston pin clip from falling into the crankcase.

Press the piston pin out of the piston and remove the piston.



8. CYLINDER/PISTON

Inspect the piston, piston pin and piston rings.
Remove the piston rings.

- * Take care not to damage or break the piston rings during removal.

Clean carbon deposits from the piston ring grooves.



Install the piston rings onto the piston and measure the piston ring-to-groove clearance.

Service Limits:

Top: 0.09mm replace if over

2nd: 0.09mm replace if over




Remove the piston rings and insert each piston ring into the cylinder bottom.

- * Use the piston head to push each piston ring into the cylinder.


Measure the piston ring end gap.

Service Limit: 0.5mm replace if over

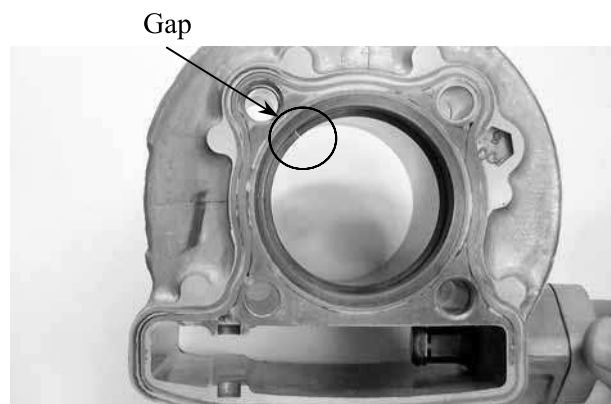

Measure the piston pin hole I.D.


Service Limit: 15.04mm replace if over

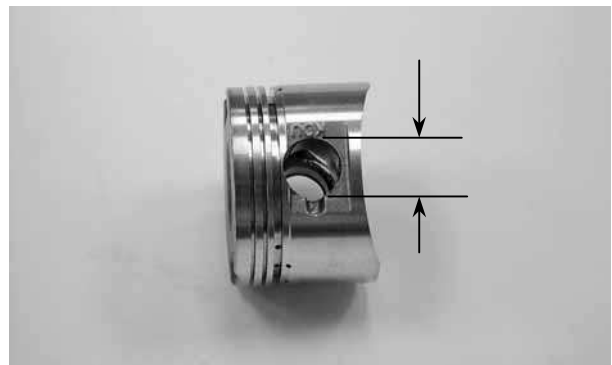

8. CYLINDER/PISTON

Measure the piston pin O.D.

Service Limit: 14.996mm replace if below

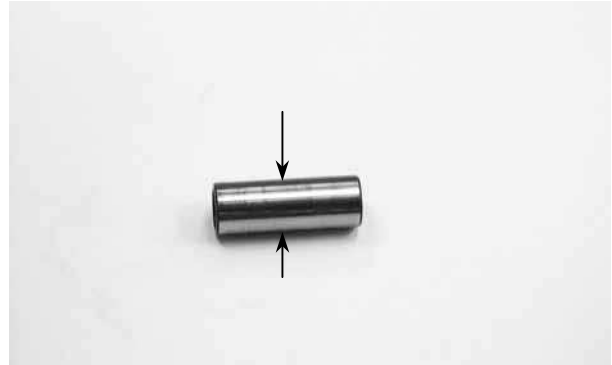


Measure the piston O.D.

* Take measurement at 9mm from the bottom and 90° to the piston pin hole.

Service Limit: 52.3mm replace if below

Measure the piston-to-piston pin clearance.

Service Limit: 0.02mm replace if over

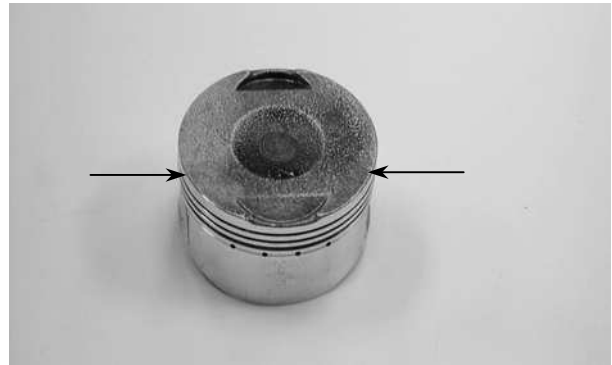

CYLINDER INSPECTION

Inspect the cylinder bore for wear or damage. Measure the cylinder I.D. at three levels of top, middle and bottom at 90° to the piston pin (in both X and Y directions).

Service Limit: 52.50mm repair or replace if over

Measure the cylinder-to-piston clearance.

Service Limit: 0.1mm repair or replace if over




The true roundness is the difference between the values measured in X and Y directions. The cylindricity (difference between the values measured at the three levels) is subject to the maximum value calculated.

Service Limits:

True Roundness: 0.05mm repair or replace if over

Cylindricity: 0.05mm repair or replace if over

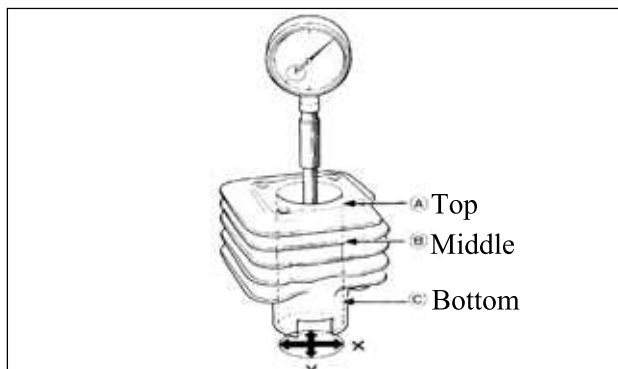

8. CYLINDER/PISTON

Inspect the top of the cylinder for warpage.


Service Limit:

0.05mm repair or replace if over



Measure the connecting rod small end I.D.


Service Limit: 15.06mm replace if over

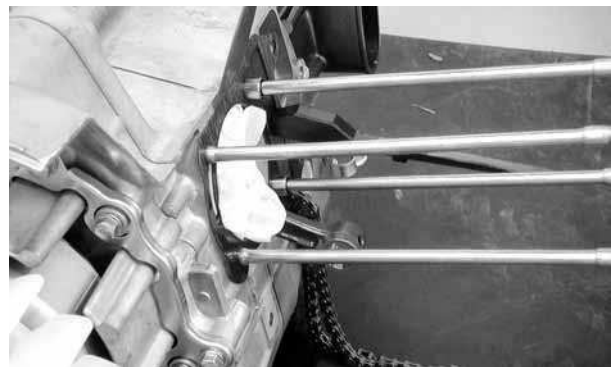

PISTON RING INSTALLATION

Install the piston rings onto the piston.
Apply engine oil to each piston ring.

- *
- Be careful not to damage or break the piston and piston rings.
 - All rings should be installed with the markings facing up.
 - After installing the rings, they should rotate freely without sticking.

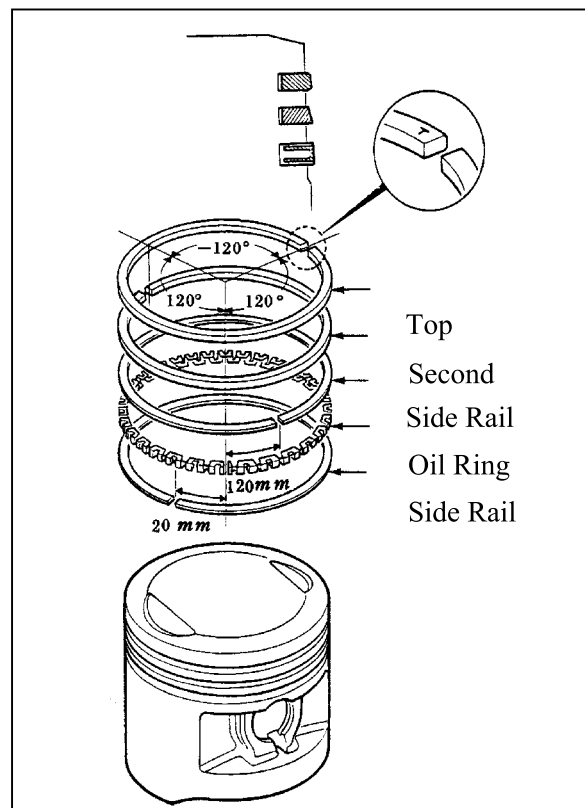


8. CYLINDER/PISTON

PISTON INSTALLATION

Remove any gasket material from the crankcase surface.

- * Be careful not to drop foreign matters into the crankcase.

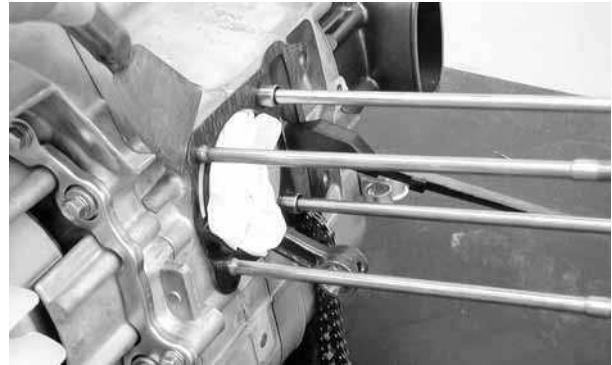

Install the piston, piston pin and a new piston pin clip.

- *
 - Position the piston "IN" mark on the intake valve side.
 - Place a clean shop towel in the crankcase to keep the piston pin clip from falling into the crankcase.



Piston Pin Clip

Piston Pin

Piston

CYLINDER INSTALLATION


Install the dowel pins and a new cylinder gasket on the crankcase.



Gasket

Coat the cylinder bore, piston and piston rings with clean engine oil. Carefully lower the cylinder over the piston by compressing the piston rings.


- *
 - Be careful not to damage or break the piston rings.
 - Stagger the ring end gaps at 120° to the piston pin.

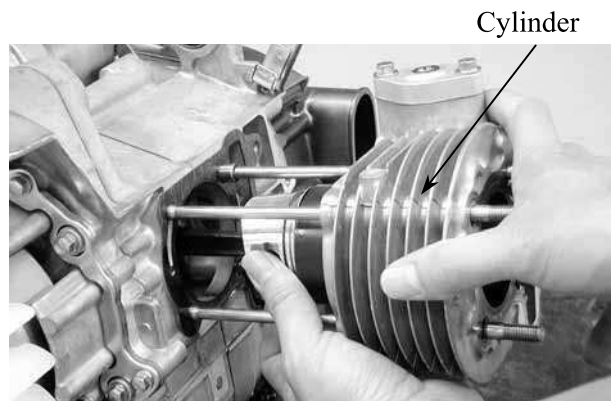

Cylinder

8. CYLINDER/PISTON

Loosely install the cylinder base bolts.

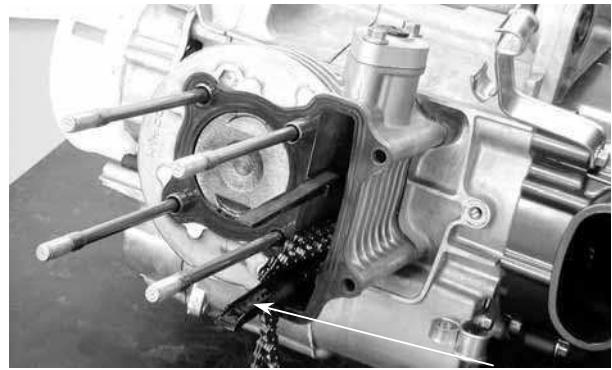

Cam Chain Guide

Install the cam chain guide.


* Insert the tab on the cam chain guide into the cylinder groove.

Install the cylinder head.
Tighten the cylinder base bolts.



Cylinder Base Bolt

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

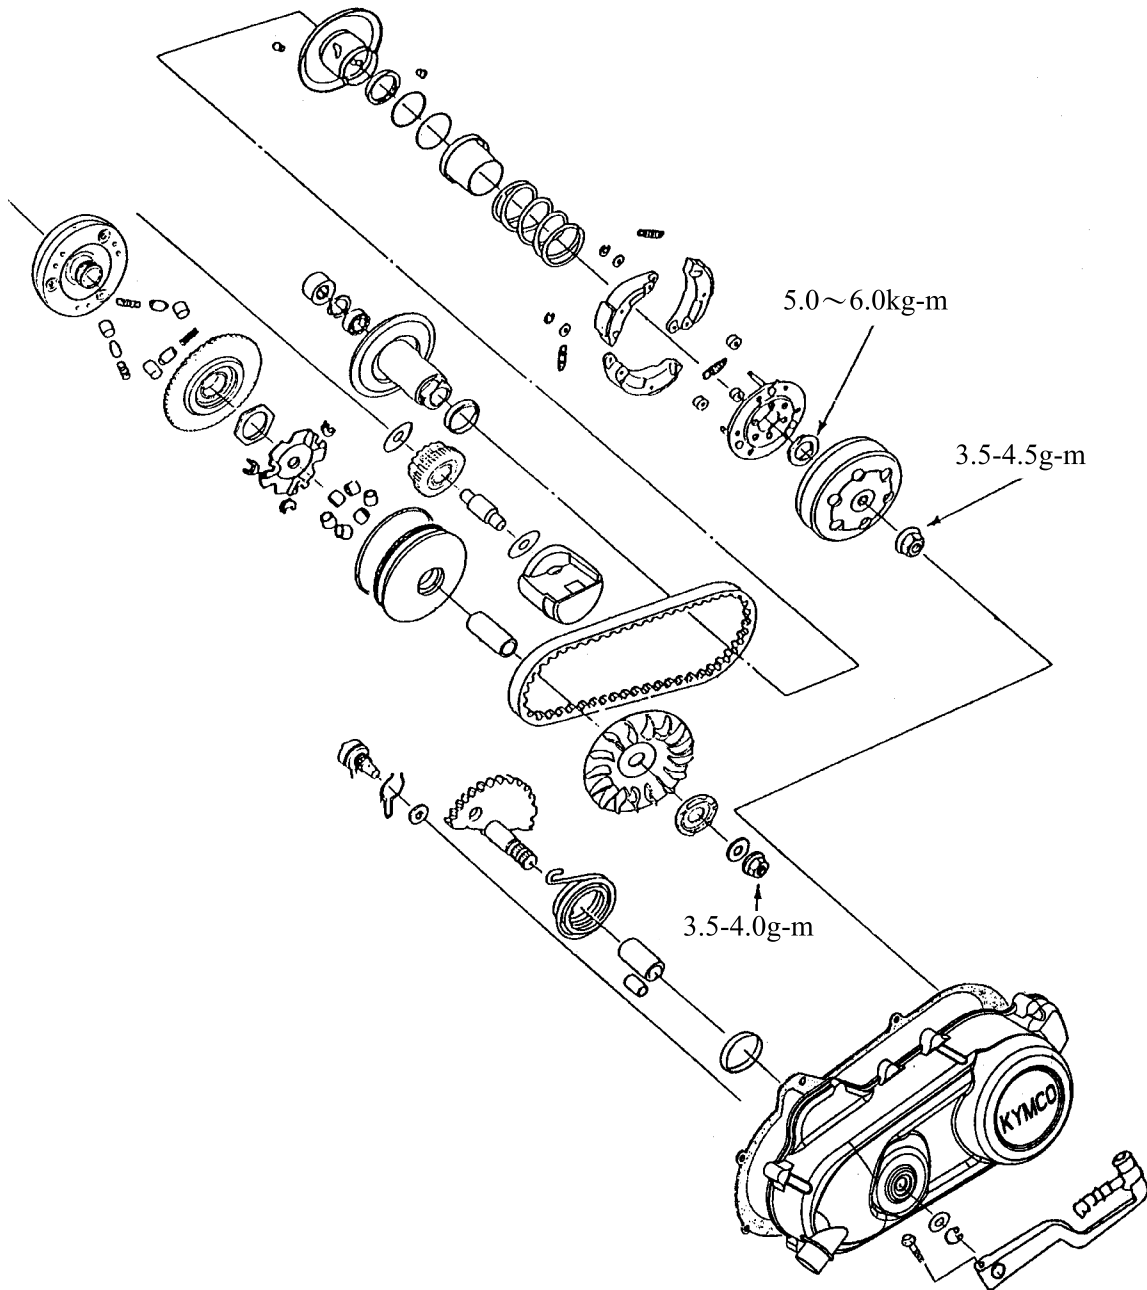

9

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

| | |
|-------------------------------|--------------------------------|
| SERVICE INFORMATION.....9-1 | DRIVE BELT 9-5 |
| TROUBLESHOOTING.....9-1 | DRIVE PULLEY 9-6 |
| LEFT CRANKCASE COVER9-2 | CLUTCH/DRIVEN PULLEY 9-9 |
| KICK STARTER.....9-2 | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- The drive pulley, clutch and driven pulley can be serviced with the engine installed.
- Avoid getting grease and oil on the drive belt and pulley faces. Remove any oil or grease from them to minimize the slipping of drive belt and drive pulley.

SPECIFICATIONS

| Item | Standard (mm) | Service Limit (mm) |
|---------------------------------|---------------|--------------------|
| Movable drive face bushing I.D. | 23.989~24.025 | 24.06 |
| Drive face collar O.D. | 23.960~23.974 | 23.94 |
| Drive belt width | 17.5 | 16.5 |
| Clutch lining thickness | — | 1.5 |
| Clutch outer I.D. | 125.2-125.7 | 125.5 |
| Driven face spring free length | — | 147.6 |
| Driven face O.D. | 33.965-33.485 | 33.94 |
| Movable driven face I.D. | 34.0-34.025 | 34.06 |
| Weight roller O.D. | 15.920~16.080 | 15.4 |

TORQUE VALUES

| | |
|------------------------|--------------|
| Drive face nut | 5.5~6.5kgf-m |
| Clutch outer nut | 3.5~4.5kgf-m |
| Clutch drive plate nut | 5.0-6.0kg-m |

SPECIAL TOOLS

| | |
|------------------|--------------------------|
| Universal holder | Clutch spring compressor |
|------------------|--------------------------|

TROUBLESHOOTING

Engine starts but motorcycle won't move

- Worn drive belt
- Broken ramp plate
- Worn or damaged clutch lining
- Broken driven face spring

Engine stalls or motorcycle creeps

- Broken clutch weight spring

Lack of power


- Worn drive belt
- Weak driven face spring
- Worn weight roller
- Fouled drive face

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


LEFT CRANKCASE COVER

REMOVAL

Loosen the drive belt air tube band screw.

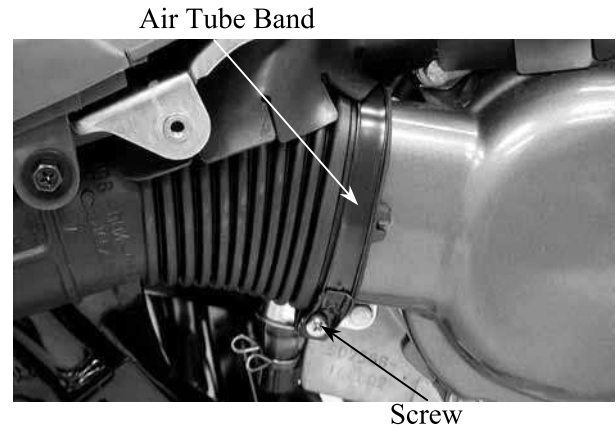


Remove the left crankcase cover bolts and cable clamp.
Remove the seal rubber and dowel pins.

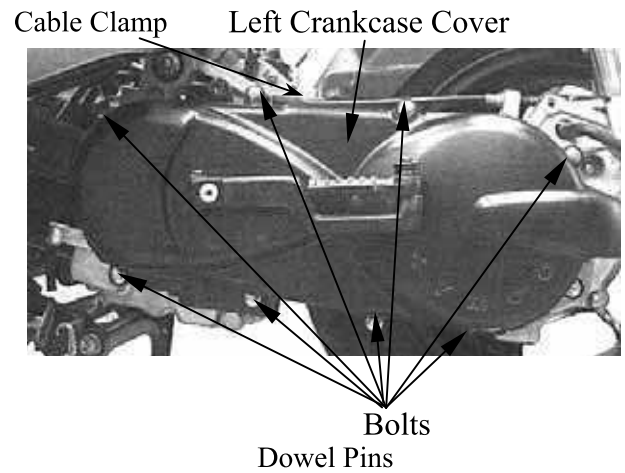


INSTALLATION

Install the dowel pins and gasket.

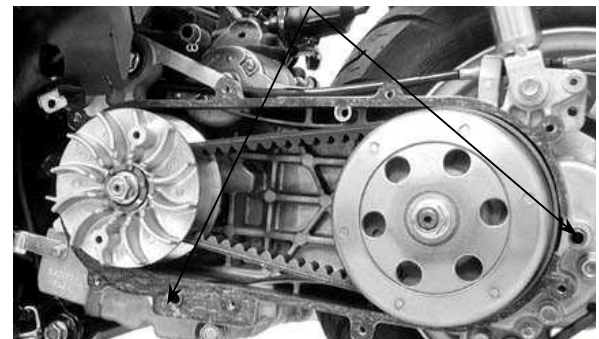

Install the left crankcase cover and tighten the left crankcase cover bolts.
Install the cable clamp to the specified location and tighten the bolt.

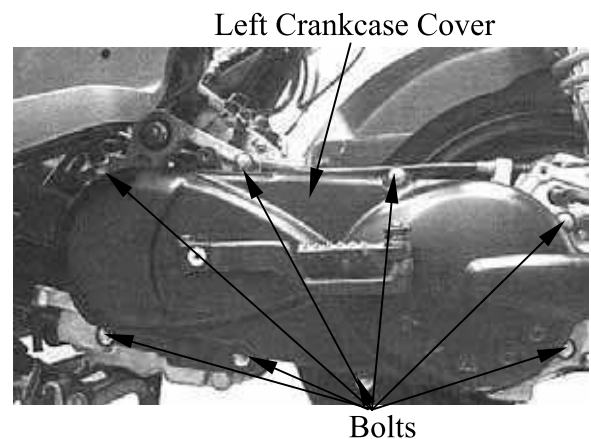

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the drive belt air tube and tighten the tube band screw.

DRIVE PULLEY

REMOVAL

Remove the left crankcase cover.
Hold the drive pulley using an universal holder and remove the drive face nut and starting ratchet.
Remove the drive pulley face.

Special

Flywheel Holder

Hold the clutch outer with the universal holder and remove the clutch outer nut.
Remove the clutch/driven pulley and drive belt.


INSPECTION

Check the drive belt for cracks, separation or abnormal or excessive wear.
Measure the drive belt width.

Service Limit: 17.0mm replace if below

* Use specified genuine parts for replacement.


Intake Cover

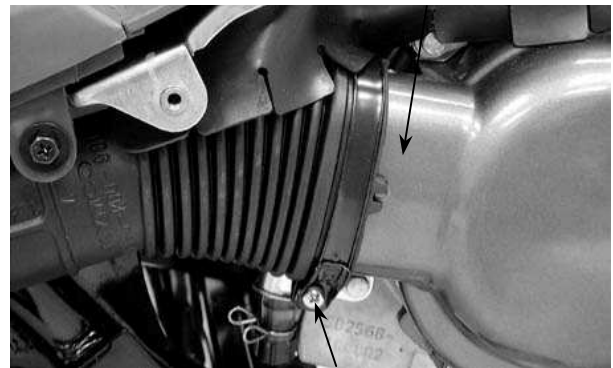

Tube Band Screw

Starting Ratchet

Drive Pulley Face

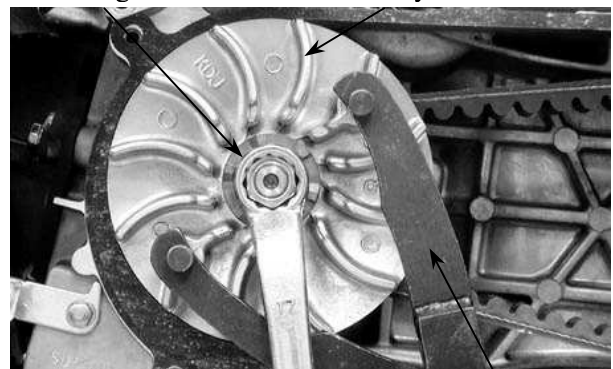


Flywheel Holder

Movable Drive Face




Drive Belt

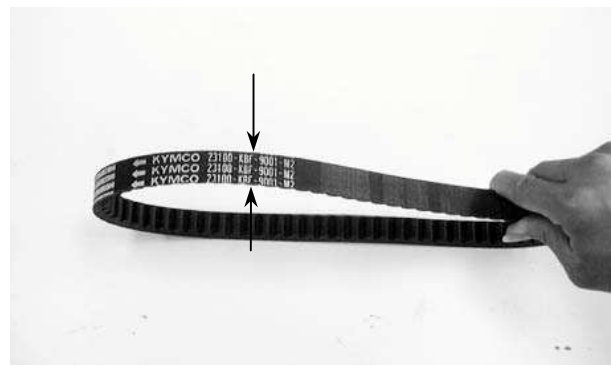

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Remove the movable drive face assembly.
Remove the drive pulley collar.

Drive Pulley Collar

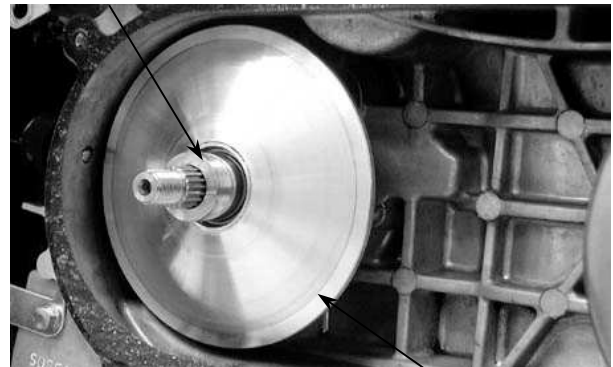

Movable Drive Face Assembly

DISASSEMBLY

Remove the ramp plate.

Ramp Plate



Remove the weight rollers.




Weight Roller

INSPECTION

Check each weight roller for wear or damage.

Measure each weight roller O.D.

Service Limit: 15.4mm replace if below

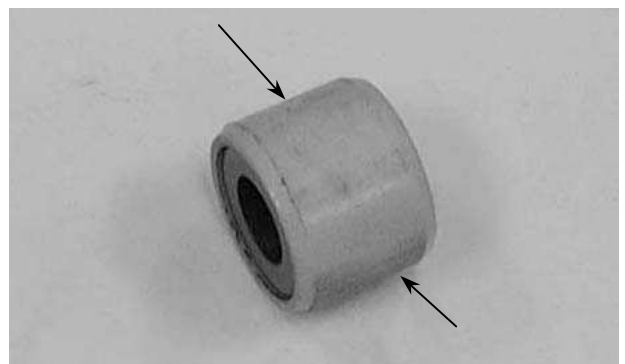

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


Measure the movable drive face bushing I.D.

Service Limit: 24.06mm replace if over



Check the drive pulley collar for wear or damage.
Measure the O.D. of the drive pulley collar sliding surface.

Service Limit: 23.94mm replace if below

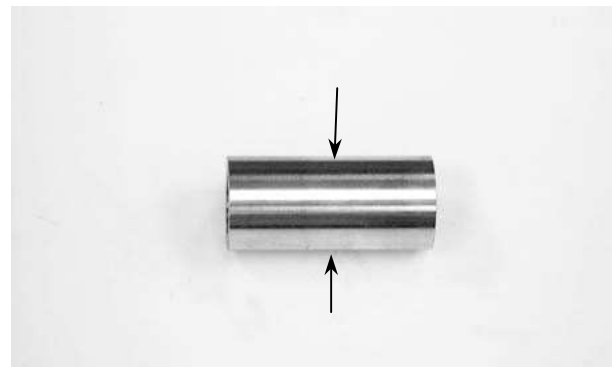


ASSEMBLY

Install the weight rollers into the movable drive face.



Weight Roller

Install the ramp plate.

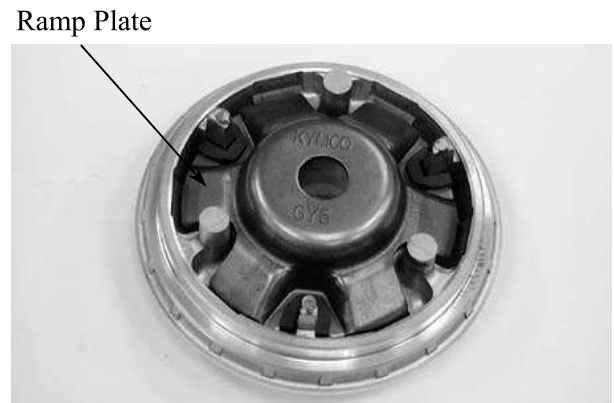

Ramp Plate


9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Insert the drive pulley collar into the movable drive face.




INSTALLATION

Install the movable drive face onto the crankshaft.

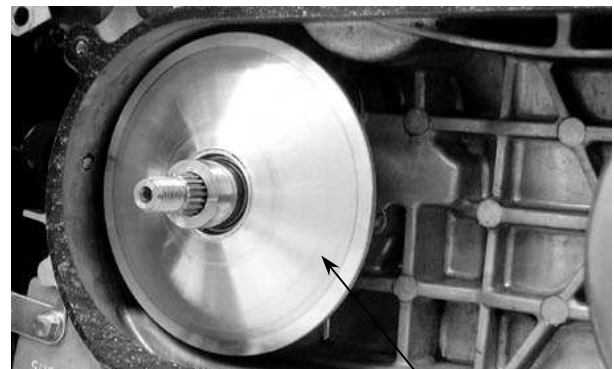

Lay the drive belt on the driven pulley.
Set the drive belt on the drive pulley collar.

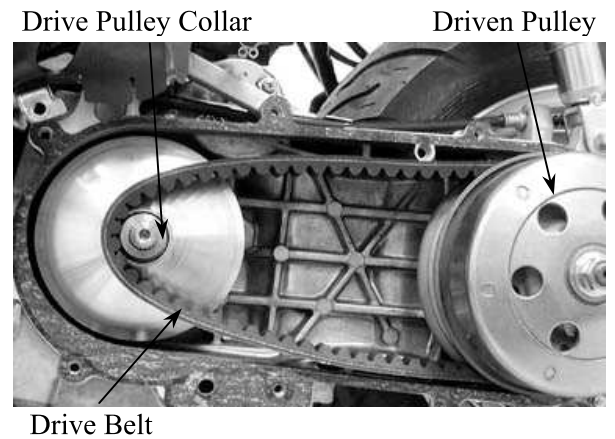

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

SUPER8 125

Install the drive pulley face, starting ratchet and drive face nut.

- *
 - When installing the drive pulley face, compress it to let the drive belt move downward to the lowest position so that the drive pulley can be tightened.
 - Install the starting ratchet by aligning the starting ratchet teeth with the crankshaft teeth.

Hold the drive pulley with the universal holder and tighten the drive face nut.


Torque: 5.5kg-m

Special

Flywheel Holder


- * Do not get oil or grease on the drive belt or pulley faces.

Drive Pulley Face

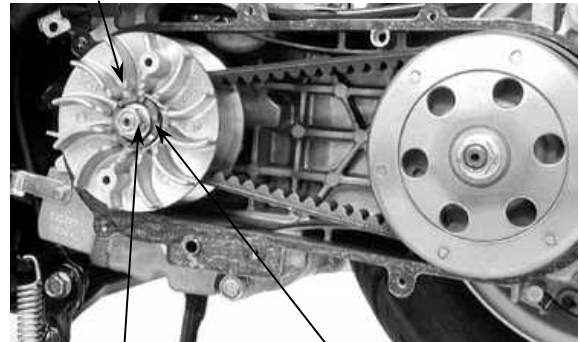

Drive Face Nut Starting Ratchet

Drive Pulley

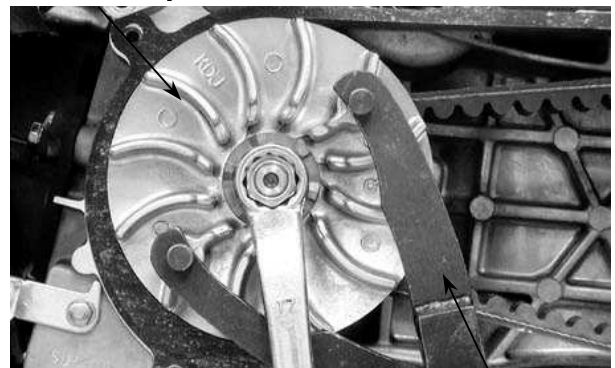

Flywheel Holder


CLUTCH/DRIVEN PULLEY

Remove the left crankcase cover.
Remove the drive pulley and drive belt.
Hold the clutch outer with the universal holder and remove the clutch outer nut.

Special

Flywheel Holder

Clutch Outer

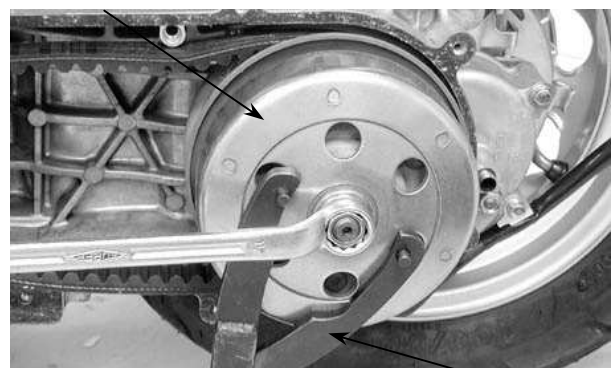

Flywheel Holder

INSPECTION

Inspect the clutch outer for wear or damage.
Measure the clutch outer I.D.


Service Limit: 125.5mm replace if over




9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Check the clutch shoes for wear or damage.
Measure the clutch lining thickness.

Service Limit: 1.5mm replace if below

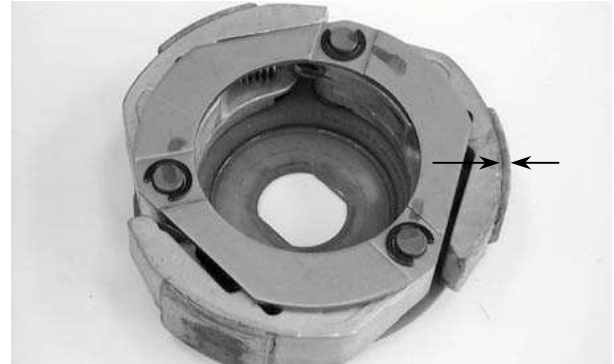

CLUTCH/DRIVEN PULLEY DISASSEMBLY

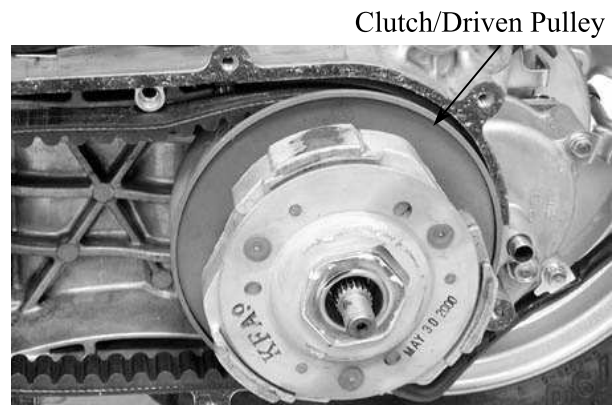


Hold the clutch/driven pulley assembly with
the clutch spring compressor.

* Be sure to use a clutch spring
compressor to avoid spring damage.

Special

Clutch Spring Compressor

Set the clutch spring compressor in a vise
and remove the clutch drive plate nut.

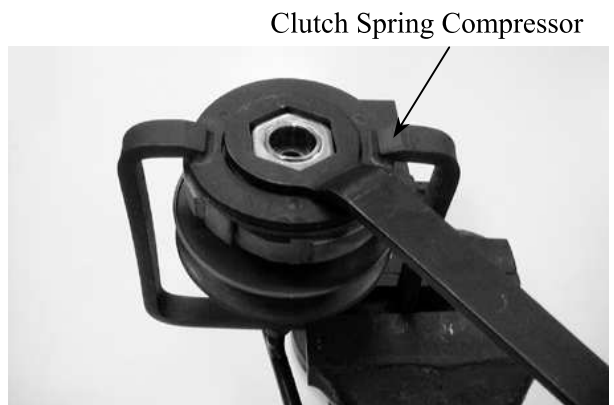


Loosen the clutch spring compressor and
disassemble the clutch/driven pulley
assembly.
Remove the seal collar.



9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Pull out the guide roller pins and guide rollers. Remove the movable driven face from the driven face.

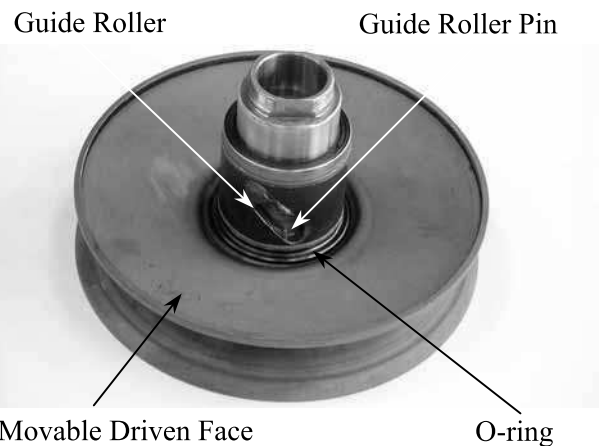


Remove the oil seal from the movable driven face.



INSPECTION

Measure the driven face spring free length.
Service Limit: 147.6mm replace if below

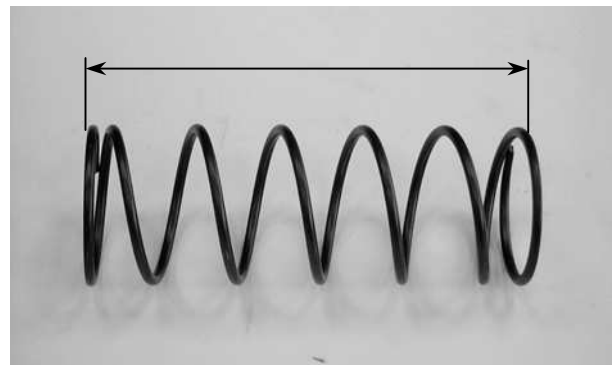

Check the driven face for wear or damage.
Measure the driven face O.D.
Service Limit: 33.94mm replace if below




9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Check the movable driven face for wear or damage.

Measure the movable driven face I.D.

Service Limit: 34.06mm replace if over

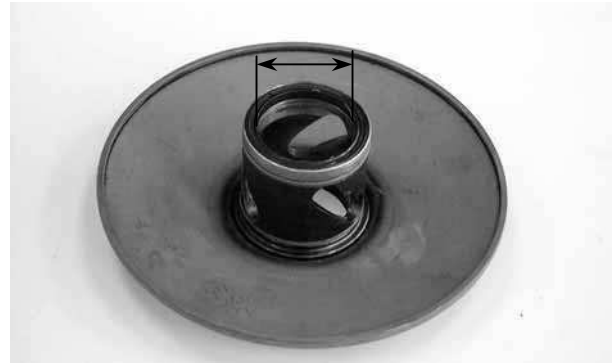

DRIVEN PULLEY FACE BEARING REPLACEMENT

Drive the inner needle bearing out of the driven pulley face.

- * Discard the removed bearing and replace with a new one.



Inner Bearing

Remove the drive the outer bearing out of the driven face.

- * Discard the removed bearing and replace with a new one.

Apply grease to the outer bearing.
Drive a new outer bearing into the driven face with the sealed end facing up.



Outer Bearing

Apply grease to the driven face bore areas.

- * Pack all bearing cavities with 9~9.5g grease.
Specified grease: Heat resistance 230°C



9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


Press a new needle bearing into the driven face.



CLUTCH DISASSEMBLY

Remove the circlips and retainer plate to disassemble the clutch.


* Keep grease off the clutch linings.

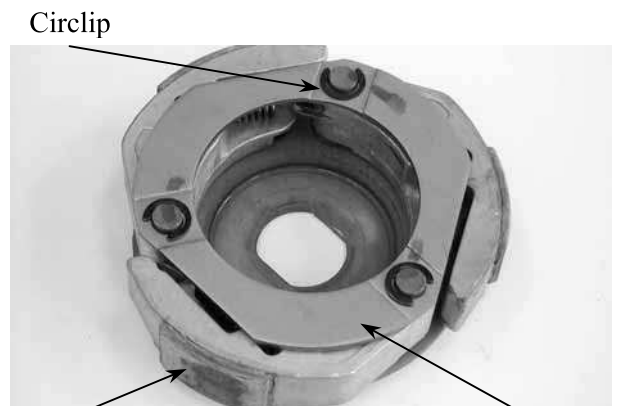

Circlip Clutch Lining Retainer Plate

CLUTCH ASSEMBLY


Install the damper rubbers on the drive plate pins.
Install the clutch weights/shoes and clutch springs onto the drive plate.
Install the retainer plate and secure with the circlips.

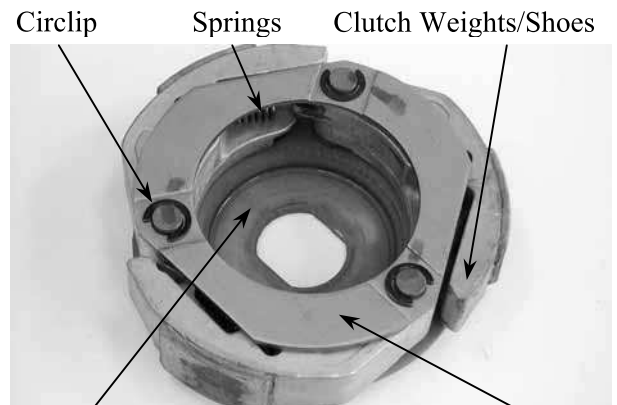

Circlip Springs Clutch Weights/Shoes Drive Plate Retainer Plate

CLUTCH/DRIVEN PULLEY ASSEMBLY

Clean the driven pulley faces and remove any grease from them.
Install the oil seal onto the moveable driven face.
Apply grease to the O-rings and install them onto the moveable driven face.

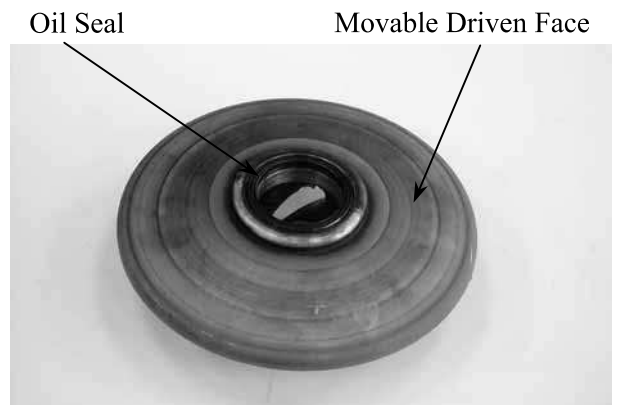


Oil Seal Movable Driven Face

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the movable driven face onto the driven face.
Apply grease to the guide rollers and guide roller pins and then install them into the holes of the driven face.
Install the seal collar.
Remove any excessive grease.

* Be sure to clean the driven face off any grease.

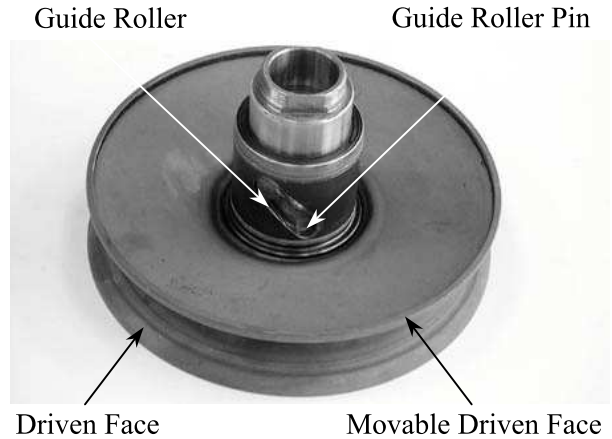

Set the driven pulley assembly, driven face spring and clutch assembly onto the clutch spring compressor.

* Align the flat surface of the driven face with the flat on the clutch drive plate.




Compress the clutch spring compressor and install the drive plate nut.
Set the clutch spring compressor in a vise and tighten the drive plate nut to the specified torque.

Torque: 5.5kg-m

* Be sure to use a clutch spring compressor to avoid spring damage.

Special

Clutch Spring Compressor

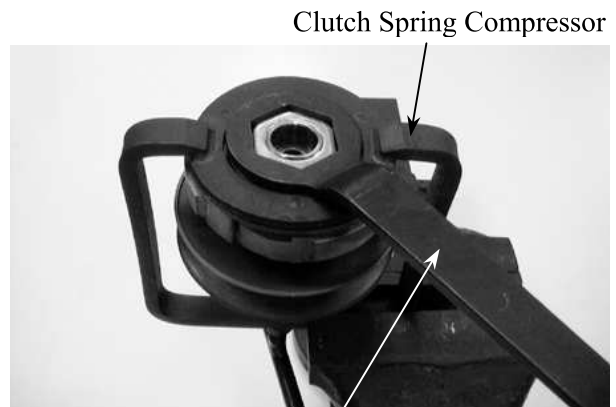


Lock Nut Wrench

INSTALLATION

Install the clutch/driven pulley onto the drive shaft.

* Keep grease off the drive shaft.

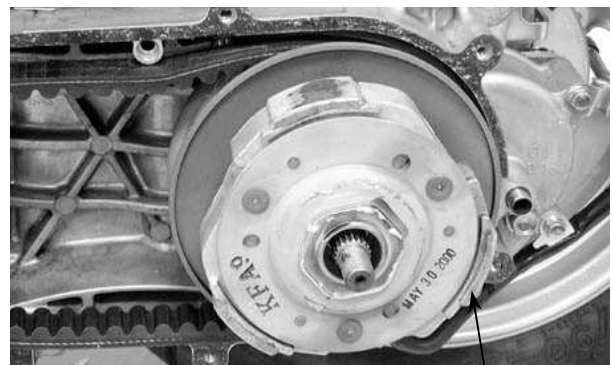

Clutch/Driven Pulley

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the clutch outer.
Hold the clutch outer with the universal
holder.


Install and tighten the clutch outer nut.

Torque: 5.5kg-m

Special

Flywheel Holder

Install the drive belt.
Install the left crankcase cover.

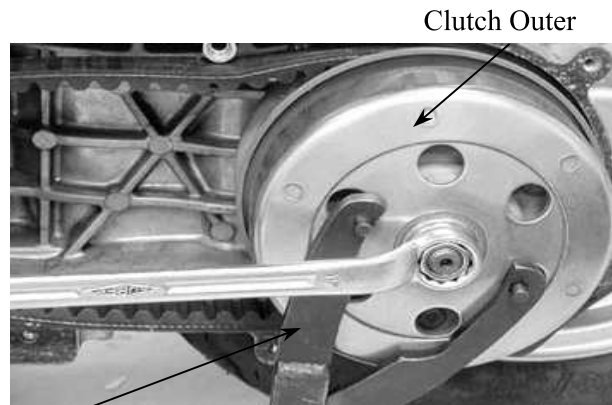


Flywheel Holder

KICK STARTER


REMOVAL

Remove the left crankcase cover.
Remove the seal rubber and dowel pins.

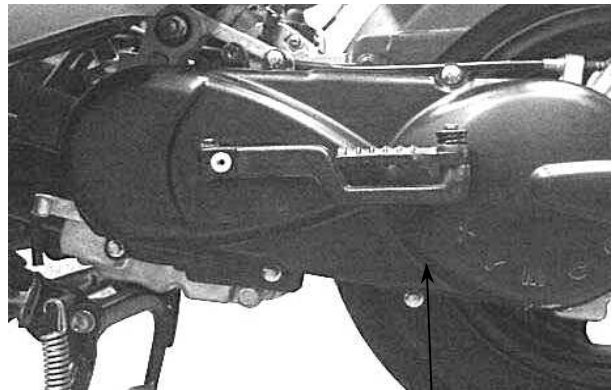


Left Crankcase Cover

Remove the kick lever.
Remove the circlip and washer from the kick
starter spindle.

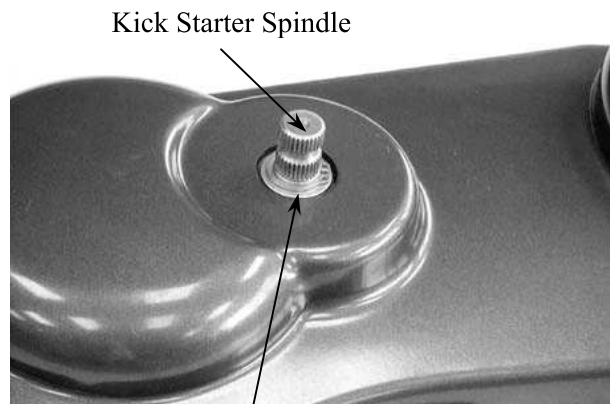

Circlip

Gently turn the kick starter spindle to remove
the starter driven gear together with the
friction spring.

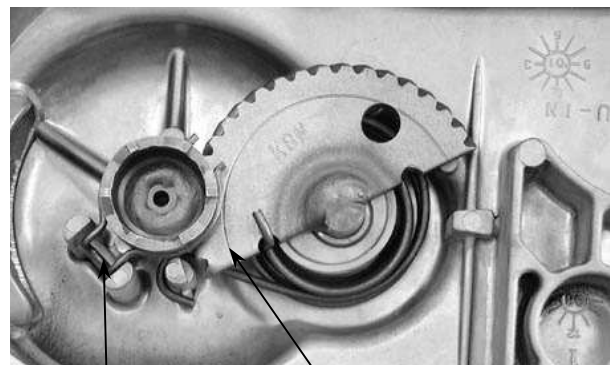

Friction Spring Starter Driven Gear

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


Remove the kick starter spindle and return spring from the left crankcase cover.
Remove the kick starter spindle bushing.

INSPECTION


Inspect the kick starter spindle and gear for wear or damage.
Inspect the return spring for weakness or damage.
Inspect the kick starter spindle bushings for wear or damage.

Inspect the starter driven gear for wear or damage.
Inspect the friction spring for wear or damage.

Inspect the kick starter spindle and starter driven gear forcing parts for wear or damage.

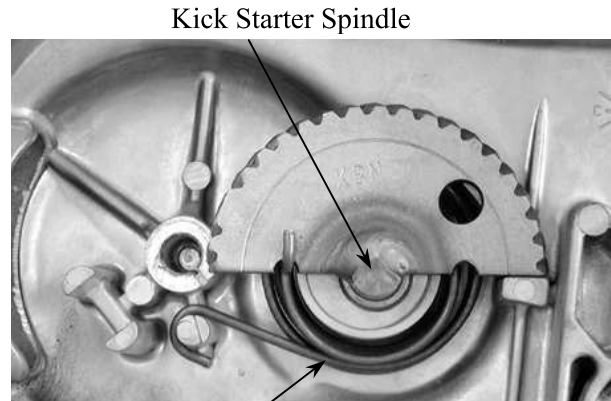

Return Spring

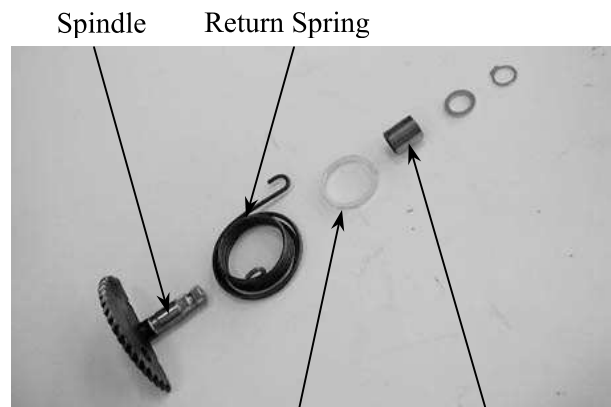


Plastic Bushing Spindle Bushing

Friction Spring



Starter Driven Gear

Kick Starter Spindle Forcing Part

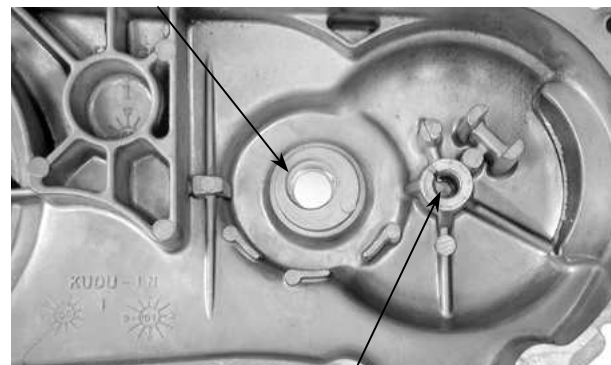


Starter Driven Gear Shaft Forcing Part

9. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

INSTALLATION

Install the kick starter spindle bushings and return spring onto the left crankcase cover.


- * When installing the return spring, use a screw driver to press the inward and outward return spring hooks into their original positions respectively.

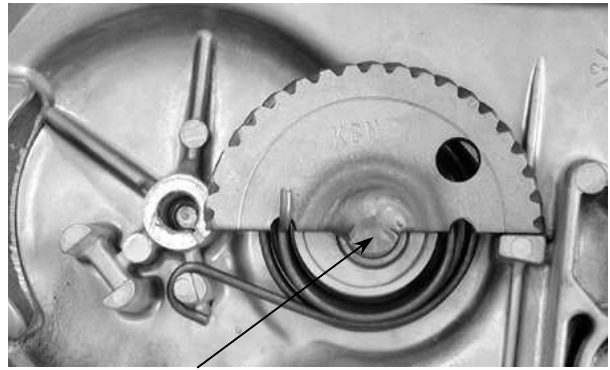

Kick Starter Spindle

Friction Spring

Install the starter driven gear and friction spring as the figure shown.

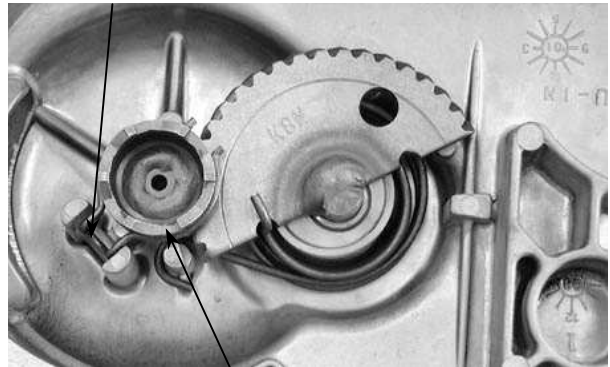

Starting Ratchet


Left Crankcase Cover

Install the kick lever.

Install the left crankcase cover and tighten the cover bolts diagonally.


Connect the drive belt air tube and tighten the band screw.

- * For drum brake, be sure to install the rear brake cable clamp to the specified location and install the brake cable into the brake cable holder.

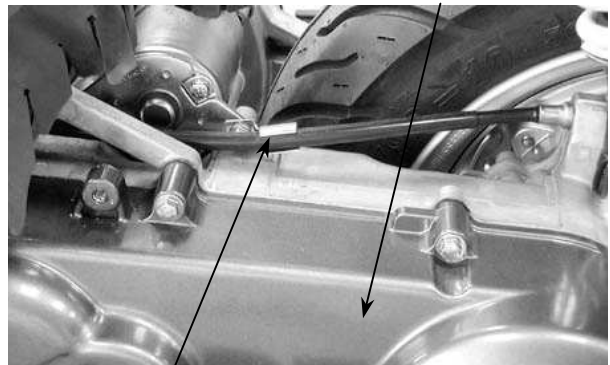

Rear Brake Cable Clamp

10. FINAL REDUCTION

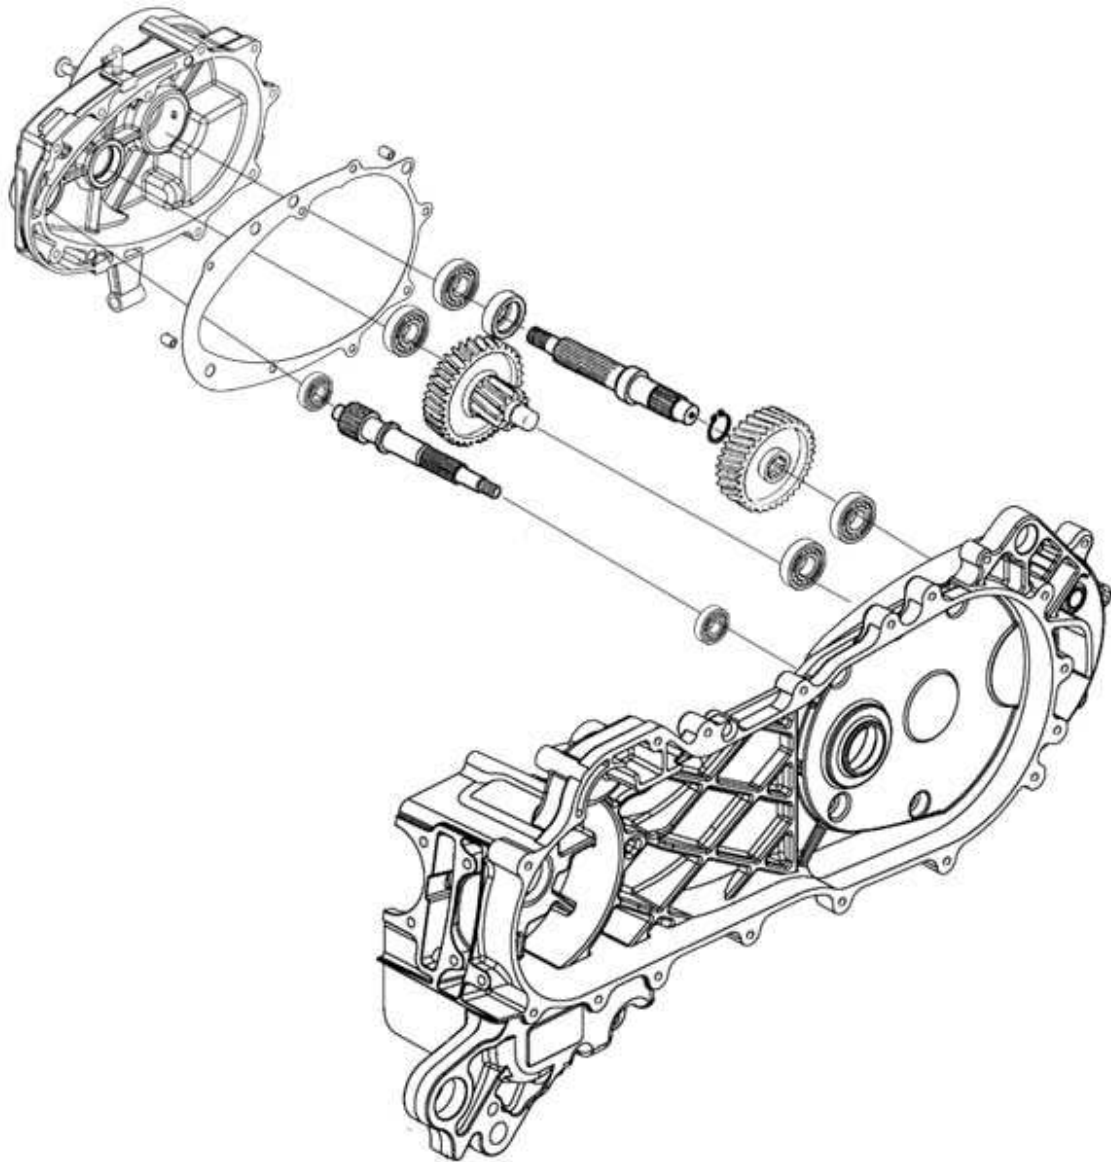

10

| | |
|--------------------------------------|--------------------------------------|
| SERVICE INFORMATION.....10-1 | FINAL REDUCTION INSPECTION..... 10-2 |
| TROUBLESHOOTING.....10-1 | BEARING REPLACEMENT 10-3 |
| FINAL REDUCTION DISASSEMBLY10-2 | FINAL REDUCTION ASSEMBLY..... 10-4 |

SERVICE INFORMATION**SPECIFICATIONS**

Specified Oil: GEAR OIL SAE 90#

Oil Capacity: At disassembly : 0.2 liter
 At change : 0.18 liter

SPECIAL TOOLS

Bearing puller, 10,12,15,18mm

TROUBLESHOOTING**Engine starts but motorcycle won't move**

- Damaged transmission
- Seized or burnt transmission
- Faulty drive belt
- Faulty clutch

Abnormal noise

- Worn, seized or chipped gears
- Worn bearing


Oil leaks

- Oil level too high
- Worn or damaged oil seal


10. FINAL REDUCTION

FINAL REDUCTION DISASSEMBLY

- Remove the rear brake cable. (⇒13-3)
- Remove the rear wheel. (⇒13-2)
- Remove the left crankcase cover. (⇒9-2)
- Remove the clutch/driven pulley. (⇒9-10)
- Drain the transmission gear oil into a clean container.
- Remove the transmission case cover attaching bolts.
- Remove the transmission case cover.
- Remove the gasket and dowel pins.

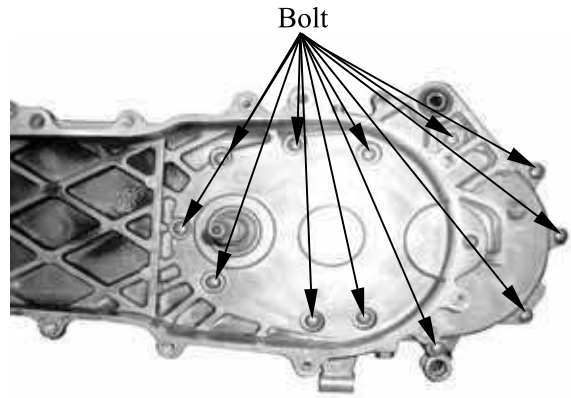


Remove the final gear and countershaft.

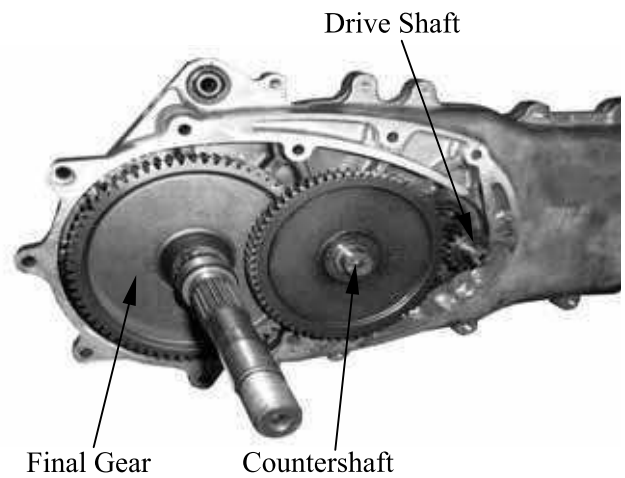


FINAL REDUCTION INSPECTION

Inspect the countershaft and gear for wear or damage.

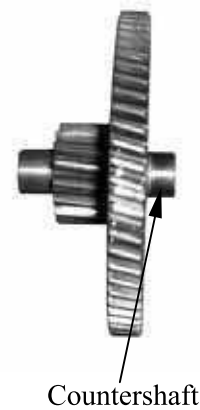


Inspect the final gear and final shaft for wear, damage or seizure.

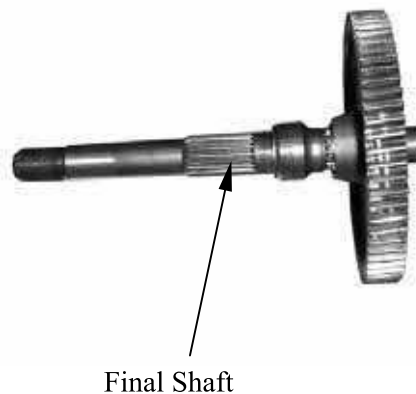


10. FINAL REDUCTION

Check the left crankcase bearings for excessive play and inspect the oil seal for wear or damage.

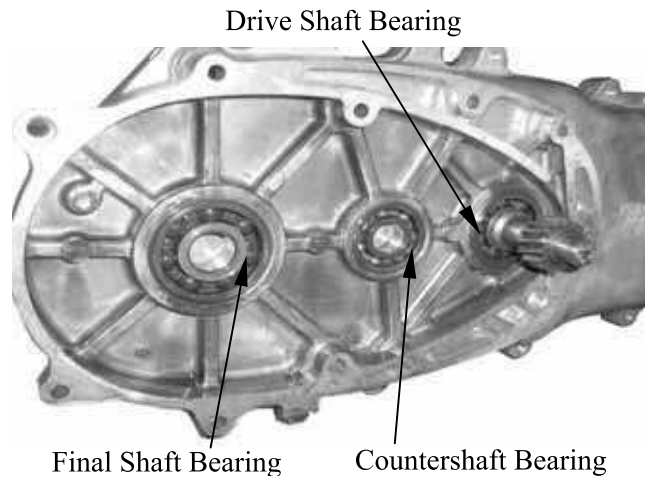

Inspect the drive shaft and gear for wear or damage. Check the transmission case cover bearings for excessive play and inspect the final shaft bearing oil seal for wear or damage.

Do not remove the transmission case cover except for necessary part replacement. When replacing the drive shaft, also replace the bearing and oil seal.

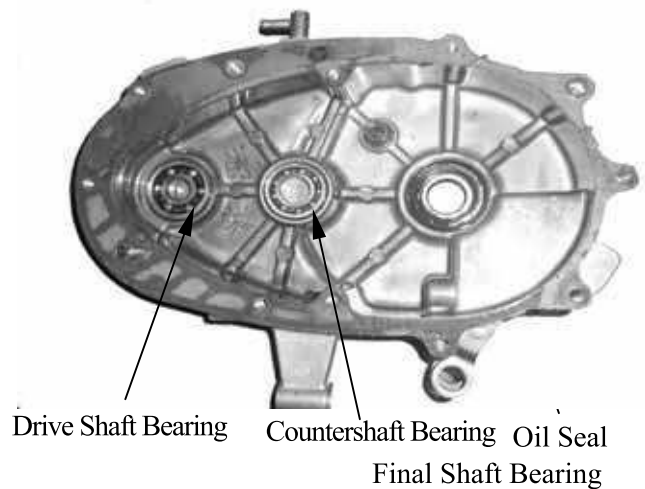


BEARING REPLACEMENT (TRANSMISSION CASE COVER)


Remove the transmission case cover bearings using a bearing puller. Remove the final shaft oil seal.

Special

Bearing Puller

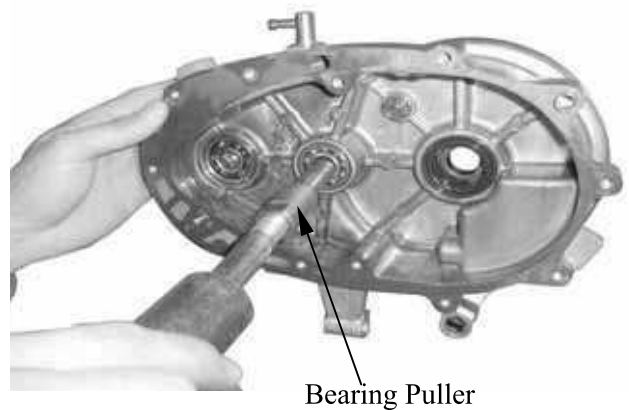

Drive new bearings into the transmission case cover.

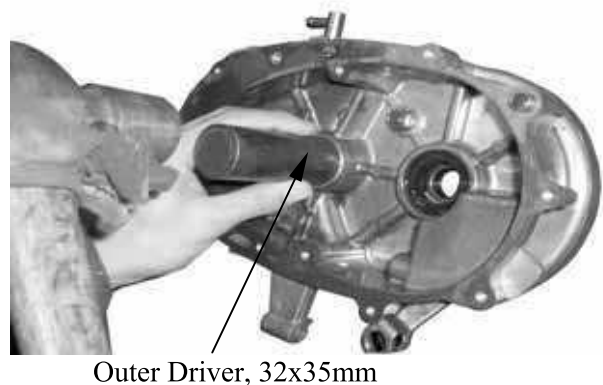


10. FINAL REDUCTION

BEARING REPLACEMENT (LEFT CRANKCASE)

Remove the drive shaft.
Remove the drive shaft oil seal.
Remove the left crankcase bearings using a bearing puller.


 Special

Bearing Puller

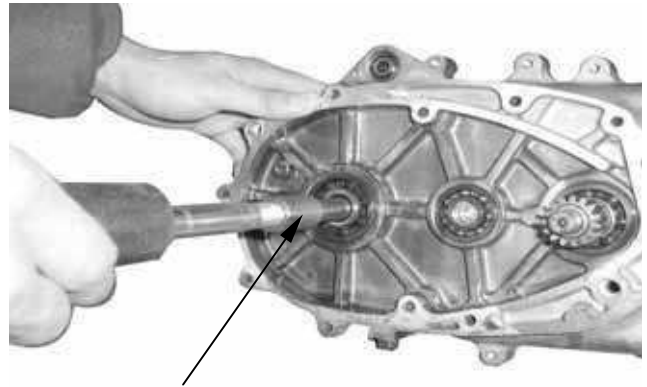

Bearing Puller, 12mm


Drive new bearings into the left crankcase.
Install a new drive shaft oil seal.

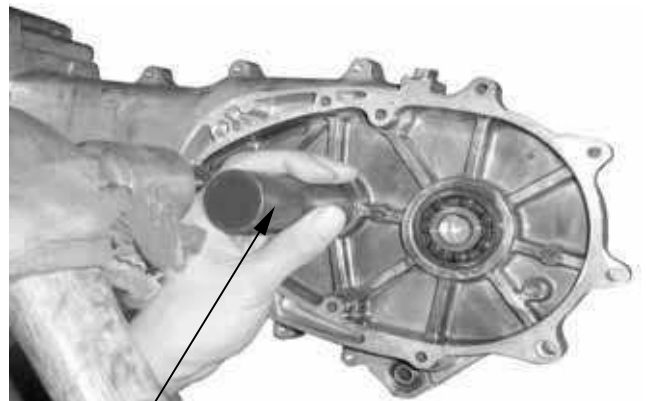

Pilot


FINAL REDUCTION ASSEMBLY

Install the drive shaft into the left crankcase.

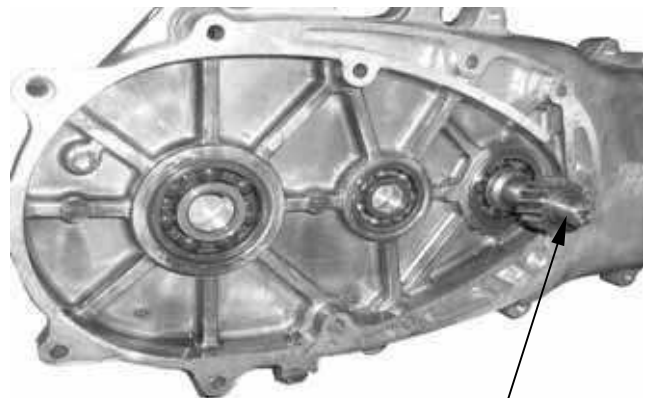

Drive Shaft


Install the final gear and final shaft into the left crankcase.

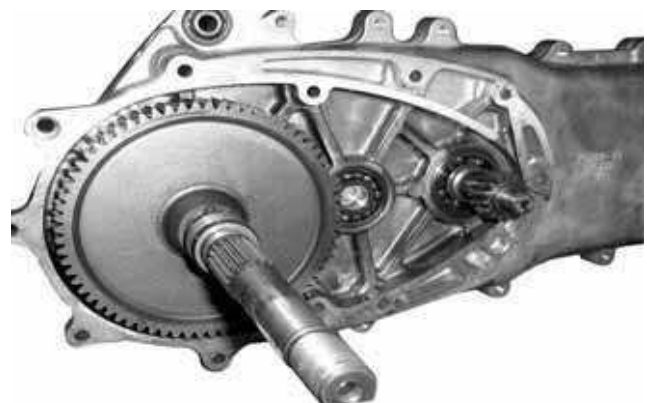


10. FINAL REDUCTION

SUPER8 125

Install the countershaft and gear into the left crankcase.
Install the dowel pins and a new gasket.

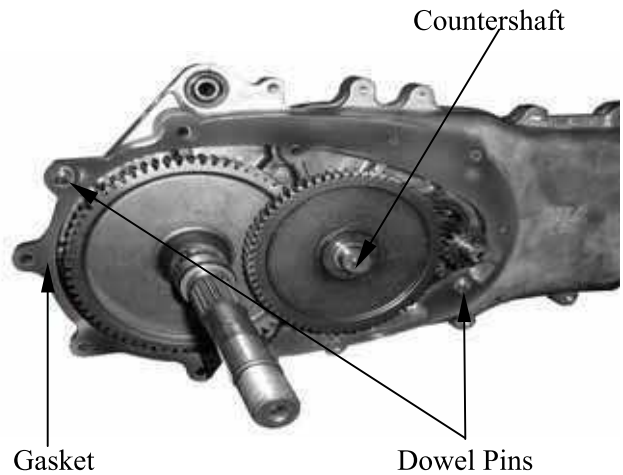


Install the transmission case cover.

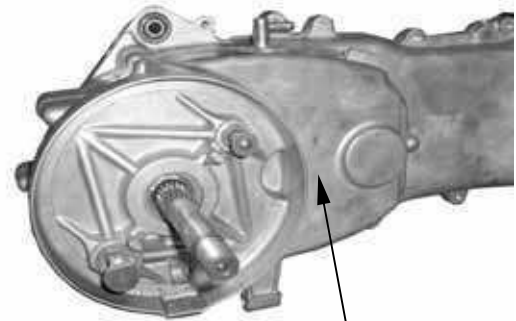

Transmission Case Cover Bolts

Install and tighten the transmission case cover bolts.
Install the clutch/driven pulley. (⇒9-13)

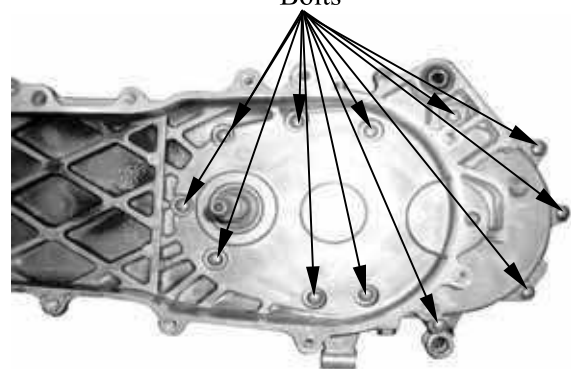

After installation, fill the transmission case with the specified oil. (⇒3-7)

- -
- Place the motorcycle on its main stand on level ground.
 - Check the oil sealing washer for wear or damage.

Specified Gear Oil: SAE90#

Oil Capacity:


At disassembly : 0.2 liter

At change : 0.18 liter

Install and tighten the oil check bolt.

Torque: 0.8~1.2kgf-m


Start the engine and check for oil leaks.
Check the oil level from the oil check bolt hole and add the specified oil to the proper level if the oil level is low.

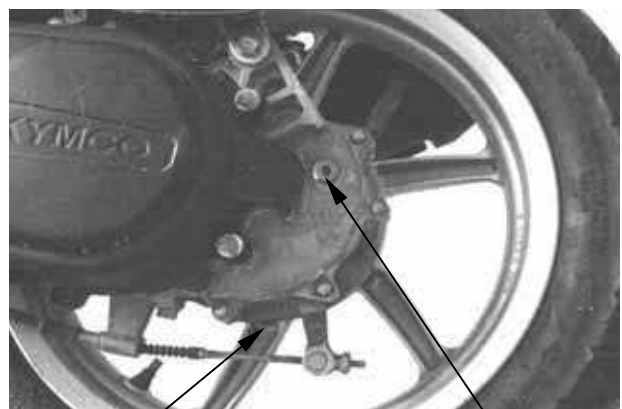

Drain Bolt

Oil Check Bolt Hole/Oil Filler

11. CRANKCASE/CRANKSHAFT

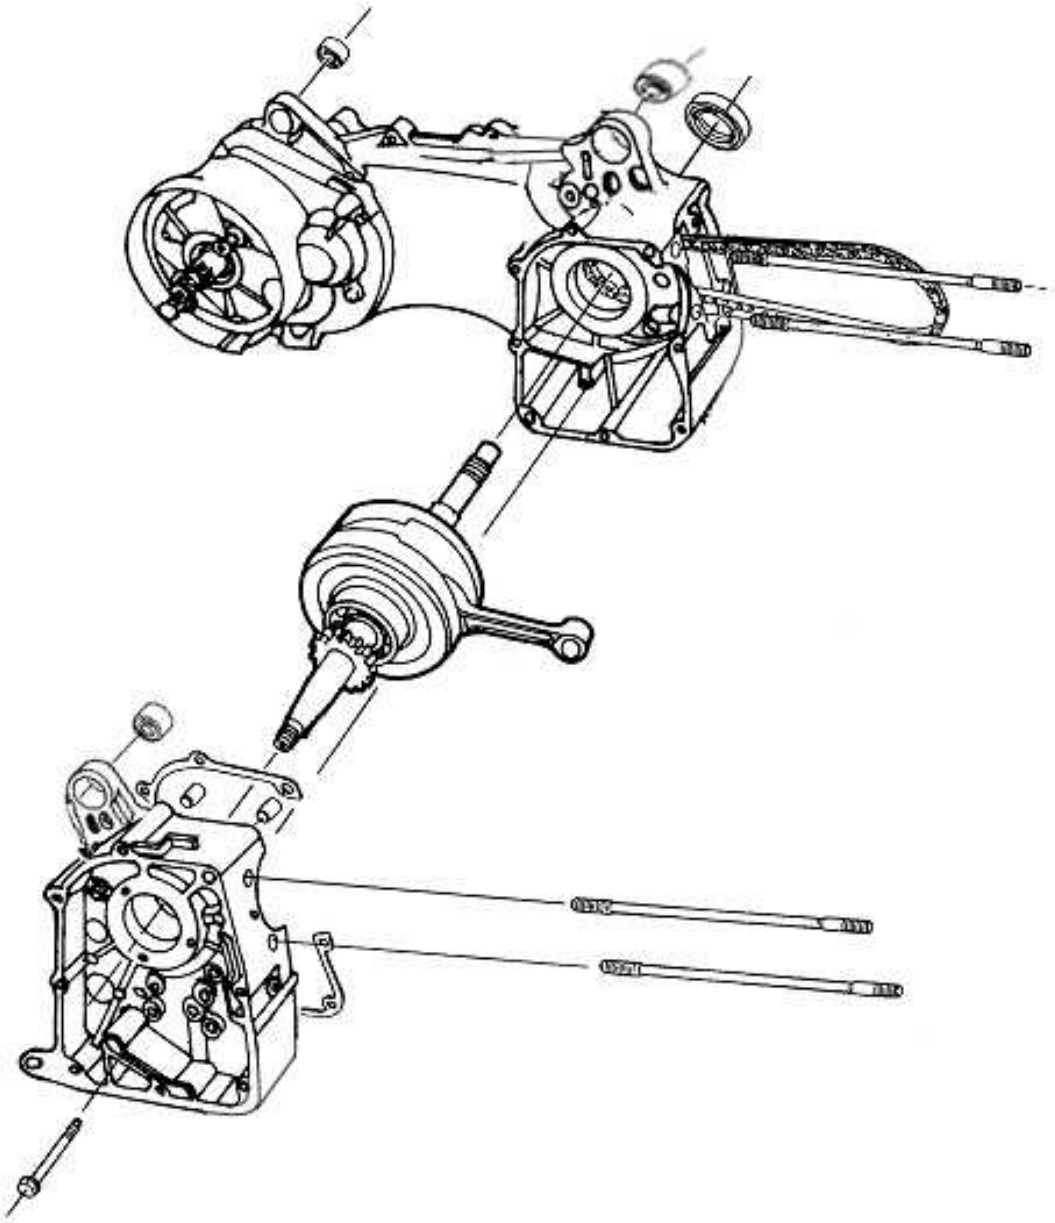

11. CRANKCASE/CRANKSHAFT

| | | | |
|----------------------------|------|-------------------------|------|
| SERVICE INFORMATION..... | 11-1 | CRANKSHAFT..... | 11-3 |
| TROUBLESHOOTING | 11-1 | CRANKCASE ASSEMBLY..... | 11-4 |
| CRANKCASE SEPARATION | 11-2 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- This section covers crankcase separation to service the crankshaft. The engine must be removed for this operation.
- The following parts must be removed before separating the crankcase.
 - Cylinder head (⇒Section 7)
 - Cylinder/piston (⇒Section 8)
 - Drive and driven pulleys (⇒Section 9)
 - A.C. generator (⇒Section 14)
 - Carburetor/air cleaner (⇒Section 5)
 - Rear wheel/rear shock absorber (⇒Section 13)
 - Starter motor (⇒Section 16)
 - Oil pump (⇒Section 4)

SPECIFICATIONS

| | Item | Standard (mm) | Service Limit (mm) |
|------------|---|---------------|--------------------|
| Crankshaft | Connecting rod big end side clearance | 0.10~0.35 | 0.55 |
| | Connecting rod big end radial clearance | 0-0.008 | 0.05 |
| | Runout | — | 0.10 |

TORQUE VALUES

| | |
|----------------------------------|--------------|
| Crankcase bolt | 0.8~1.2kgf-m |
| Cam chain tensioner slipper bolt | 0.8~1.2kgf-m |

TROUBLESHOOTING

Excessive engine noise


- Excessive bearing play
- Excessive crankpin bearing play

11. CRANKCASE/CRANKSHAFT


CRANKCASE SEPARATION

Remove the two crankcase attaching bolts.
Separate the left and right crankcase halves.


* Do not damage the crankcase gasket surface.

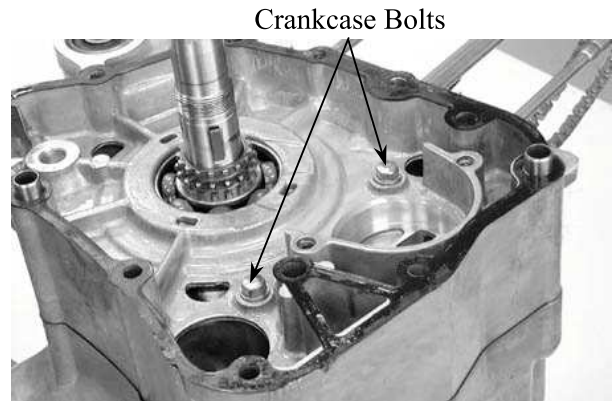

Remove the gasket and dowel pins.

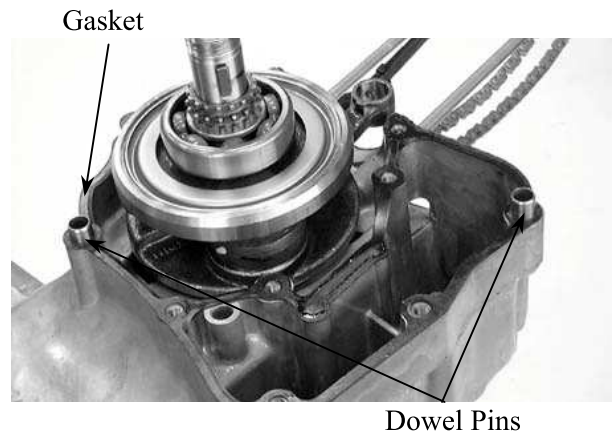


Remove the crankshaft and cam chain from the left crankcase.

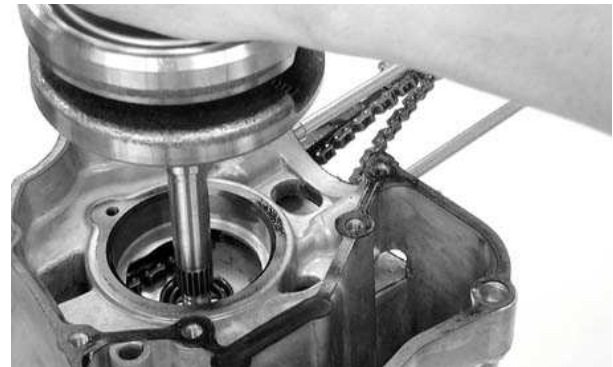

Clean off all gasket material from the crankcase mating surfaces.

* Avoid damaging the crankcase mating surfaces.

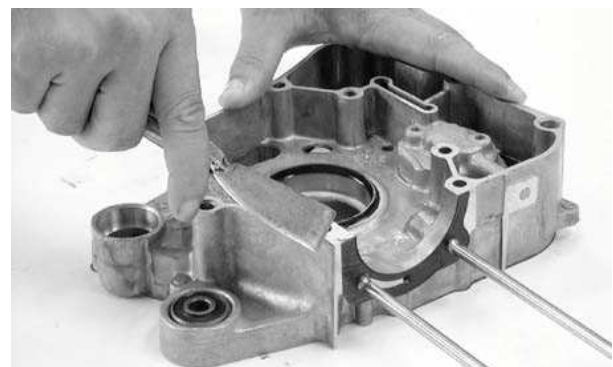

11. CRANKCASE/CRANKSHAFT

Remove the oil seal from the right crankcase.
Check the oil seal lip for wear or deterioration.
The installation sequence is the reverse of removal.

CRANKSHAFT INSPECTION

Measure the connecting rod big end side clearance.


Service Limit: 0.55mm replace if over



Connecting Rod Big End

Measure the connecting rod big end radial clearance at two points at right angles to the shaft.


Service Limit: 0.05mm replace if over

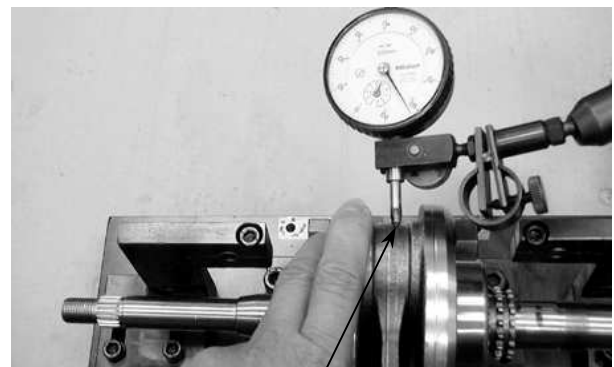

Measuring Location


Measure the crankshaft runout.

Service Limit: 0.10mm replace if over

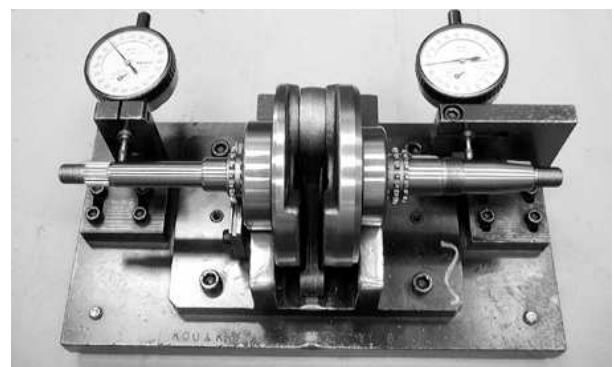

11. CRANKCASE/CRANKSHAFT

Turn the crankshaft bearings and check for excessive play.
If they do not turn smoothly, quietly or if they fit loosely in the crankshaft, replace the crankshaft as a set.

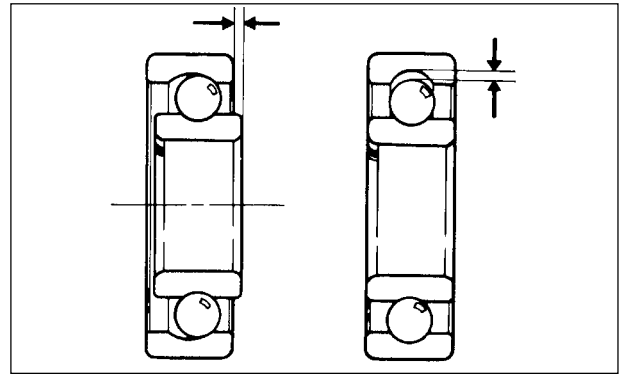


CRANKCASE ASSEMBLY

Install the cam chain into the left crankcase.



Cam Chain


Install the crankshaft into the left crankcase.

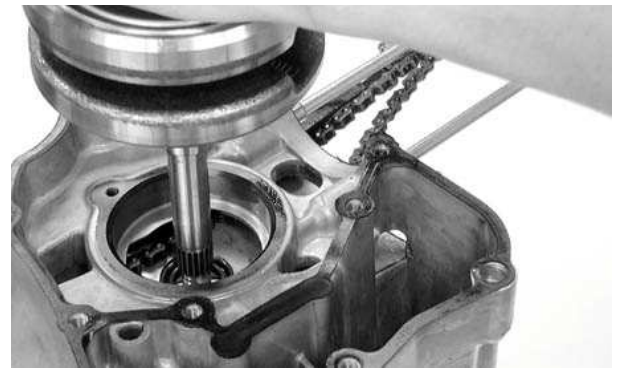

Install the dowel pins and a new gasket onto the left crankcase.

* Place the right crankcase over the crankshaft and onto the left crankcase.

Gasket

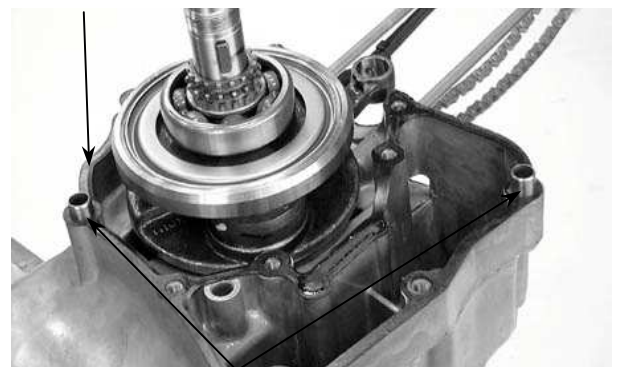


Dowel Pins


11. CRANKCASE/CRANKSHAFT

Tighten the two crankcase attaching bolts.

Torque: 0.9kg-m

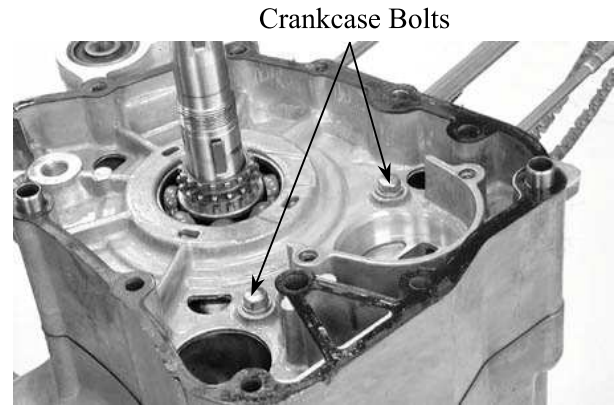

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

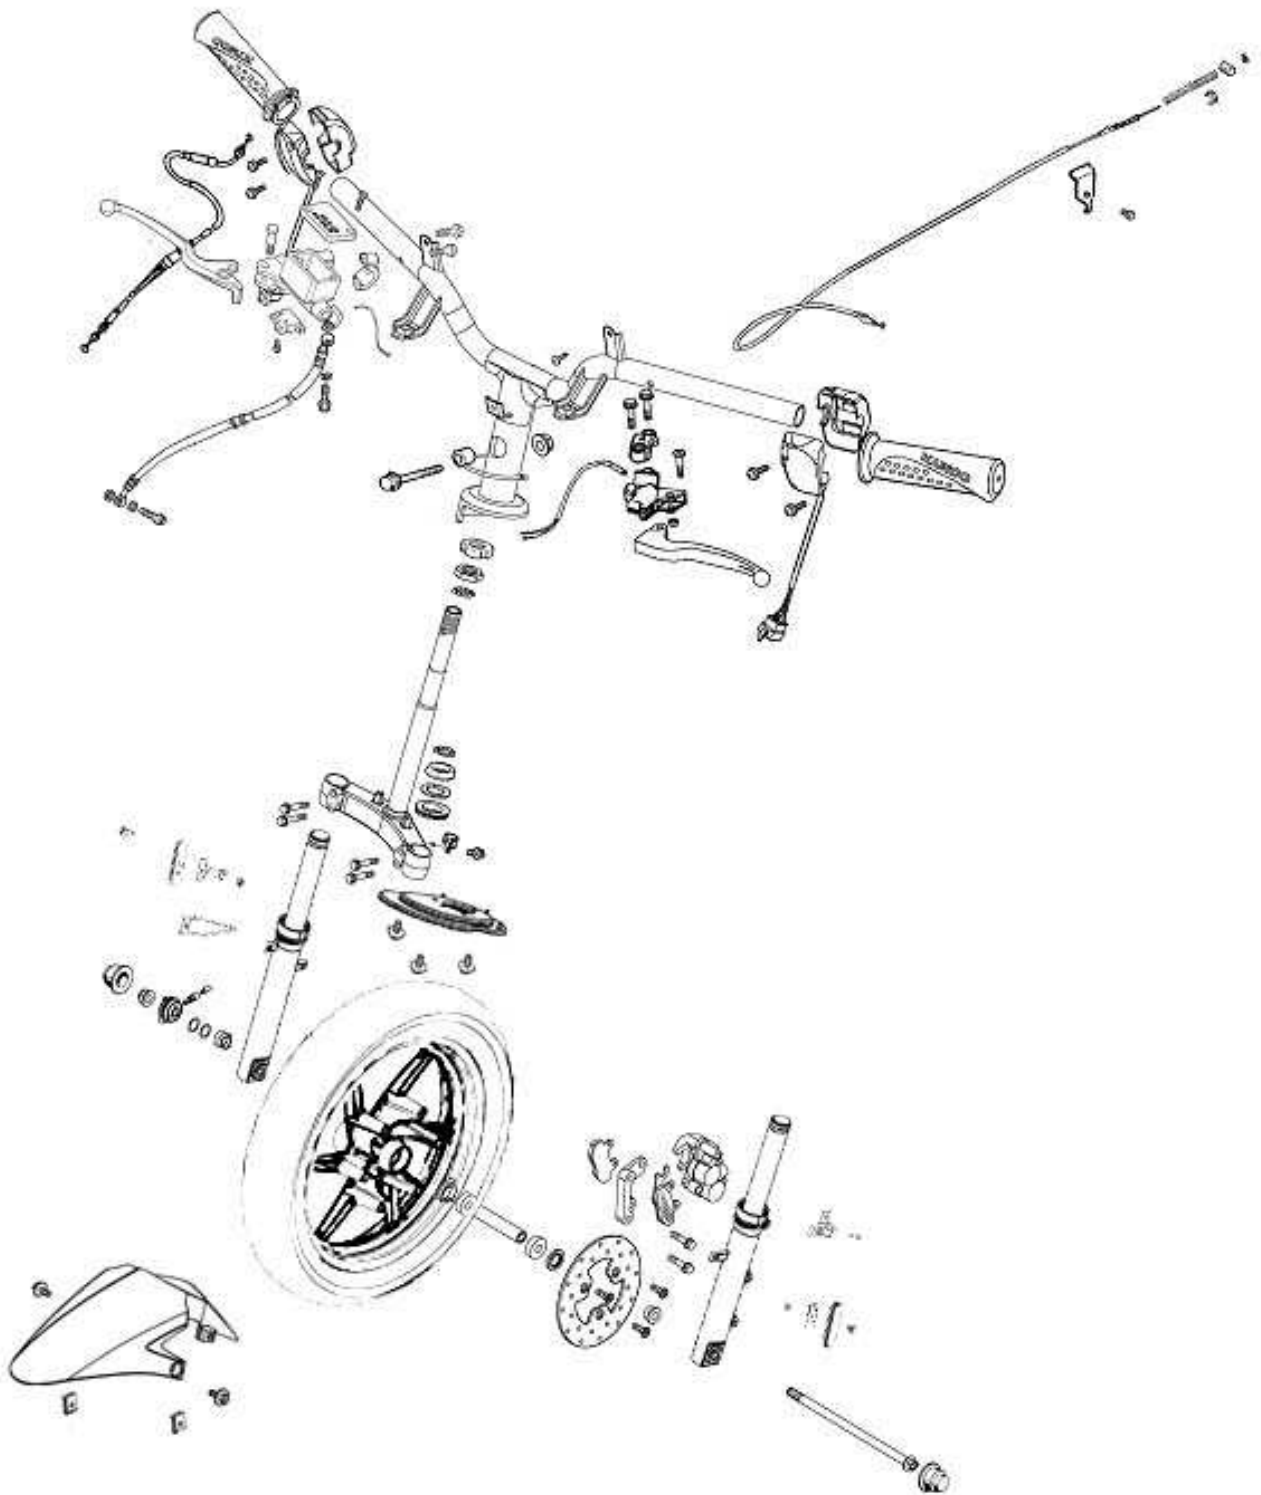

12

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION



SUPER8 125

| | | | |
|---------------------------|------|---------------------------|-------|
| SERVICE INFORMATION | 12-1 | FRONT SHOCK ABSORBER..... | 12-18 |
| TROUBLESHOOTING | 12-2 | FRONT FORK..... | 12-21 |
| STEERING HANDLEBAR..... | 12-3 | | |
| FRONT WHEEL..... | 12-4 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- Remove the motorcycle frame covers before removing the front wheel. Jack the motorcycle front wheel off the ground and be careful to prevent the motorcycle from falling down.
- During servicing, keep oil or grease off the brake drum and brake linings.

SPECIFICATIONS

| Item | | Standard (mm) | Service Limit (mm) |
|---|--------|---------------|--------------------|
| Axle shaft runout | | — | 0.2 |
| Front wheel rim runout | Radial | — | 2.0 |
| | Axial | — | 2.0 |
| Front shock absorber spring free length | | 230 | 226.5 |
| | | | |
| | | | |

TORQUE VALUES

| | |
|---------------------------|--------------|
| Handlebar bolt | 4.5~5.5kgf-m |
| Steering stem lock nut | 6.0~8.0kgf-m |
| Steering top cone race | 0.5~1.3kgf-m |
| Front shock absorber bolt | 3.0kgf-m |
| Front axle nut | 5.0~7.0kgf-m |
| Brake arm bolt | 0.8~1.2kgf-m |

SPECIAL TOOLS

Long socket wrench,32mm 8angle

TROUBLESHOOTING

Hard steering (heavy)

- Excessively tightened steering stem top cone race
- Broken steering balls
- Insufficient tire pressure

Steers to one side or does not track straight

- Uneven front shock absorbers
- Bent front fork
- Bent front axle or uneven tire

Front wheel wobbling

- Bent rim
- Excessive wheel bearing play
- Bent spoke plate
- Faulty tire
- Improperly tightened axle nut

Soft front shock absorber

- Weak shock springs
- Insufficient damper oil

Front shock absorber noise

- Slider bending
- Loose fork fasteners
- Lack of lubrication

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION


STEERING HANDLEBAR

REMOVAL

Remove the handlebar front and rear covers.
(⇒2-2)

Remove the two bolts attaching each of the
front and rear brake levers.

Remove the front and rear brake levers.

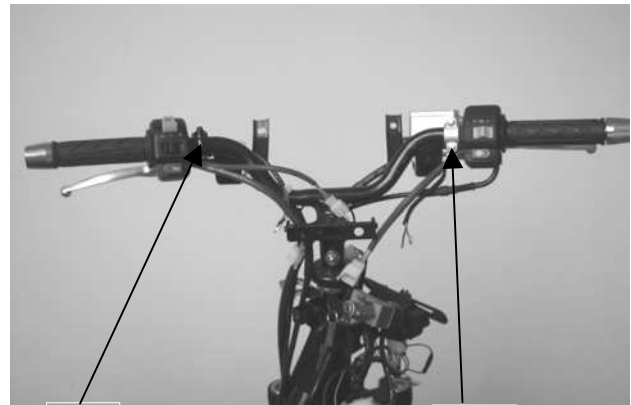


Bolts

Bolts

Remove the two throttle holder screws and
throttle holder.

Disconnect the throttle cable from the throttle
pipe and then remove the throttle pipe from
the handlebar.

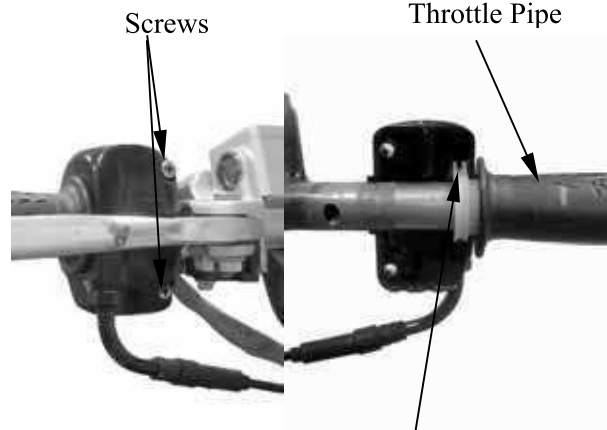


Screws

Throttle Pipe

Throttle Cable

Remove the handlebar lock nut and bolt to
remove the handlebar.

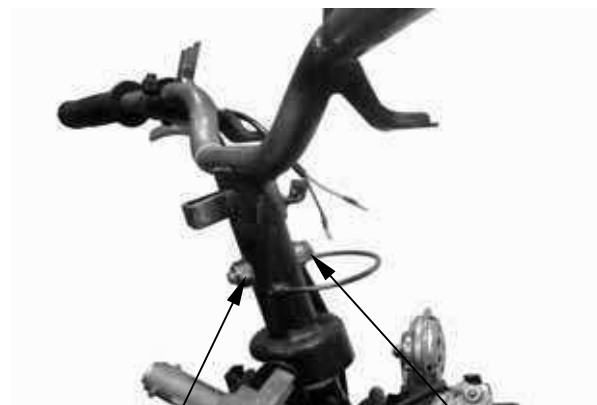

Nut

Bolt

Bolt Orifice

INSTALLATION

Install the handlebar onto the steering stem
by aligning the tab on the handlebar with the
bolt orifice on the steering stem.


Install and tighten the handlebar bolt and lock
nut.

Torque: 4.5~5.5kgf-m




12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Apply grease to the tip of the throttle pipe.
Install the throttle pipe and connect the
throttle cable.

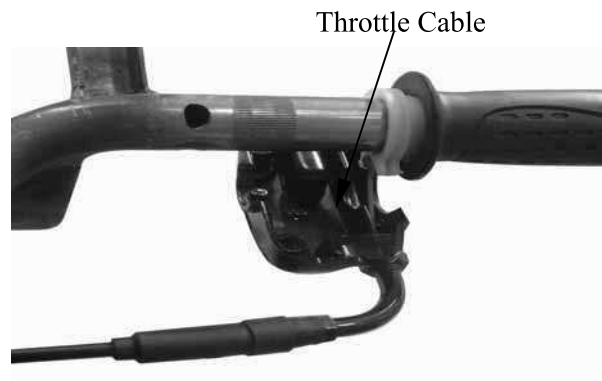


Install the front and rear brake levers in the
reverse order of removal.

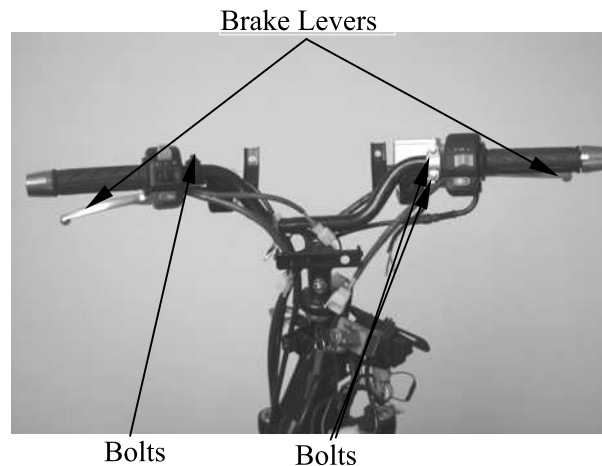

FRONT WHEEL REMOVAL

Jack the motorcycle front wheel off the
ground.
Remove the speedometer cable set screw and
disconnect the speedometer cable.
Remove the front axle nut and pull out the
axle.
Remove the front wheel.
Remove the and speedometer gear box and
side collar.

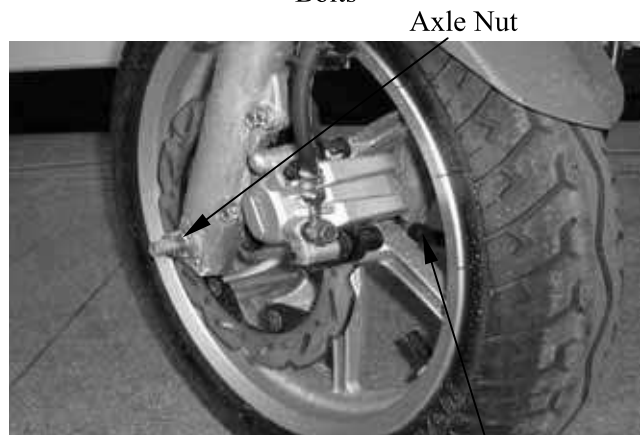


INSPECTION

AXLE RUNOUT

Set the axle in V blocks and measure the
runout using a dial gauge.
The actual runout is $\frac{1}{2}$ of the total indicator
reading.

Service Limit: 0.2mm replace if over

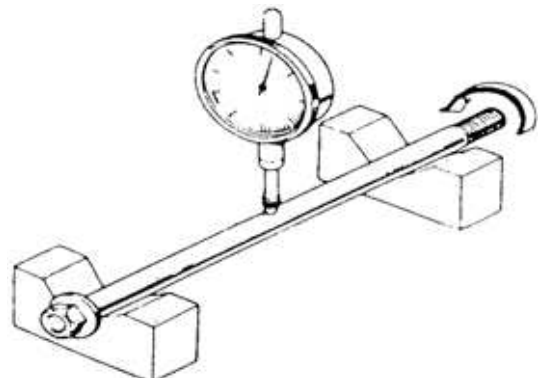

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION


WHEEL RIM

Check the wheel rim runout.


Service Limits:

Radial: 2.0mm replace if over

Axial: 2.0mm replace if over

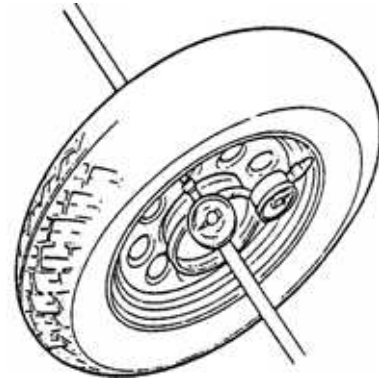


Turn the wheel bearings and replace the bearings if they are noisy or have excessive play.

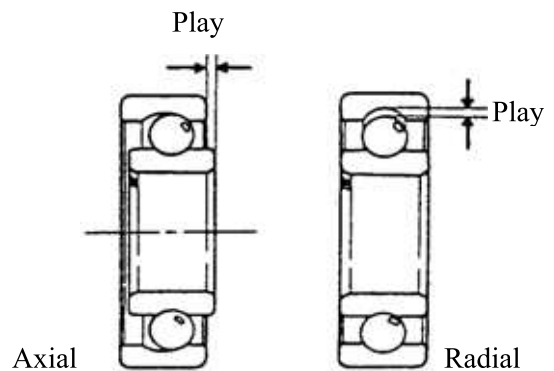

DISASSEMBLY

Remove the dust seal.

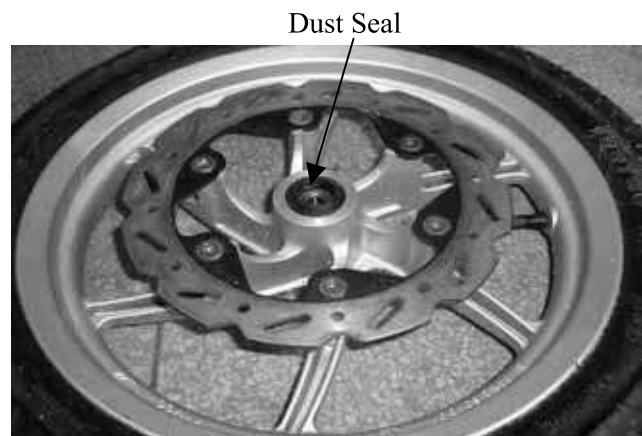


12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION


Remove the front wheel bearings and distance collar.

Special

Bearing Puller

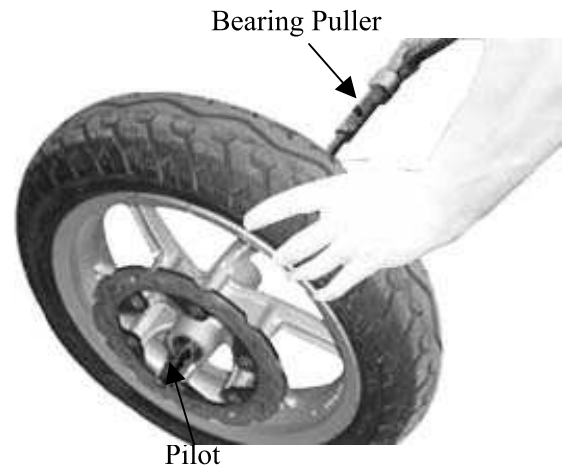


ASSEMBLY

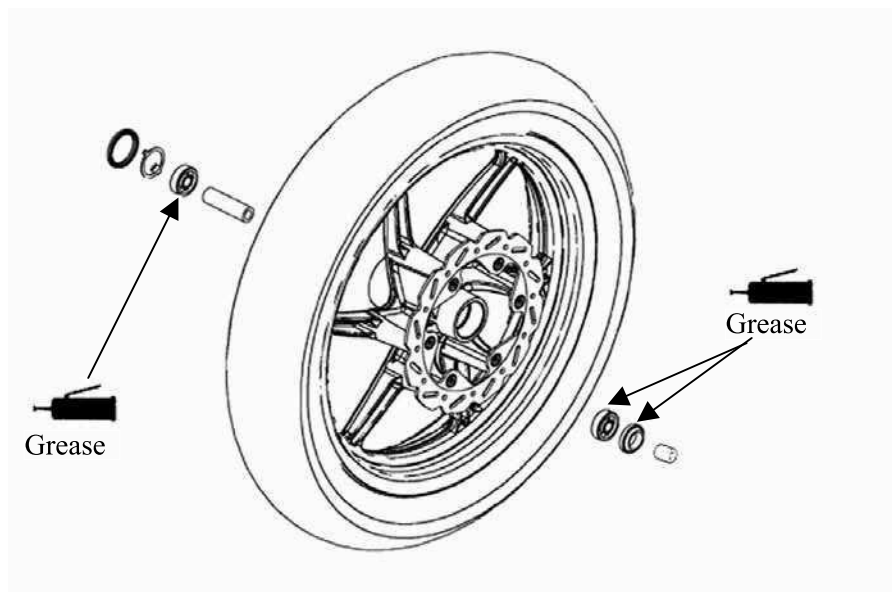


Pack all bearing cavities with grease.
Drive in the left bearing.
Install the distance collar.
Drive in the right bearing.

- Drive in the bearing squarely with the sealed end facing out.

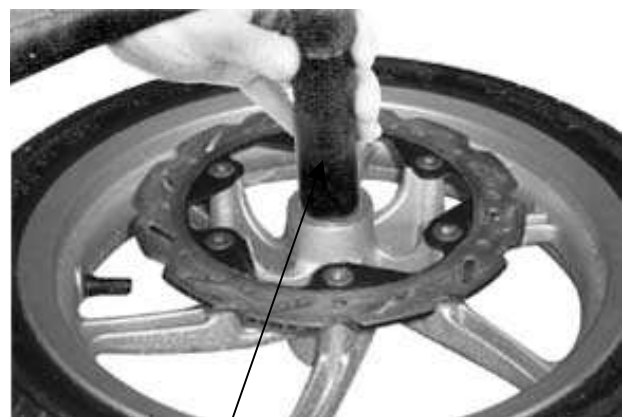

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Apply grease to a new dust seal lip and install the dust seal.
Install the side collar.

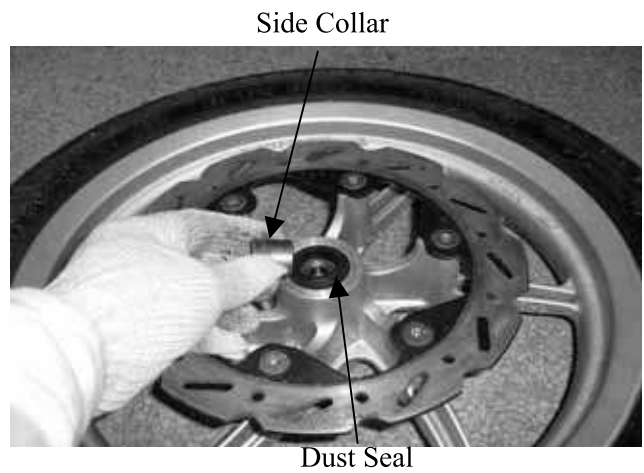

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION


HYDRAULIC BRAKE (FRONT BRAKE)

Brake Fluid Replacement/Air Bleeding

Check the brake fluid level on level ground.

- When operating the brake lever, the brake reservoir cap must be tightened securely to avoid spill of brake fluid.
- When servicing the brake system, use shop towels to cover plastic parts and coated surfaces to avoid damage caused by spill of brake fluid.

Upper Limit

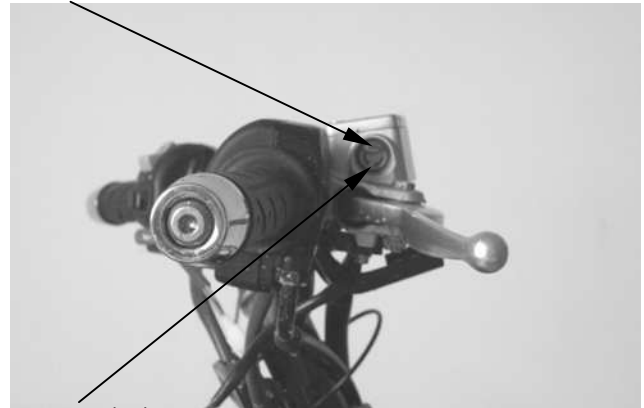

Lower Limit

Brake Fluid Bleeding


In order to avoid spill of brake fluid, connect a transparent hose to the bleed valve.

Warning

Brake fluid spilled on brake pads or brake disk will reduce the braking effect. Clean the brake pads and brake disk with a high quality brake degreaser.

Fully apply the brake lever and then loosen the brake caliper bleed valve to drain the brake fluid until there is no air bubbles in the brake fluid. Then, tighten the bleed valve. Repeat these steps until the brake system is free of air.

Bleed Valve

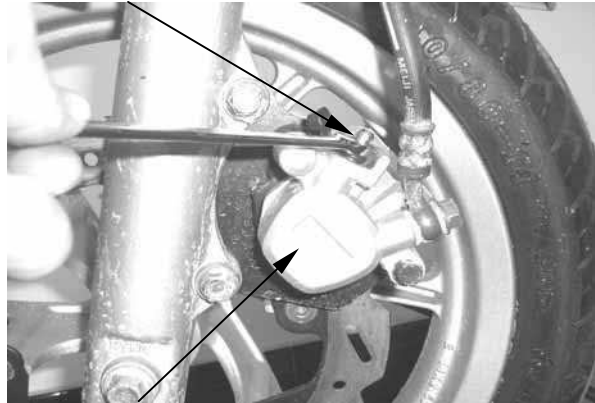

Front Brake Caliper

Brake Fluid Refilling

Add DOT-4 brake fluid to the brake reservoir.

- When bleeding, be careful not to allow air in the brake reservoir flowing into the brake system.
- When using a brake bleeder, follow the manufacturer's instructions.
- Never use dirty or unspecified brake fluid or mix different brake fluids because it will damage the brake system.

Make sure to bleed air from the brake system.


12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Brake Pad/Disk Replacement

- The brake pads must be replaced as a set to ensure the balance of the brake disk.

Remove the two bolts attaching the brake caliper.
Remove the brake caliper.
Downpress reed and remove the brake pads.
Install the brake pads in the reverse order of removal.

- Keep grease or oil off the brake pads to avoid brake failure.

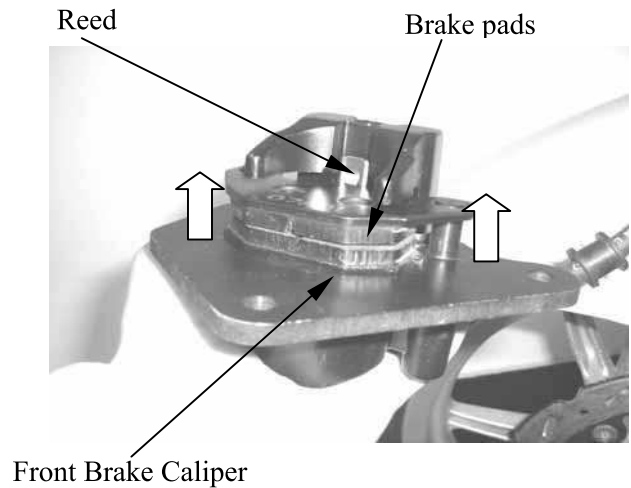

Brake Disk

Measure the brake disk thickness.

Service Limit: 3.0mm

Measure the brake disk runout.

Service Limit: 0.3mm




12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

BRAKE MASTER CYLINDER

Removal


First drain the brake fluid from the hydraulic brake system.

- When servicing the brake system, use shop towels to cover rubber and plastic parts and coated surfaces to avoid being contaminated by brake fluid.
- When removing the brake fluid pipe bolt, be sure to plug the pipe to avoid

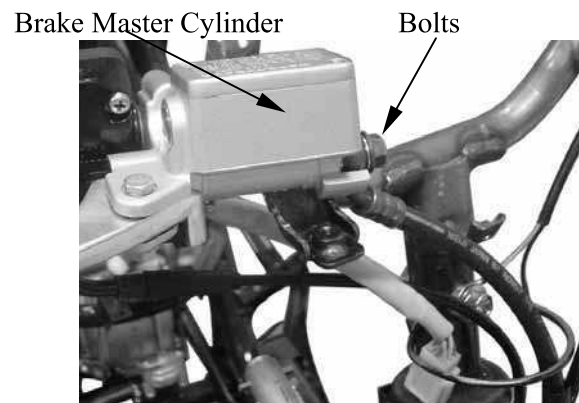


Disassembly

Remove the piston rubber cover and snap ring from the brake master cylinder.

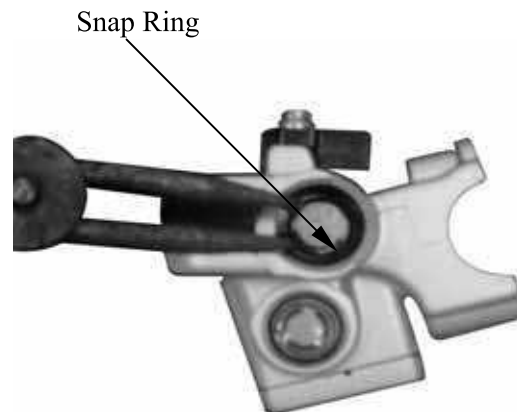

Remove the washer, main piston and spring from the brake master cylinder. Clean the inside of the master cylinder and brake reservoir with brake fluid.

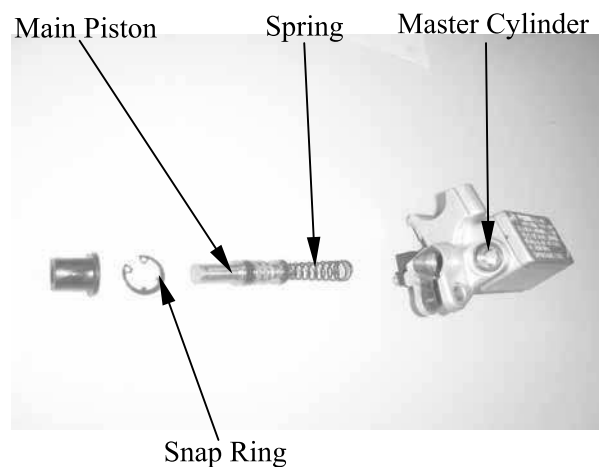


12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Inspection

Measure the brake master cylinder I.D.

Service Limit: 12.75mm

Inspect the master cylinder for scratch or crack.

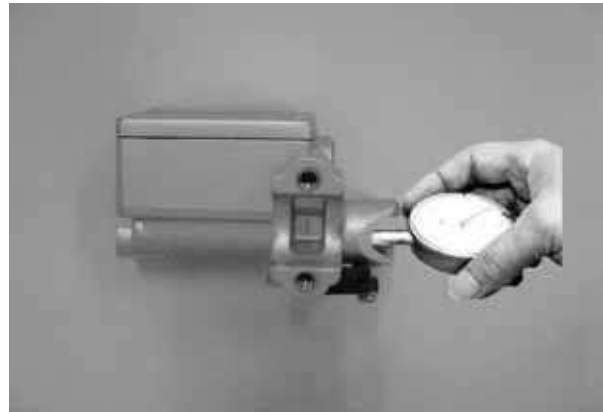

Measure the brake master cylinder piston O.D.

Service Limit: 12.6mm

Before assembly, inspect the 1st and 2nd rubber cups for wear.



Assembly

Before assembly, apply brake fluid to all removed parts.

Install the spring together with the 1st rubber cup.

- During assembly, the main piston and spring must be installed as a unit without exchange.
- When assembling the piston, soak the cups in brake fluid for a while.
- Install the cups with the cup lips facing the correct direction.



Install the main piston, spring and snap ring.

Install the rubber cover.


Install the brake lever.

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Disassembly

Remove the brake caliper seat from the brake caliper.

Brake Caliper Seat

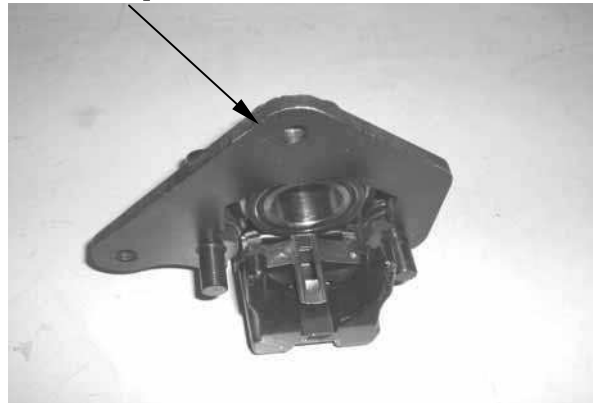

Remove the piston from the brake caliper. If necessary, use compressed air to squeeze out the piston through the brake fluid inlet opening and place a shop towel under the caliper to avoid contamination caused by the removed piston. Check the piston cylinder for scratch or wear and replace if necessary.

Compressed Air



Push the piston oil seal outward to remove it. Clean the oil seal groove with brake fluid.

Be careful not to damage the piston surface.


Piston Oil Seal



12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Place the brake master cylinder on the handlebar and install the holder with “up” mark facing up. Be sure to align the punch mark with the holder joint. First tighten the upper bolt and then tighten the lower bolt.

Torque: 3.0~4.0kgf-m

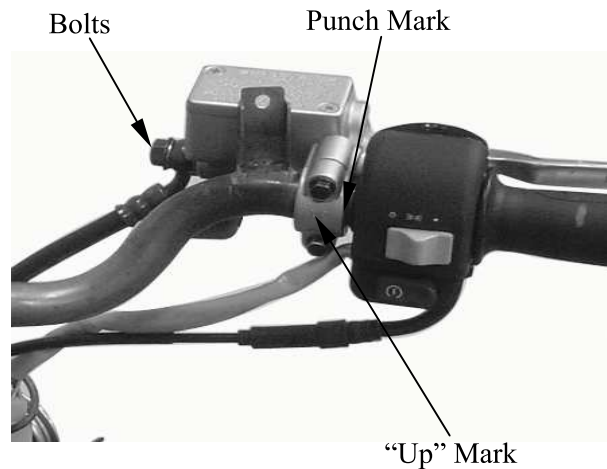

Install the brake fluid pipe with the attaching bolt and two sealing washers.

Install the handlebar covers. (⇒12-3)
Fill the brake reservoir with recommended brake fluid to the upper limit and bleed air according to the method stated in 12-10.



Brake Caliper


Bleed Valve

BRAKE CALIPER (FRONT)

Removal

Remove the brake caliper.
Place a clean container under the brake caliper and disconnect the brake fluid pipe from the caliper.

Do not spill brake fluid on any coated surfaces.

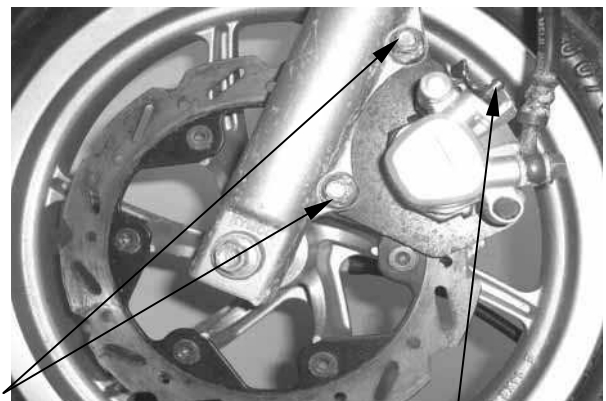

Bolt

Bleed Valve

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Check the piston for scratch or wear.
Measure the piston O.D. with a micrometer.
Service Limit: 34mm



Check the caliper cylinder for scratch or wear
and measure the cylinder bore.
Service Limit: 34.5mm



Assembly

Clean all removed parts.
Apply silicon grease to the piston and oil seal.
Lubricate the brake caliper cylinder inside
wall with brake fluid.
Install the brake caliper piston with grooved
side facing out.

- •
- Install the piston with its outer end 3~
5mm protruding beyond the brake
caliper.

Wipe off excessive brake fluid with a clean
shop towel. Apply silicon grease to the
brake caliper seat pin and caliper inside.
Install the brake caliper seat.



12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION


KYMCO

SUPER8 125

Installation

Install the brake caliper and tighten the two bolts.

Torque: 2.9~3.5kg-m

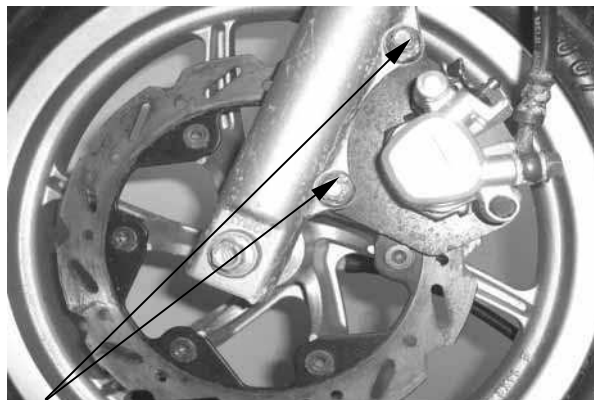

Bolts

Connect the brake fluid pipe to the brake caliper and tighten the fluid pipe bolt.

Torque: 2.5~3.5kg-m

Fill the brake reservoir with recommended brake fluid and bleed air from the brake system. (⇒12-10)



Bolt

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

FRONT SHOCK ABSORBER

REMOVAL

Remove the front wheel. (⇒12-4)
Remove the front lower cover. (⇒2-2)
Remove the front inner fender.
Remove the front shock absorber upper
mount bolts.
Loosen the lower mount bolts to remove the
front shock absorbers.




Shock Absorber

Lower Mount Bolts


DISASSEMBLY

Remove the dust boot.
Remove the circlip.

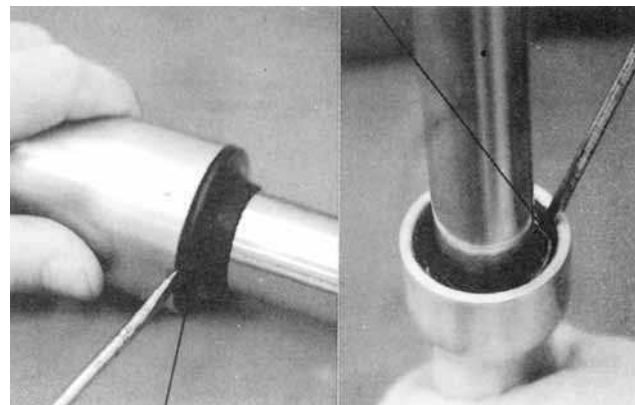

Dust Boot

Set the front shock absorber in a vise.
Remove the damper rod, hex bolt and copper
washer.
Pull out the front shock absorber tube.

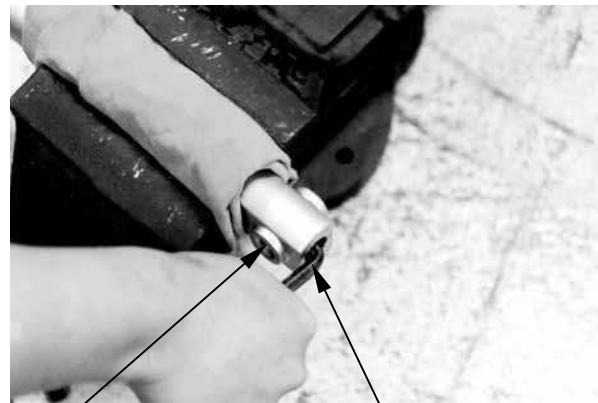


Washer/Bolt

Front Shock Absorber

Set the front shock absorber tube in a vise.
Remove the top nut, shock spring, damper,
and damper spring from the front shock
absorber tube.

- When holding the shock absorber tube, place a shop towel to protect it and do not apply too much force.


Shock Absorber Tube

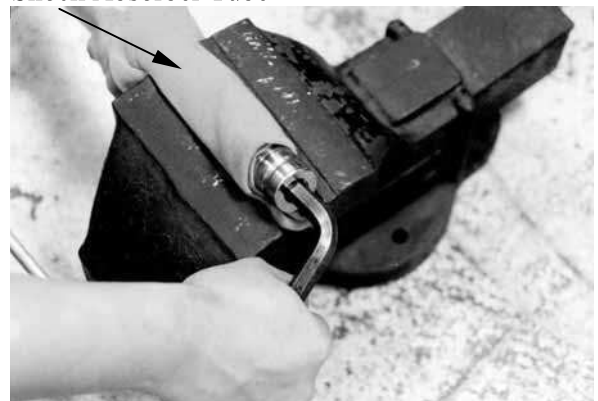


12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Measure the front shock absorber spring free length.

Service Limits: Right : 226.5mm
Left : 226.5mm

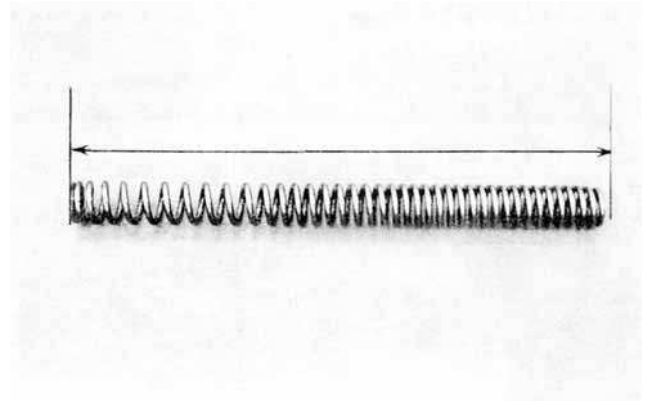

ASSEMBLY

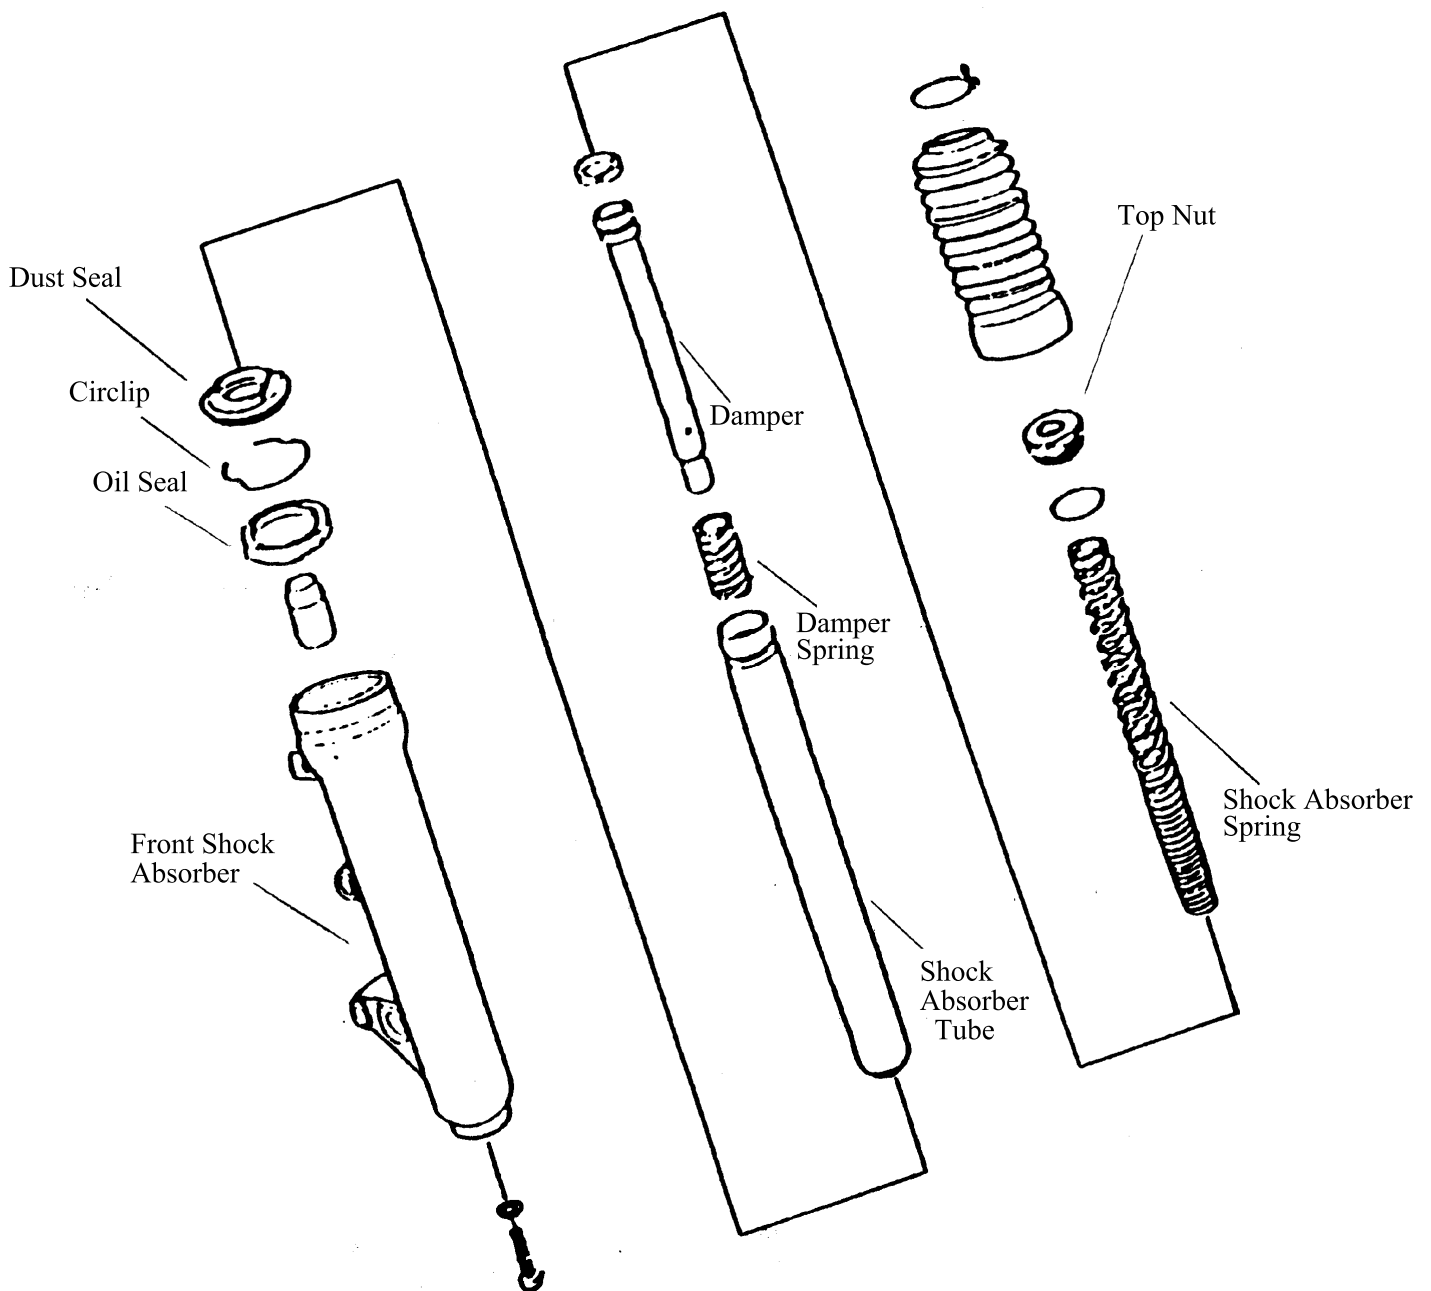

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Install the damper spring onto the damper rod and then install them into the front shock absorber tube.

Install the shock absorber spring onto the front shock absorber tube and tighten the top nut.

• • Install the front shock absorber spring with the closely wound coils facing down.



Shock Absorber Tube
Circlip


Set the front shock absorber in a vise. Insert the shock absorber tube into the shock absorber and tighten the hex bolt. (Apply locking agent to the washer and install it together with the hex bolt.)

Torque: 3.0kgf-m

Add engine oil into the front shock absorber.

Specified Oil: SS#8

Oil Capacity: 97±1cc

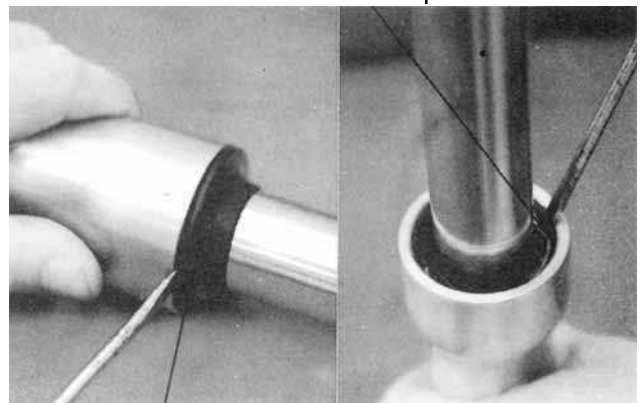

Dust Boot

Upper Mount Bolts

Install the circlip.
Install the dust boot.



Front Shock Absorber

Lower Mount Bolts

INSTALLATION

Install the front shock absorbers onto the steering stem.

Install and tighten the front shock absorber upper mount bolts.

Tighten the lower mount bolts.

• • Align the upper mount bolt hole with the groove on the front fork.

Install the front wheel. (⇒12-7)

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION



SUPER8 125


FRONT FORK

REMOVAL

Remove the steering handlebar. (⇒12-3)
Remove the front wheel. (⇒12-4)
Disconnect the speedometer cable.
Remove the steering stem lock nut using long socket wrench.

Special

Long Socket Wrench, 32mm 8Angle

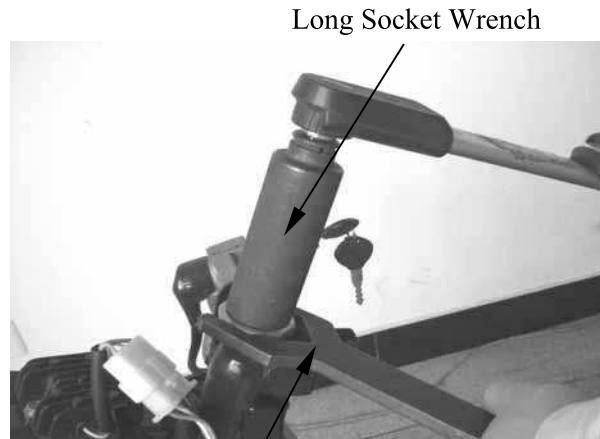


Lock Nut Wrench

Remove the top cone race and remove the steering stem.

- Be careful not to lose the steel balls (26 on top race and 29 on bottom race).

Inspect the ball races and cone races for wear or damage and replace if necessary.

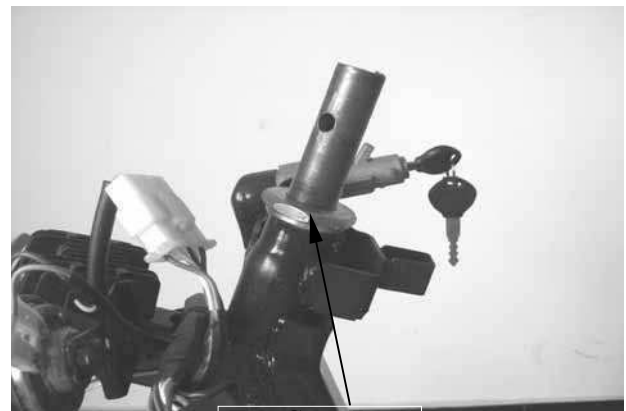

Top Cone Race

BOTTOM CONE RACE REPLACEMENT

Remove the bottom cone race using a chisel.

- Be careful not to damage the steering stem and front fork.

Drive a new bottom cone race into place with a proper driver.



Bottom Cone Race

BALL RACE REPLACEMENT

Drive out the top and bottom ball races.




Ball Race Remover

12. FRONT WHEEL/FRONT BRAKE/ FRONT SUSPENSION

Drive new top and bottom ball races into the steering head using the outer driver.

Be sure to completely drive in the ball races.


Driver Handle A

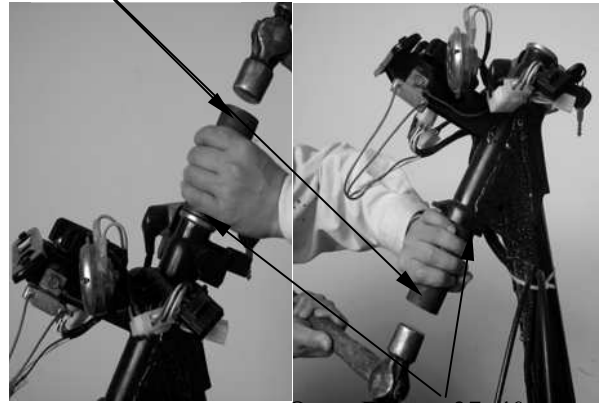

Outer Driver, 37x40mm

INSTALLATION

Apply grease to the top and bottom ball races and install 26 steel balls on the top ball race and 29 steel balls on the bottom ball race. Apply grease to the ball races and install the front fork.

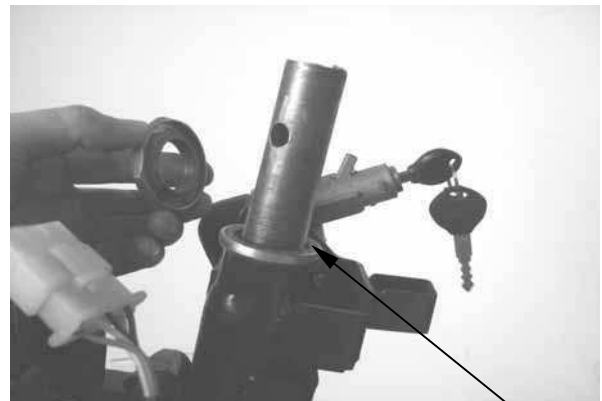


Steel Balls

Apply grease to the top cone race and install it.

Tighten the top cone race and then turn the steering stem right and left several times to make steel balls contact each other closely.

Check that the steering stem rotates freely without vertical play.

Top Cone Race

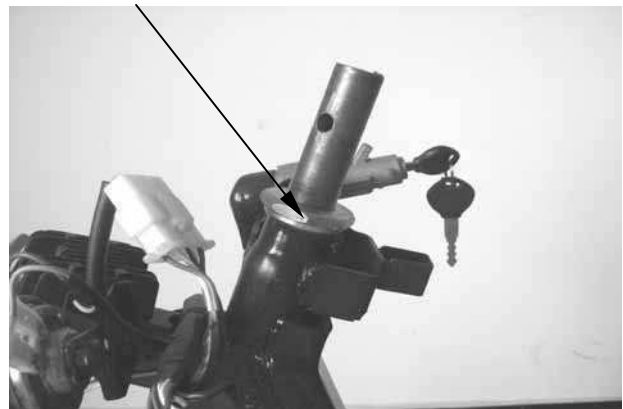

Long Socket Wrench

Install the steering stem lock nut and tighten it while holding the top cone race.

Torque: 6.0~8.0kgf-m


Install the front wheel. (⇒12-7)

Install the steering handlebar. (⇒12-3)

Install the speedometer cable. (⇒12-7)


Special

Long Socket Wrench, 32mm • 8Angle

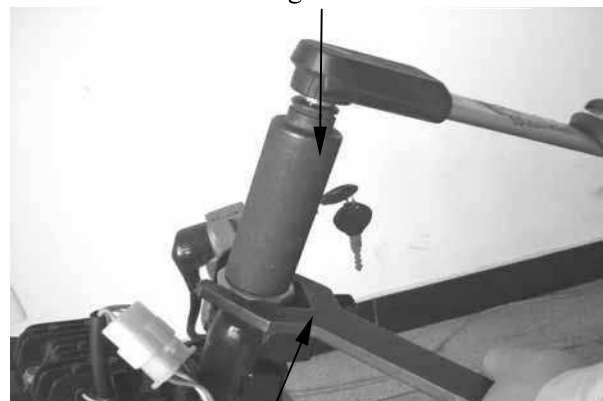

Lock Nut Wrench

13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION

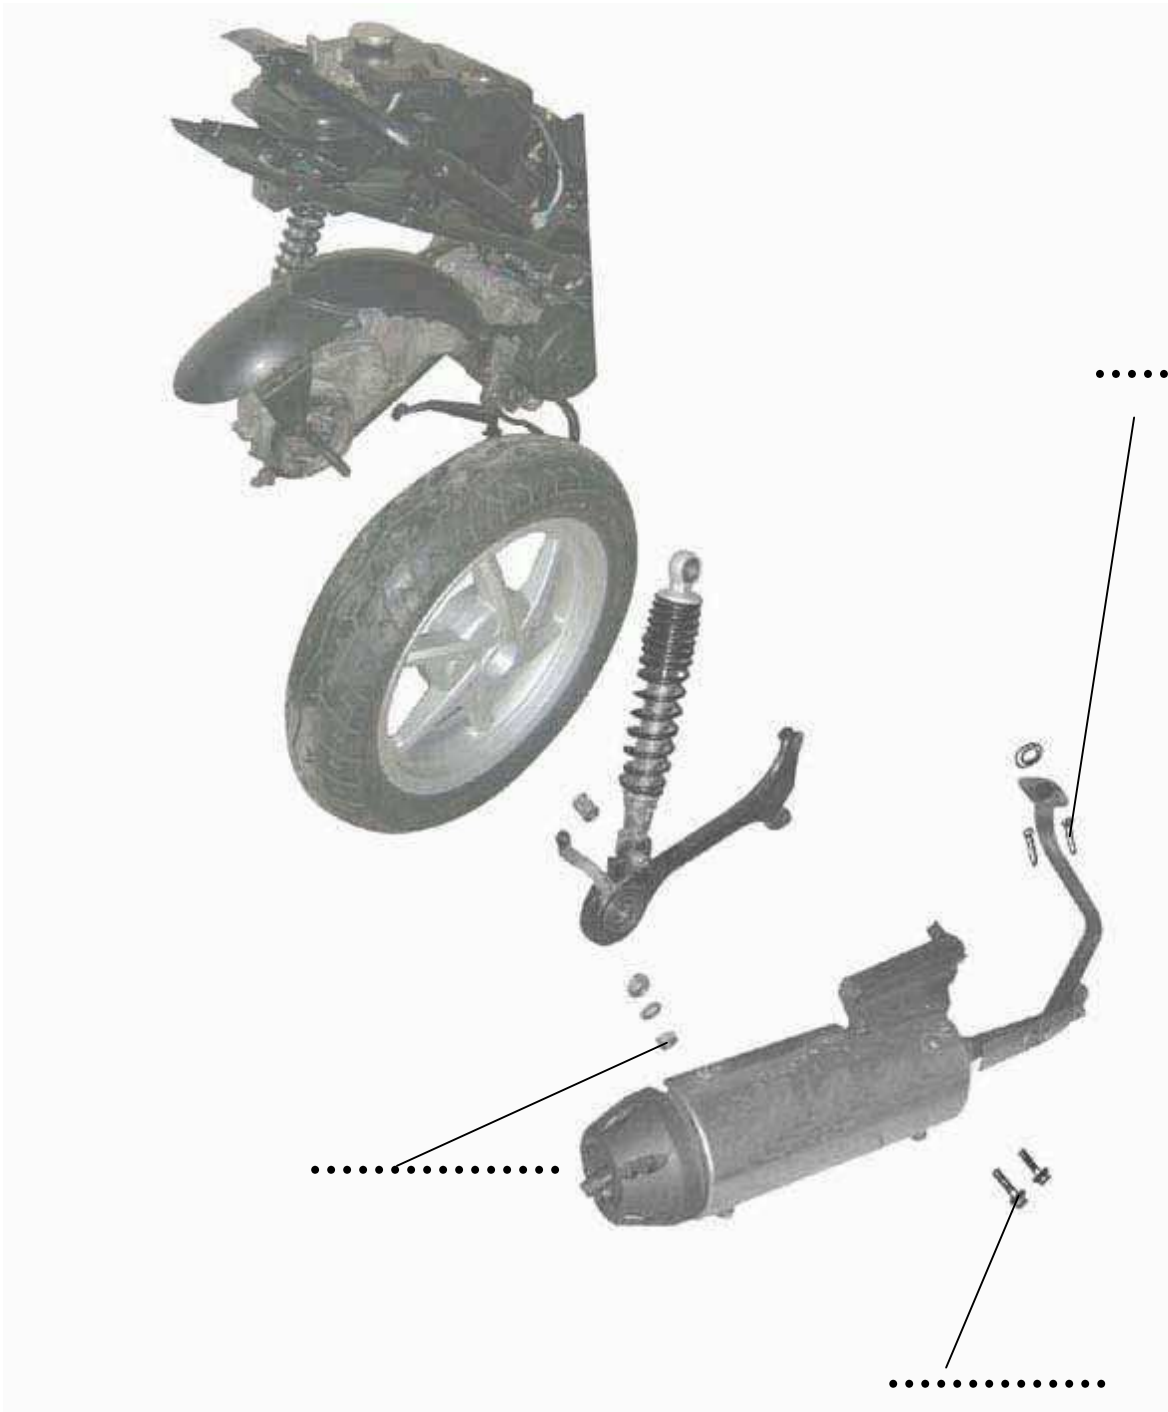

13

| | | | |
|---------------------------|------|--------------------------|------|
| SERVICE INFORMATION | 13-1 | REAR BRAKE..... | 13-3 |
| TROUBLESHOOTING | 13-1 | REAR SHOCK ABSORBER..... | 13-4 |
| REAR WHEEL | 13-2 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- During servicing, keep oil or grease off the brake drum and brake linings.

SPECIFICATIONS

| Item | | Standard (mm) | Service Limit (mm) |
|--|---------------------|---------------|--------------------|
| Rear wheel | Rim runout | Radial | — |
| | | Axial | — |
| | Rear brake drum I.D | | 131 |
| Rear brake lining thickness | | 4.0 | 2.0 |
| Rear shock absorber spring free length | | 225 | 210 |

TORQUE VALUES

| | |
|--------------------------------------|--------------|
| Rear axle nut | 11~13kgf-m |
| Rear shock absorber upper mount bolt | 3.5~4.5kgf-m |
| Rear shock absorber lower mount bolt | 2.4~3.0kgf-m |
| Exhaust muffler joint lock nut | 1.0~1.4kgf-m |
| Exhaust muffler lock bolt | 3.0~3.6kgf-m |

Special Tool

Cushion Assemble & Disassemble Tool

TROUBLESHOOTING

Rear wheel wobbling

- Bent rim
- Faulty tire
- Axle not tightened properly

Soft rear shock absorber

- Weak shock absorber spring
- Faulty damper

Poor brake performance

- Brake not adjusted properly
- Worn brake linings
- Worn brake shoes at cam contacting area
- Worn brake cam
- Worn brake drum


13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION

REAR WHEEL

REMOVAL

- Remove the exhaust muffler. (⇒2-5)
- Remove the rear axle nut and rear shock absorber bolt.
- Remove the rear axle side collar and rear fork.
- Remove the rear wheel.

Rear Shock Absorber Bolt

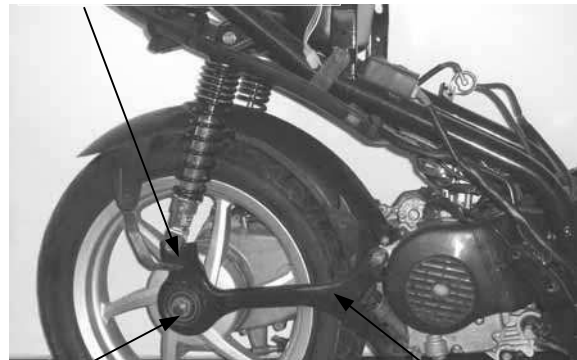

Rear Axle Nut

Rear Fork


INSPECTION

Measure the rear wheel rim runout.

Service Limits:

Radial: 2.0mm replace if over

Axial: 2.0mm replace if over

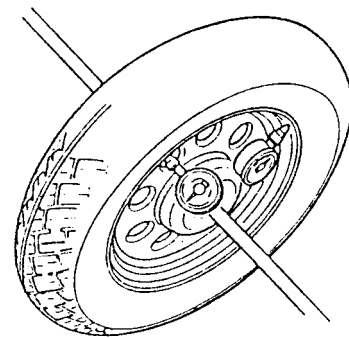

- Inspect the rear brake drum.
- Measure the rear brake drum I.D.
- Service Limits:** 130mm replace if over




INSTALLATION

- Install the rear wheel in the reverse order of removal.
- Tighten the rear axle nut.
Torque: 11.0-13.0kgf-m
- Install the exhaust muffler.
Torque:
Exhaust muffler joint lock nut: 1.0~1.4kgf-m
Exhaust muffler lock bolt: 3.0~3.6kgf-m

First install and tighten the exhaust muffler joint lock nuts and then the exhaust muffler lock bolts.

Lock Bolts

Joint Lock Nuts

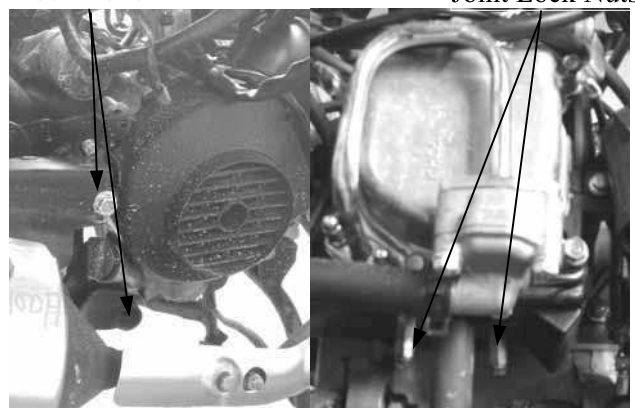

13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION



SUPER8 50


REAR BRAKE

BRAKE LINING INSPECTION

Measure the brake lining thickness.

Service Limit: 2.0mm replace if below


- | |
|---|
| Keep oil or grease off the brake linings. |
|---|

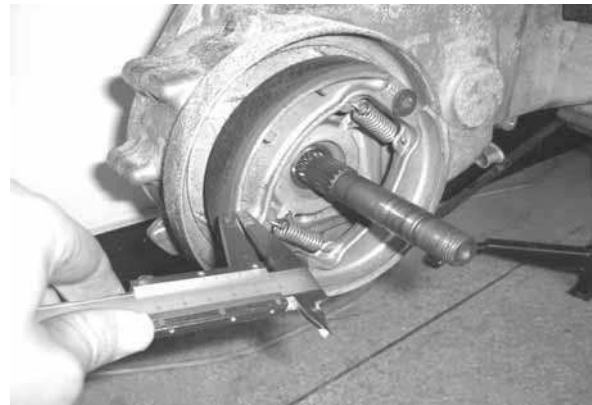

REAR BRAKE DISASSEMBLY


Remove the rear brake adjusting nut and disconnect the rear brake cable.

Remove the rear brake shoes.

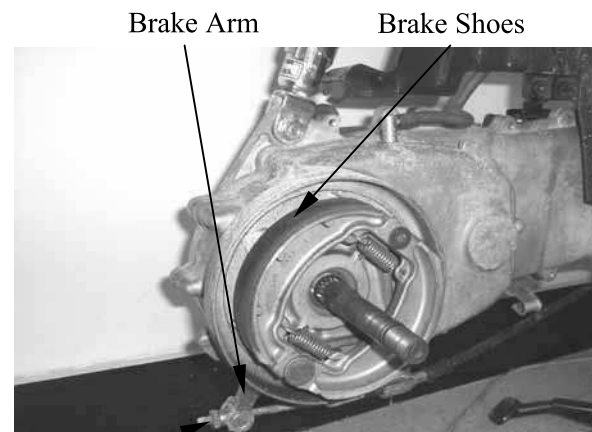

Remove the brake arm bolt to remove the brake arm.

Remove the brake cam.

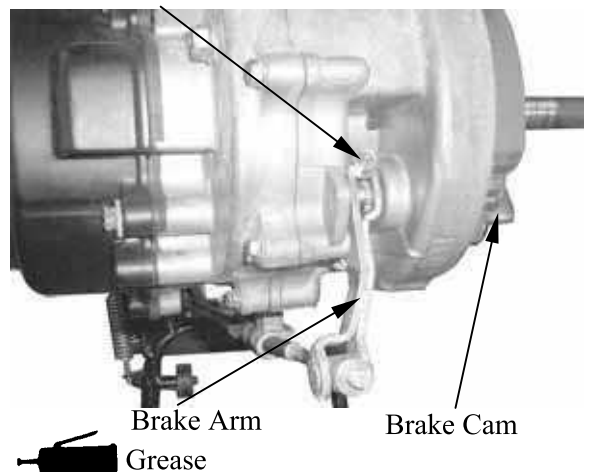


REAR BRAKE ASSEMBLY

Apply grease to the anchor pin.

Apply grease to the brake cam and install it.

Install the brake shoes.

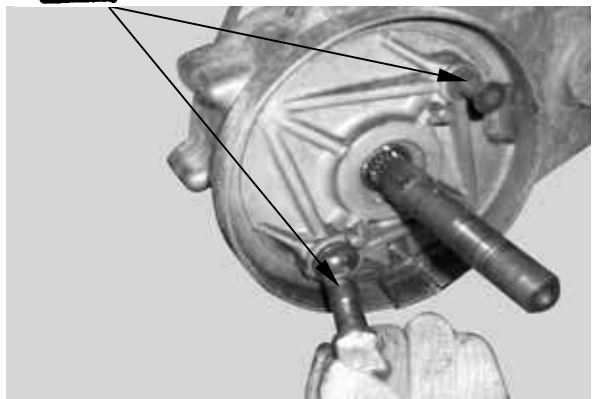

13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION



Apply a small amount of engine oil to the felt seal and install it to the brake cam.
Install the brake arm.

Align the wide groove on the wear indicator plate with the wide tooth of the brake cam.

Install and tighten the brake arm bolt.

Align the scribed line on the brake arm with the punch mark on the brake cam.


Install the brake arm return spring.
Install the brake arm pin.
Connect the brake cable and install the adjusting nut.
Install the rear wheel. (⇒13-2)
Adjust the rear brake lever free play. (⇒3-8)

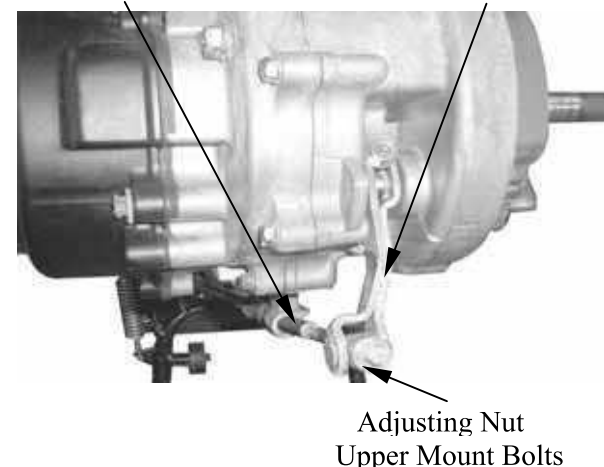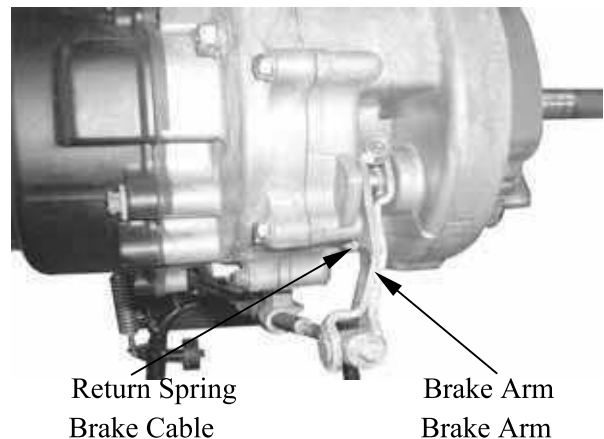

LEFT REAR SHOCK ABSORBER REMOVAL

Remove the frame body cover. (⇒2-3)
Remove the air cleaner case. (⇒5-19)

Remove the rear shock absorber upper and lower mount bolts.
Remove the rear shock absorber.

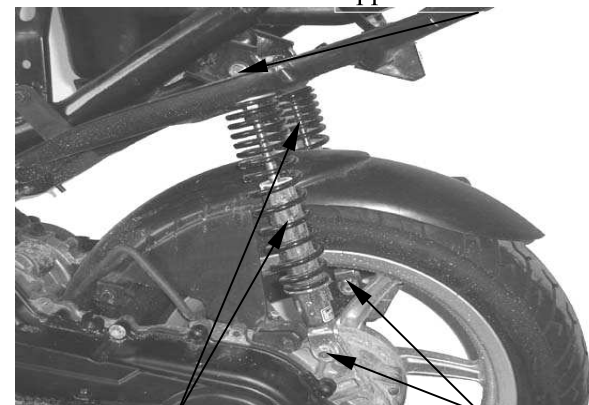

Rear Shock Absorber Compressor

DISASSEMBLY


Install the rear shock absorber compressor as the figure shown.

Install the rear shock absorber lower joint into the rear shock absorber compressor.

Compress the rear shock absorber spring.

Special

Cushion Assemble & Disassemble Tool

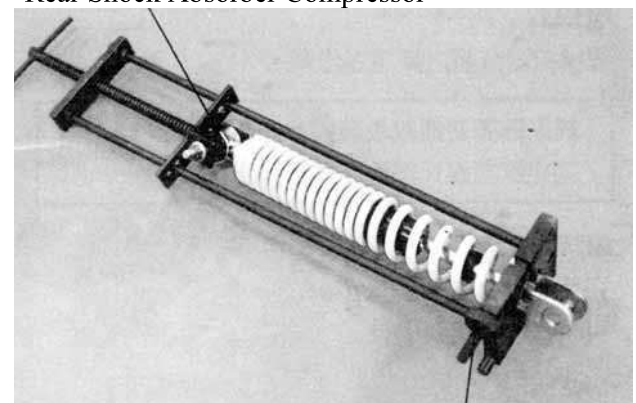


Cushion Assemble & Disassemble Tool

13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION


INSPECTION

Inspect the damper rod for bending or damage.
Inspect the damper for oil leaks.
Inspect the damper rubber for deterioration or damage.

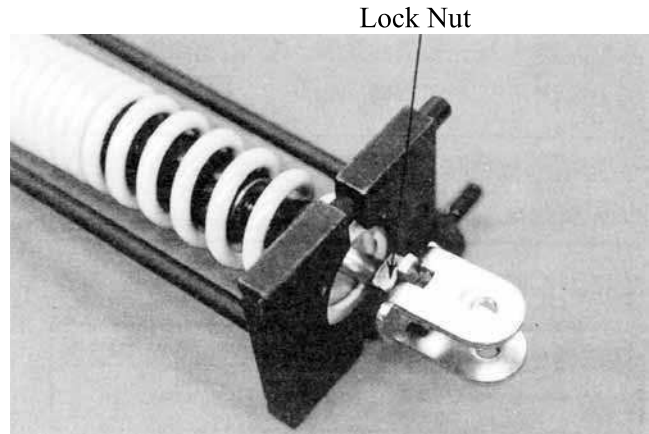

Measure the rear shock absorber spring free length.



Service Limit: 210mm replace if over

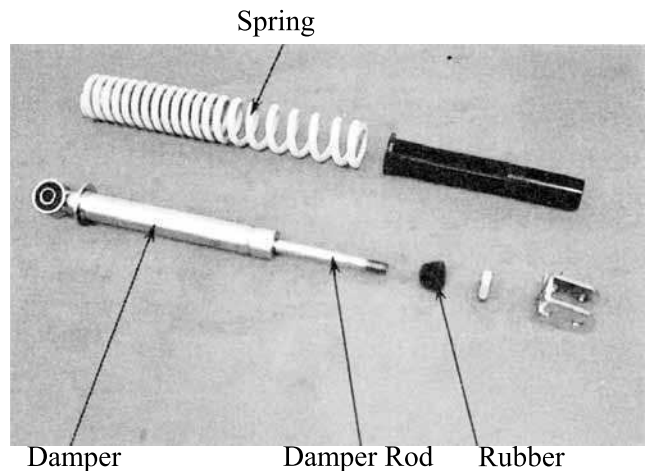

ASSEMBLY

Assemble the rear shock absorbers in the reverse order of disassembly.

- Install the shock absorber spring with loosely wound coils facing down.
- Apply locking agent to the lock nut threads and tighten the lock nut.

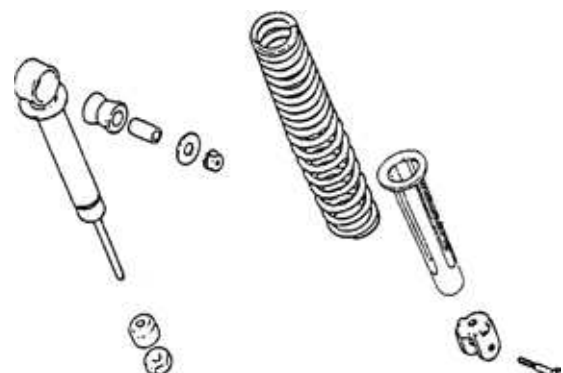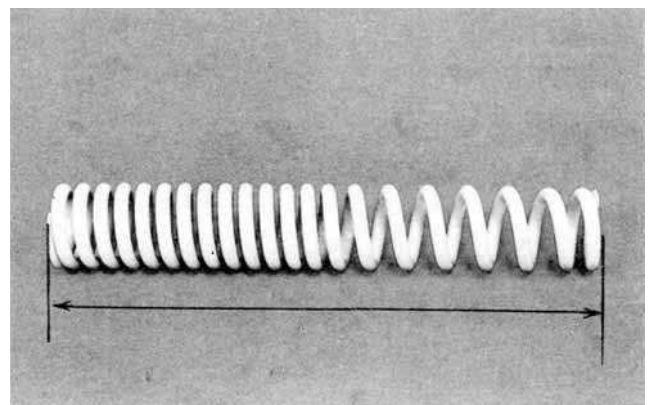

13. REAR WHEEL/REAR BRAKE/ REAR SUSPENSION

INSTALLATION

Install the rear shock absorber.
Install the rear shock absorber upper mount bolt and then the lower mount bolt.
Tighten the bolts.

Torque:


Upper Mount Bolt: 3.5~4.5kgf-m

Lower Mount Bolt: 2.4~3.0kgf-m

Install the air cleaner case. (⇒5-15)


Install the frame body cover. (⇒2-3)

Upper Mount Bolt

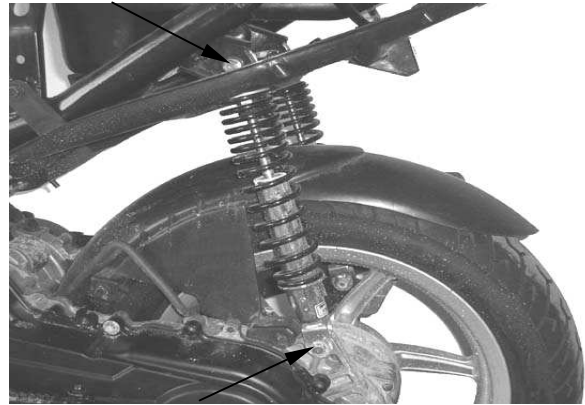


Lower Mount Bolt

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR

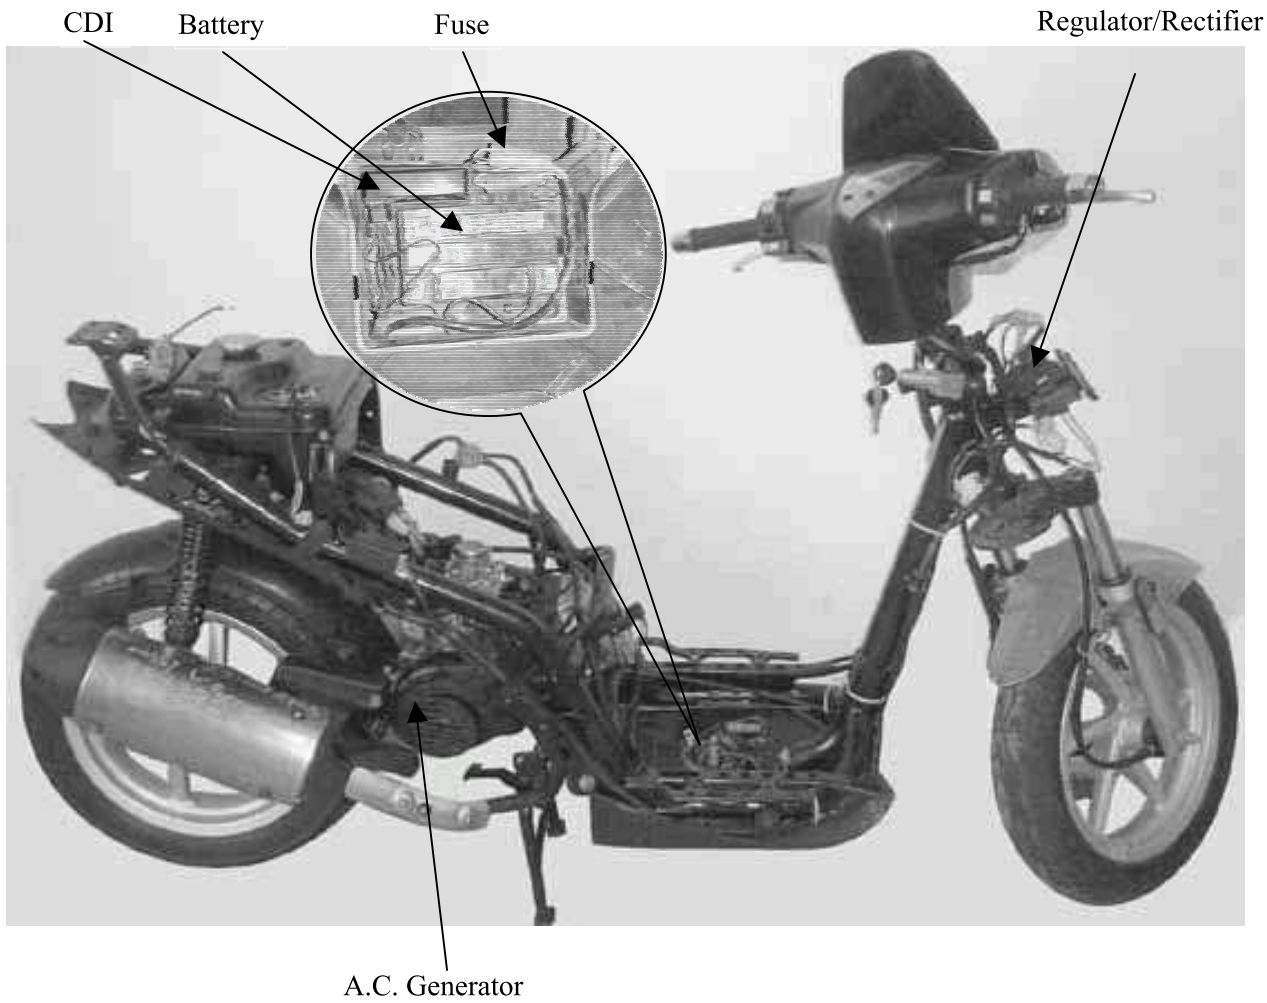

14

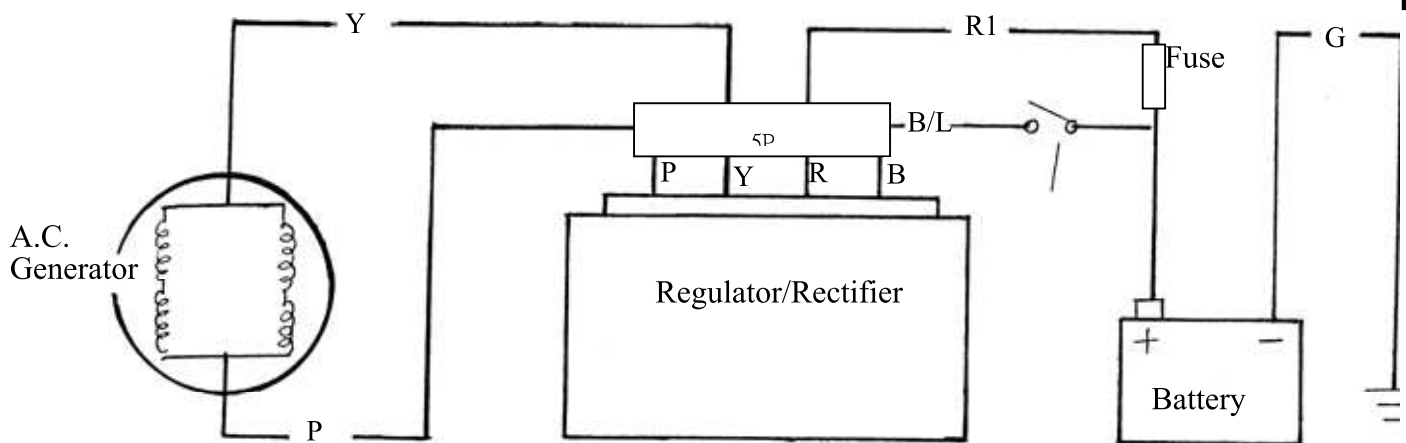

| | | | |
|--------------------------|------|----------------------------------|------|
| SERVICE INFORMATION..... | 14-1 | A.C. GENERATOR CHARGING COIL ... | 14-6 |
| TROUBLESHOOTING | 14-2 | RESISTOR INSPECTION..... | 14-6 |
| BATTERY..... | 14-3 | A.C. GENERATOR REMOVAL | 14-6 |
| CHARGING SYSTEM | 14-4 | A.C. GENERATOR INATALLATION ... | 14-8 |
| REGULATOR/RECTIFIER..... | 14-5 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS



The battery electrolyte (sulfuric acid) is poisonous and may seriously damage the skin and eyes. Avoid contact with skin, eyes, or clothing. In case of contact, flush with water and get prompt medical attention

- The battery can be charged and discharged repeatedly. If a discharged battery is not used for a long time, its service life will be shortened. Generally, the capacity of a battery will decrease after it is used for 2~3 years. A capacity-decreased battery will resume its voltage after it is recharged but its voltage decreases suddenly and then increases when a load is added.
- When a battery is overcharged, some symptoms can be found. If there is a short circuit inside the battery, no voltage is produced on the battery terminals. If the rectifier won't operate, the voltage will become too high and shorten the battery service life.
- If a battery is not used for a long time, it will discharge by itself and should be recharged every 3 months.
- A new battery filled with electrolyte will generate voltage within a certain time and it should be recharged when the capacity is insufficient. Recharging a new battery will prolong its service life.
- Inspect the charging system according to the sequence specified in the Troubleshooting.
- Do not disconnect and soon reconnect the power of any electrical equipment because the electronic parts in the regulator/rectifier will be damaged. Turn off the ignition switch before operation.
- It is not necessary to check the MF battery electrolyte or fill with distilled water.
- Check the load of the whole charging system.
- Do not quick charge the battery. Quick charging should only be done in an emergency.
- Remove the battery from the motorcycle for charging.
- When replacing the battery, do not use a traditional battery.
- When charging, check the voltage with a voltmeter.

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR



SUPER8 125

SPECIFICATIONS

| Item | | Standard | |
|---------------------|---------------------------------|----------------------------|-------------------|
| Battery | Capacity/Model | 12V-6AH | |
| | Voltage (20°C) | Fully charged | 13.1V |
| | | Undercharged | 12.3V |
| | Charging current | STD: 0.7A Quick: 3.0A | |
| | Charging time | STD: 5~10hr Quick: 30min | |
| A.C. Generator | Capacity | 0.144KW/5000rpm | |
| | Charging coil resistance (20°C) | Yellow~Peach 0.1~1.0Ω | |
| Regulator/Rectifier | Type | Single-phase full-wave SCR | |
| | Limit voltage | | |
| | | Charging | 14.5±0.5V/5000rpm |
| Resistor | Resistance (20°C) | 5W12Ω | |

TORQUE VALUES

| | |
|------------------|---------------|
| Pulser coil bolt | 0.45~0.6kgf-m |
| Stator bolt | 0.8~1.2kgf-m |
| Flywheel nut | 3.5~4.5kgf-m |
| Cooling fan bolt | 0.8~1.2kgf-m |

SPECIAL TOOLS

Universal holder
Flywheel puller

TESTING INSTRUMENTS

Kowa electric tester
Sanwa electric tester

TROUBLESHOOTING

No power

- Dead battery
- Disconnected battery cable
- Fuse burned out
- Faulty ignition switch

Low power

- Weak battery
- Loose battery connection
- Charging system failure
- Faulty regulator/rectifier

Intermittent power

- Loose battery cable connection
- Loose charging system connection
- Loose connection or short circuit in lighting system

Charging system failure

- Loose, broken or shorted wire or connector
- Faulty regulator/rectifier
- Faulty A.C. generator

BATTERY

REMOVAL

Remove the battery cover screws on the floor board.

Open the battery cover and remove the battery by removing the bolt and band.

First disconnect the battery negative (-) cable and then the positive (+) cable.



When disconnecting the battery positive (+) cable, do not touch the frame with tool; otherwise it will cause short circuit and sparks to fire the fuel.

The installation sequence is the reverse of removal.



First connect the positive (+) cable and the negative (-) cable to avoid short circuit.

BATTERY VOLTAGE (OPEN CIRCUIT VOLTAGE) INSPECTION

Remove the floor board.

Open the battery cover and disconnect the battery cables.

Measure the voltage between the battery terminals.

Fully charged : 13.1V

Undercharged : 12.3V max.

- Battery charging inspection must be performed with a voltmeter.

CHARGING

Connect the charger positive (+) cable to the battery positive (+) terminal.

Connect the charger negative (-) cable to the battery negative (-) terminal.



- Keep flames and sparks away from a charging battery.
- Turn power ON/OFF at the charger, not at the battery terminals to prevent sparks near the battery to avoid explosion.
- Charge the battery according to the

- Quick charging should only be done in an emergency.
- Measure the voltage 30 minutes after the battery is charged.

Charging current: Standard : 0.4A

Quick : 4A


Charging time : Standard : 5~10 hours

Quick : 30 minutes




After charging: Open circuit voltage: 12.8V min.

Note: The battery temperature should not exceed 45°C during charging.

Battery Cover

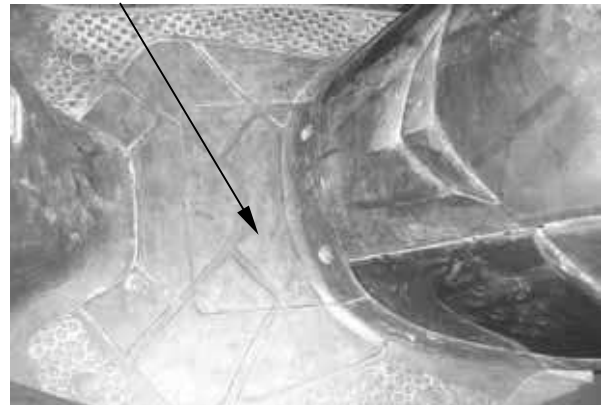

battery

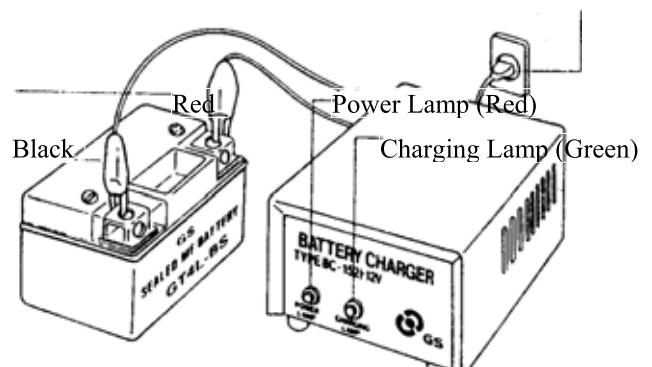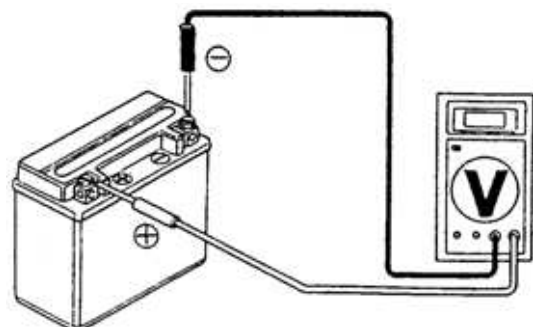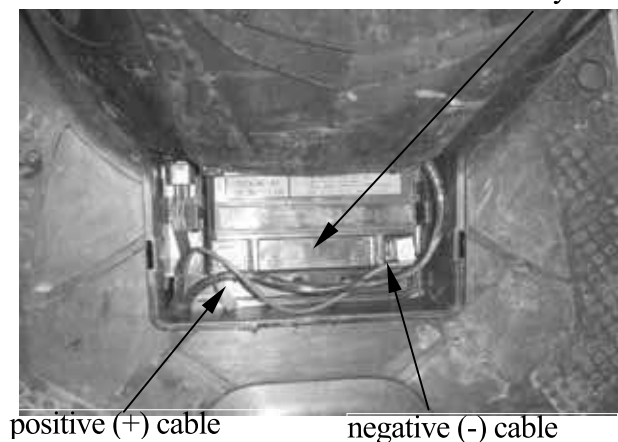


CHARGING SYSTEM

SHORT CIRCUIT TEST

Disconnect the ground wire from the battery and connect an ammeter across the battery negative (-) terminal and the ground wire. Turn the ignition switch OFF and check for short circuit.

- Connect the electric tester positive (+) terminal to ground wire and the tester negative (-) terminal to the battery negative (-) terminal.

If any abnormality is found, check the ignition switch and wire harness for short circuit .

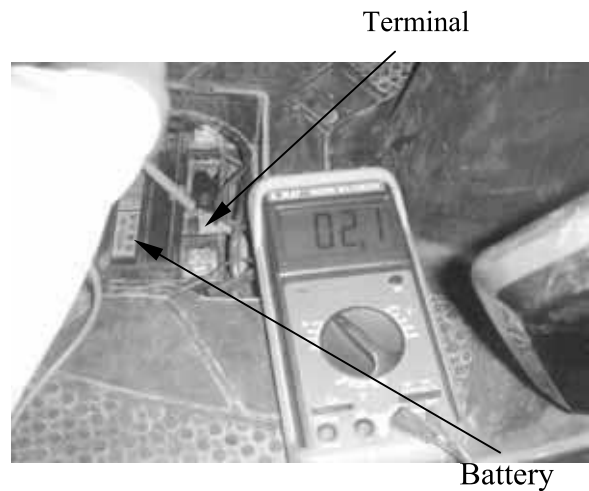


CURRENT TEST

This inspection must be performed with an electric tester when the battery is fully charged. Warm up the engine for inspection. Connect the electric tester across the battery terminals. Disconnect the fuse and connect an ammeter between the fuse terminals. Attach a tachometer to the engine. Start the engine and gradually increase the engine speed to measure the limit voltage and current.

Limit Voltage/Current: 14~15V/0.5A max.
(5000rpm max.)

If the limit voltage is not within the specified range, check the regulator/rectifier. (⇒14-5)

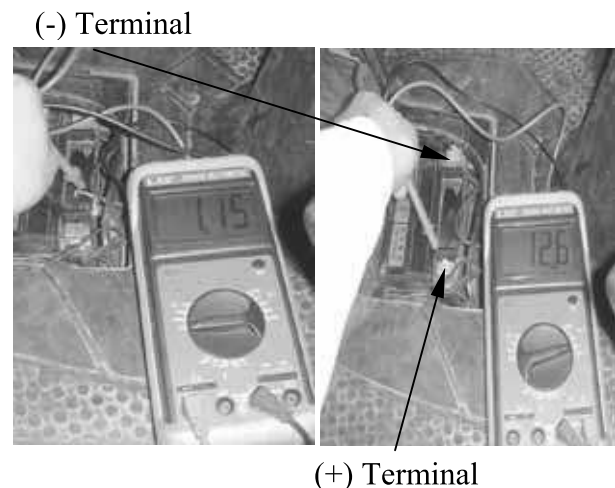

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR



SUPER8 125

REGULATOR/RECTIFIER

MAIN HARNESS CIRCUIT INSPECTION

Remove the front covers. (⇒2-2)
Remove the regulator/rectifier 4P coupler and check for continuity between the wire harness terminals according to the following :

| Item (Wire Color) | Judgment |
|---|---|
| Between battery (red) and engine ground | Battery has voltage |
| Between ground (green) and engine ground | Continuity exists |
| Between c.d.i wire (black/blue) and engine ground (Remove the auto bystarter coupler and turn the lighting switch OFF for inspection) | A.C. generator stator nought resistance |
| Between charging coil (yellow or peach) and engine ground | A.C. generator stator nought resistance |


Regulator/Rectifier



REGULATOR/RECTIFIER

REMOVAL

Remove the regulator/rectifier lock nut and disconnect the regulator/rectifier wire coupler.
Measure the resistances between the regulator/rectifier wire terminals. Replace the regulator/rectifier if the readings are not within the specifications in the table below.

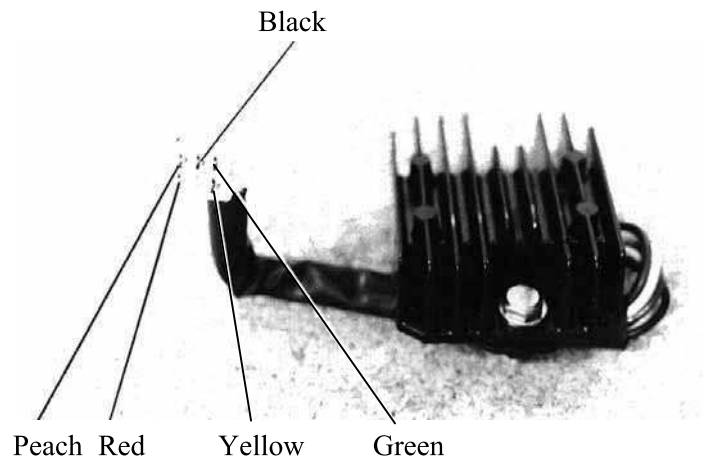

- * Due to the semiconductor in circuit, it is necessary to use a specified tester for accurate testing. Use of an improper tester or measurements in an improper range may give false readings.
• Use a Sanwa Electric Tester or Kowa Electric Tester for testing.

Testing Range

Range for the Sanwa Tester: xKΩ
Range for the Kowa Tester: x100Ω

| (+)Probe | Peach | Yellow | Red | Green | Black |
|----------|-------|--------|--------|-------|-------|
| (-)Probe | | | | | |
| Peach | | ∞ | 4-7K | ∞ | ∞ |
| Yellow | ∞ | | 4-7K | ∞ | ∞ |
| Red | ∞ | ∞ | | ∞ | ∞ |
| Green | 4-6K | 4-6K | 13-17K | | 1-2K |
| Black | 4-7K | 4-7K | 13-17K | 1-2K | |

A.C. GENERATOR CHARGING COIL

The inspection of A.C. generator charging coil can be made with the engine installed.

INSPECTION

Disconnect the A.C. generator 2P connector. Measure the resistance between the A.C. generator white wire and engine ground with an electric tester.

Standard: 0.1 ~ 1.0Ω(at 20°C)

Replace the A.C. generator charging coil if the reading is not within the specifications.


Charging Coil Wire



A.C. GENERATOR

REMOVAL


Remove the right side cover. (⇒2-4)
Remove the four bolts attaching the cooling fan cover to remove the fan cover.

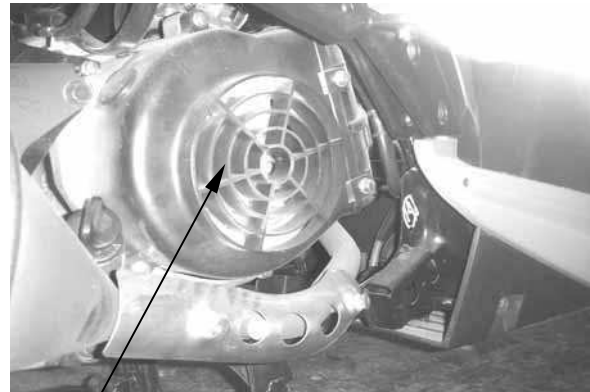

Fan Cover

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR

Remove the cooling fan by removing the four cooling fan attaching bolts.

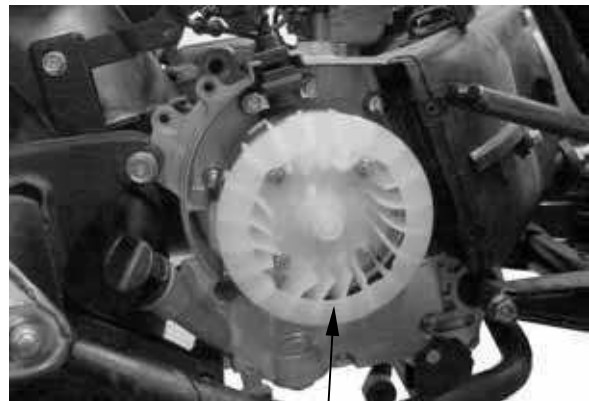

Cooling Fan

Hold the flywheel with an universal holder.
Remove the flywheel nut.

Special

Universal Holder

Universal Holder



Remove the A.C. generator flywheel using
the flywheel puller.
Remove the woodruff key.

Special

Flywheel Puller



Flywheel Puller


Remove the A.C. generator wire connector.

A.C. Generator Wire Connector




14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR

Remove the A.C. generator wire set plate.
Remove the pulser coil bolts.
Remove the A.C. generator wire rubber sleeve and pulser coil from the right crankcase.
Remove the two bolts and A.C. generator stator.

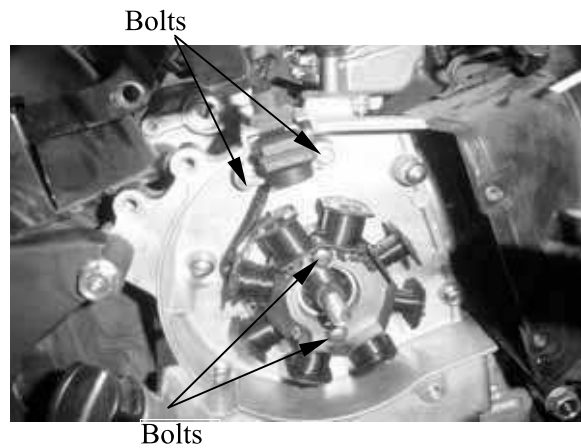


A.C. GENERATOR INSTALLATION

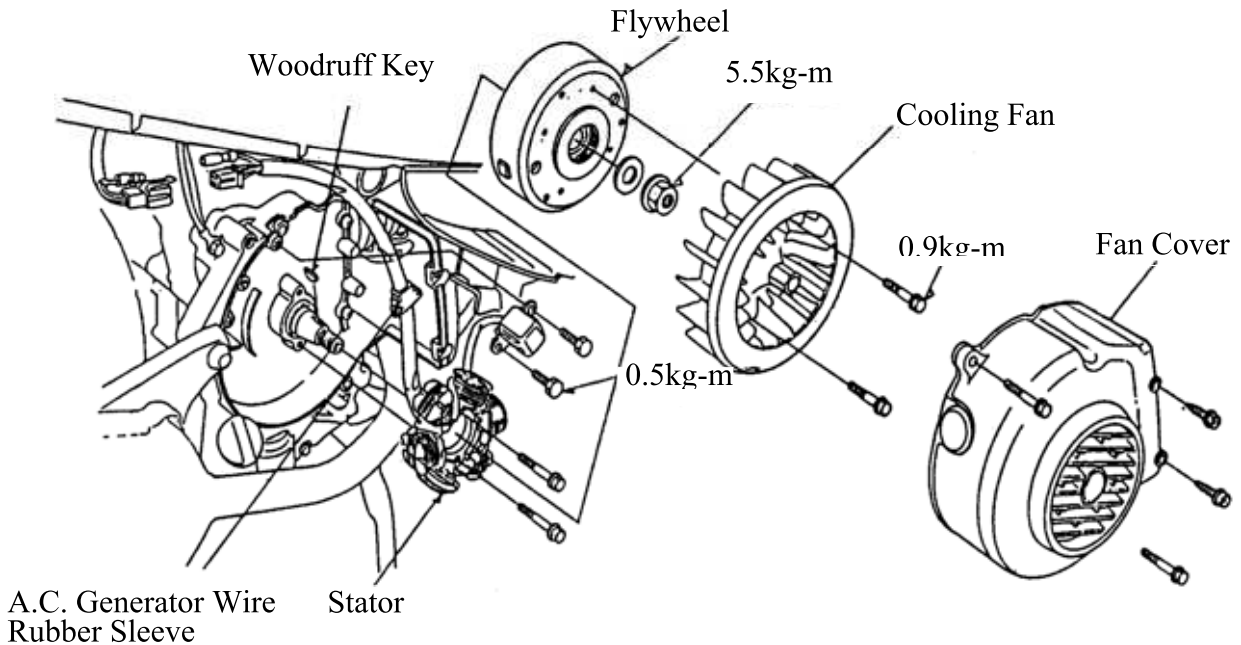

Install the A.C. generator stator and pulser coil onto the right crankcase.
Tighten the stator and pulser coil bolts.
Torques: Pulser Coil : 0.45~0.6kgf-m
Stator : 0.8~1.2kgf-m

Install the A.C. generator wire rubber sleeve and A.C. generator wire set plate.

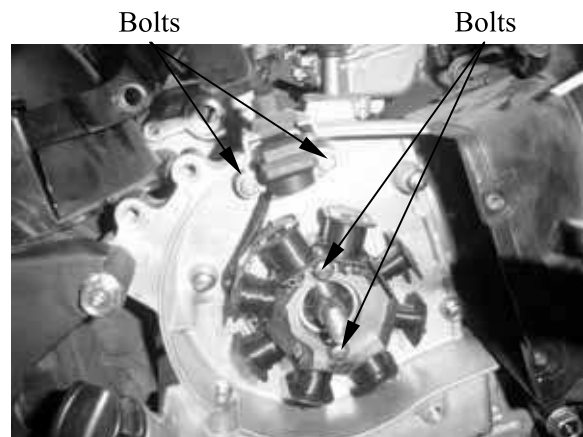

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR

Connect the A.C. generator wire connector.

A.C. Generator Wire Connector



Clean the taper hole in the flywheel off any burrs and dirt.
Install the woodruff key in the crankshaft keyway.

Woodruff Key



Install the flywheel onto the crankshaft with the flywheel hole aligned with the crankshaft woodruff key.

Universal Holder



The inside of the flywheel is magnetic.
Make sure that there is no bolt or nut
before installation.

Hold the flywheel with the universal holder
and tighten the flywheel nut.


Torque: 3.5~4.5kgf-m

Special

Universal Holder

Install the cooling fan.


Torque: 0.8~1.2kgf-m

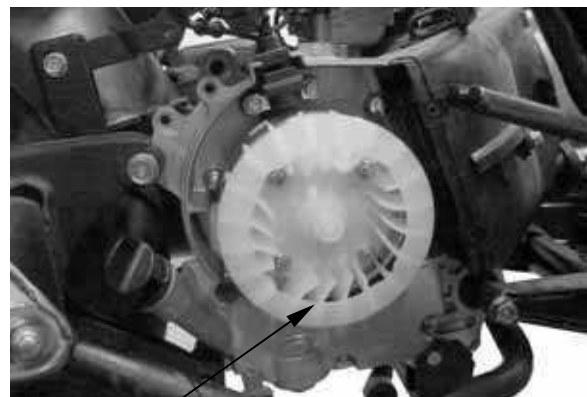

Cooling Fan

14. BATTERY/CHARGING SYSTEM/ A.C. GENERATOR


Install the fan cover.
Install the right side cover. (⇒2-4)

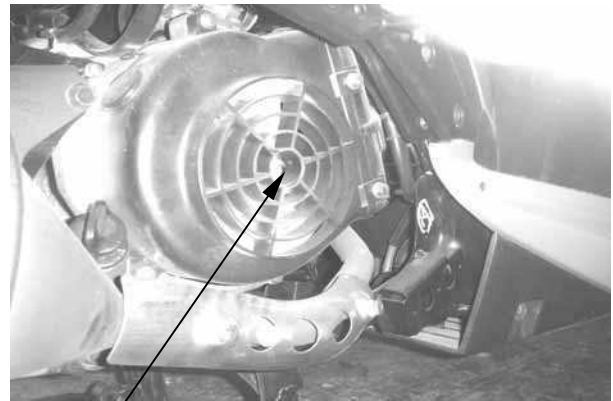


Fan Cover

15. IGNITION SYSTEM

SUPER8 125

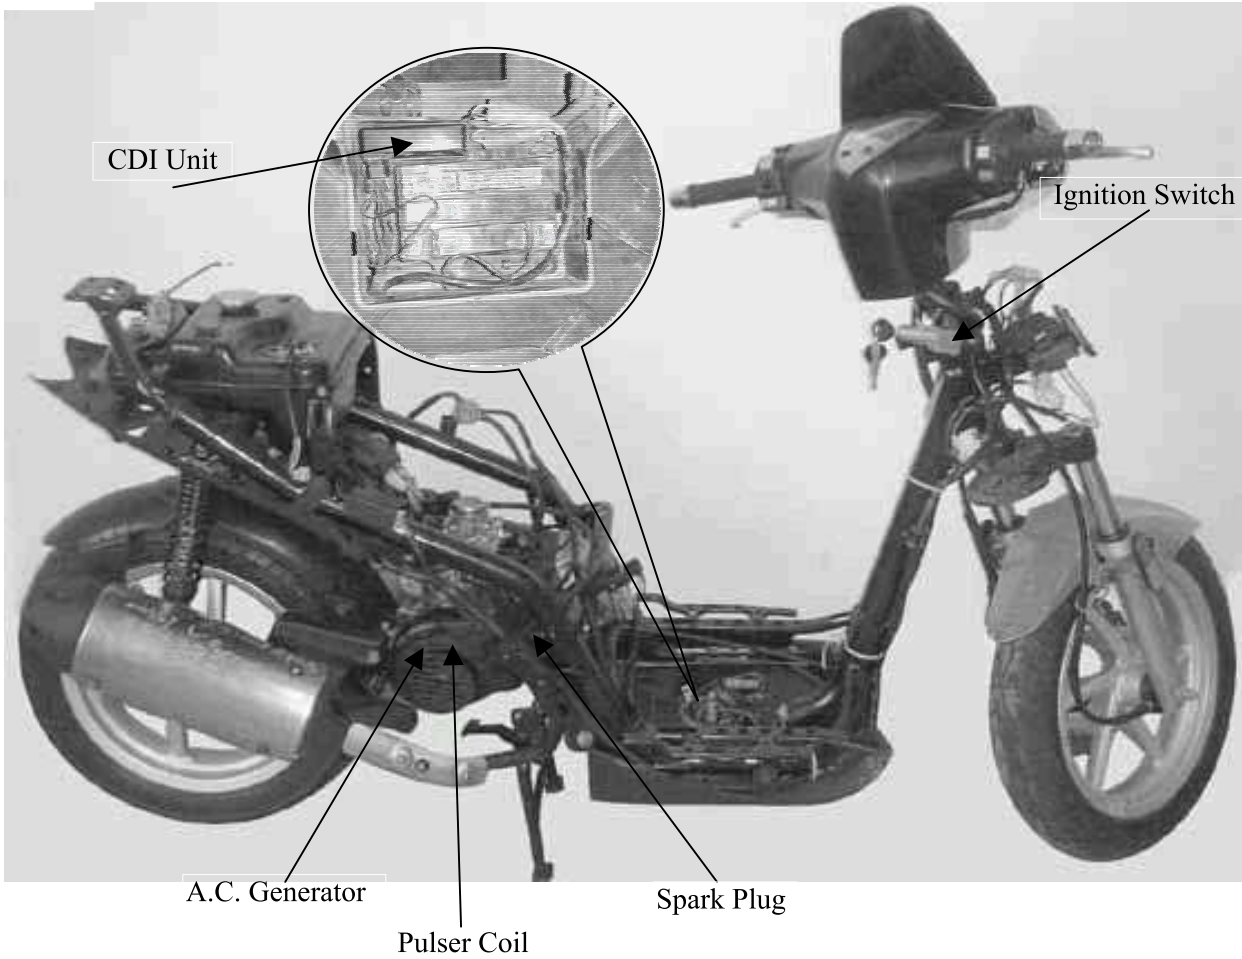

15

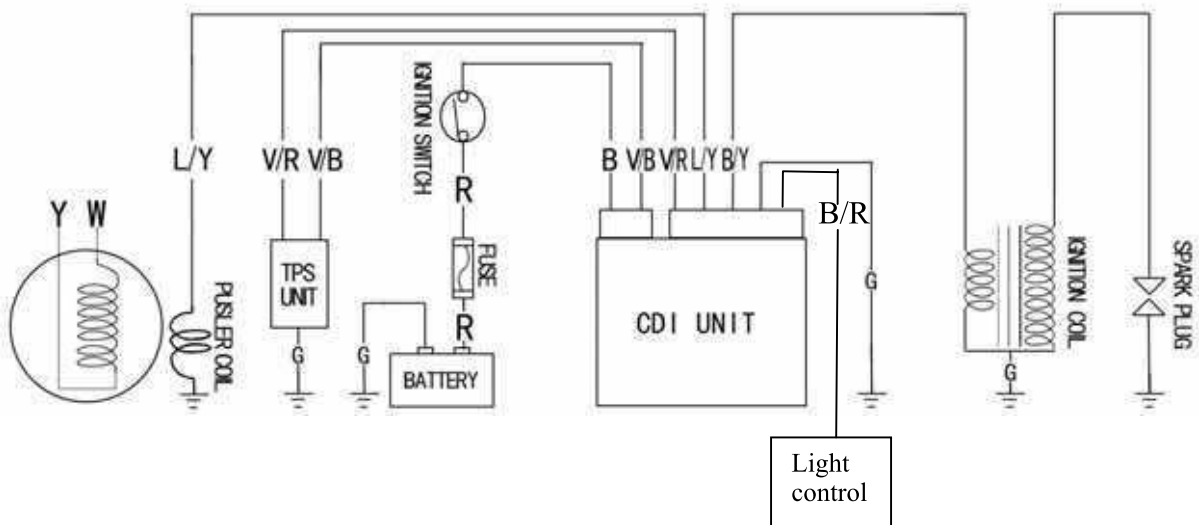

15. IGNITION SYSTEM

SUPER8 125

| | | | |
|---------------------------|------|---------------------|------|
| SERVICE INFORMATION | 15-1 | IGNITION COIL | 15-4 |
| TROUBLESHOOTING | 15-2 | PULSER COIL | 15-5 |
| CDI UNIT INSPECTION | 15-3 | | |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- Check the ignition system according to the sequence specified in the Troubleshooting. (⇒15-2)
- The ignition system adopts CDI unit and the ignition timing cannot be adjusted.
- If the timing is incorrect, inspect the CDI unit and A.C. generator and replace any faulty parts.
Inspect the CDI unit with a CDI tester
- Loose connector and poor wire connection are the main causes of faulty ignition system. Check each connector before operation.
- Use of spark plug with improper heat range is the main cause of poor engine performance.
- The inspections in this section are focused on maximum voltage. The inspection of ignition coil resistance is also described in this section.
- Inspect the ignition switch according to the continuity table specified in page 17-3.
- Inspect the spark plug referring to Section 3.
- Remove the A.C. generator and pulser coil referring to Section 14.

SPECIFICATIONS

| Item | | Standard | |
|---|----------------|---------------------------|----------|
| Spark plug | Standard type | (NGK) C7HSA | |
| | Hot type | (NGK) C6HSA | |
| | Cold type | (NGK) C8HSA | |
| Spark plug gap | | 0.6~0.7mm | |
| Ignition timing | “F” mark | 13° BTDC /1,700rpm±100RPM | |
| | Full advance | 28° BTDC /4,000rpm±100RPM | |
| Ignition coil resistance (20°C) | Primary coil | | 0.1~1.0Ω |
| | Secondary coil | with plug cap | 7~12KΩ |
| | | without plug cap | 3~5KΩ |
| Pulser coil resistance (20°C) | | 40~300Ω | |
| Ignition coil primary side max. voltage | | 12V min. | |
| Pulser coil max. voltage | | 2.1V min. | |

TESTING INSTRUMENT

Kowa Electric Tester

or commercially available electric tester with resistance over 10MΩ/CDV

15. IGNITION SYSTEM

TROUBLESHOOTING

High voltage too low

- Weak battery or low engine speed
- Loose ignition system connection
- Faulty ignition coil
- Faulty CDI unit
- Faulty pulser coil

Intermittent high voltage

- Faulty ignition switch
- Poorly connected CDI unit coupler
- Poorly connected or broken CDI ground wire
- Faulty pulser coil
- Loose high tension wire connection
- Faulty CDI unit

Normal high voltage but no spark at plug

- Faulty spark plug
- Faulty spark plug cap

No high voltage

- Faulty ignition switch
- Dead battery or faulty regulator/rectifier
- Faulty charging circuit
- Faulty ignition coil
- Faulty CDI unit

No or intermittent high voltage

- Faulty ignition coil
- Weak battery
- Faulty charging system


15. IGNITION SYSTEM

SUPER8 125


CDI UNIT INSPECTION

Remove the two battery cover screws.
 Disconnect the CDI coupler and remove the CDI unit.
 Measure the resistance between the terminals using the electric tester.

- Due to the semiconductor in circuit, it is necessary to use a specified tester for accurate testing. Use of an improper tester in an improper range may give false readings.
- Use a Sanwa Electric Tester or Kowa Electric Tester.
- In this table, "Needle swings then returns" indicates that there is a charging current applied to a condenser. The needle will then remain at " ∞ " unless the condenser is discharged.

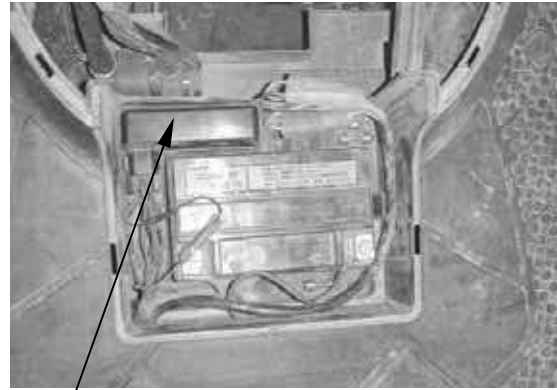

CDI Unit

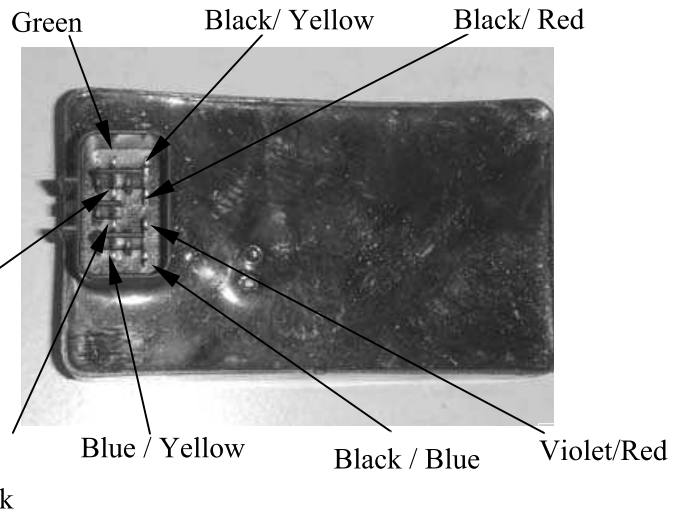

15. IGNITION SYSTEM

IGNITION COIL

REMOVAL

Remove the met-in box. (⇒2-3)
 Remove the spark plug cap.
 Disconnect the ignition coil wires and remove the ignition coil bolt and ignition coil.



Ignition Coil


INSPECTION

CONTINUITY TEST

- The CDI unit is not adjustable. If the timing is incorrect, inspect the CDI unit, pulser coil and A.C. generator and replace any faulty parts.

Measure the resistance between the ignition coil primary coil terminals.

Resistance: 0.1 ~ 1.0Ω

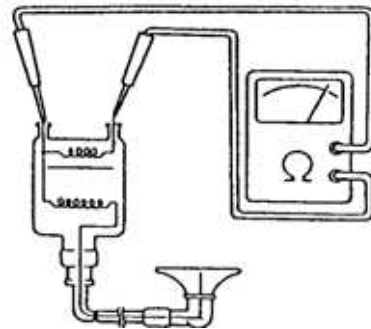


Measure the secondary coil resistances with and without the spark plug cap.

Resistances:

(with plug cap) : 7 ~ 12KΩ

(without plug cap) : 3 ~ 5KΩ

- Correctly operate the tester following the manufacturer's instructions.

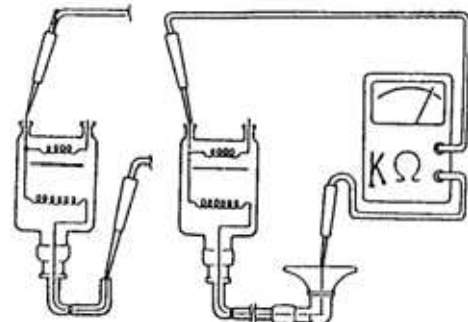


15. IGNITION SYSTEM

PULSER COIL INSPECTION

- This test is performed with the stator installed in the engine.

Remove the frame body cover. (⇒2-3)
 Disconnect the A.C. generator connector.

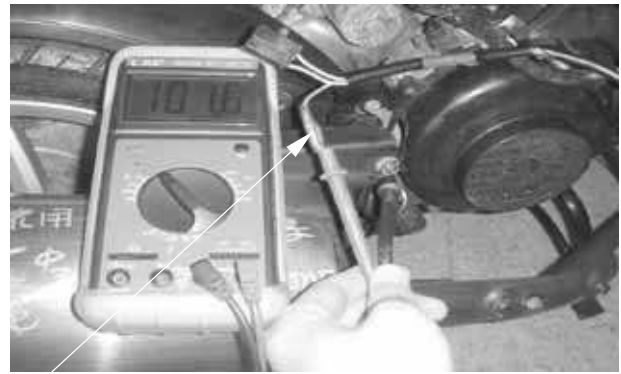

Pulser Coil Coupler

Measure the pulser coil resistance between the blue/yellow and green wire terminals.

Resistance: 80~160Ω

Refer to page 14-6 for the A.C. generator removal.

IGNITION TIMING INSPECTION

- The CDI unit is not adjustable. If the ignition timing is incorrect, inspect the CDI unit, pulser coil and A.C. generator and replace any faulty parts.

Remove the timing hole cap.

Timing Hole Cap



Warm up the engine and check the ignition timing with a timing light.
 When the engine is running at the ignition timing is correct if the “F” mark aligns with the index mark within ±2°.



Ignition Timing: BTDC28°/4000rpm



“F” Mark

16. STARTING SYSTEM

SUPER8 125

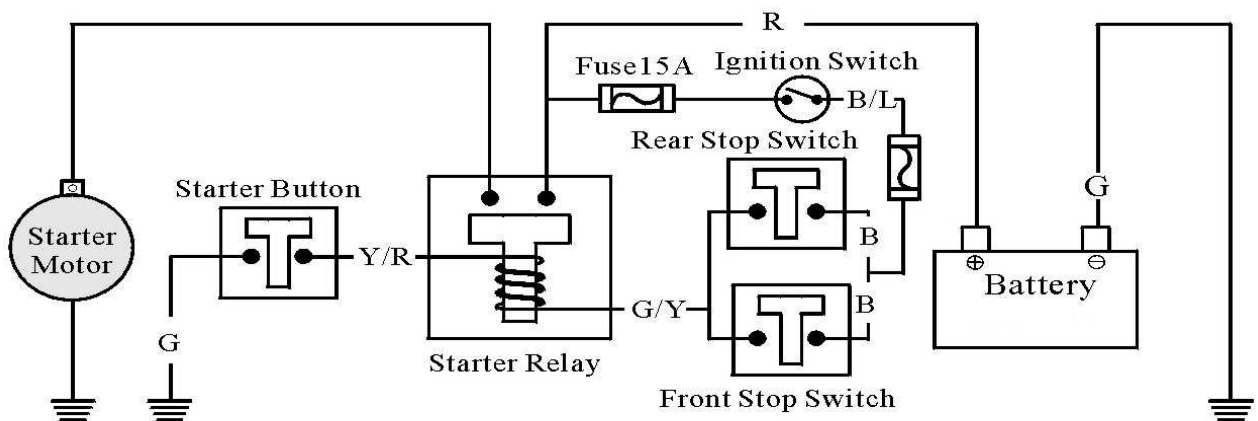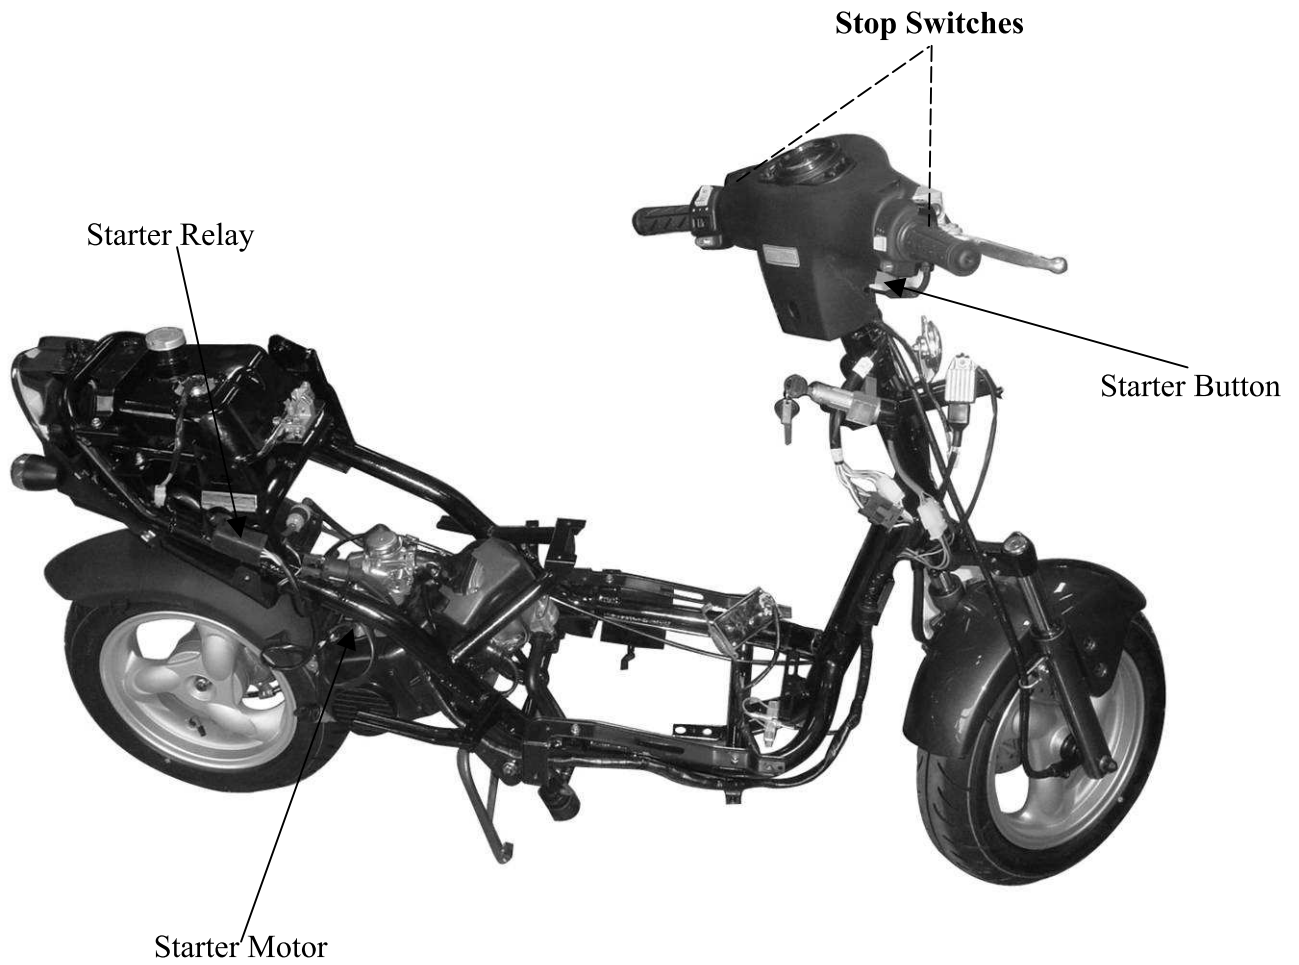

| | | | |
|--------------------------|------|---------------------|------|
| SERVICE INFORMATION..... | 16-1 | STARTER MOTOR | 16-2 |
| TROUBLESHOOTING..... | 16-1 | STARTER RELAY..... | 16-4 |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- The removal of starter motor can be accomplished with the engine installed.

SPECIFICATIONS

| Item | Standard (mm) | Service Limit (mm) |
|----------------------------|---------------|--------------------|
| Starter motor brush length | 12.5 | 8.5 |

TORQUE VALUES

| | |
|----------------------------------|---------|
| Starter clutch cover socket bolt | 1.2kg-m |
| Starter clutch lock nut | 9.5kg-m |

SPECIAL TOOLS

Flywheel Holder

TROUBLESHOOTING

Starter motor won't turn

- Fuse burned out
- Weak battery
- Faulty ignition switch
- Faulty starter clutch
- Faulty front or rear stop switch
- Faulty starter relay
- Poorly connected, broken or shorted wire
- Faulty starter motor

Lack of power

- Weak battery
- Loose wire or connection
- Foreign matter stuck in starter motor or gear

Starter motor rotates but engine does not start

- Faulty starter clutch
- Starter motor rotates reversely
- Weak battery


16. STARTING SYSTEM

STARTER MOTOR

REMOVAL

Before removing the starter motor, turn the ignition switch OFF and remove the battery ground. Then, turn on the ignition switch and push the starter button to see if the starter motor operates properly.

Remove the two starter motor mounting bolts and the motor.

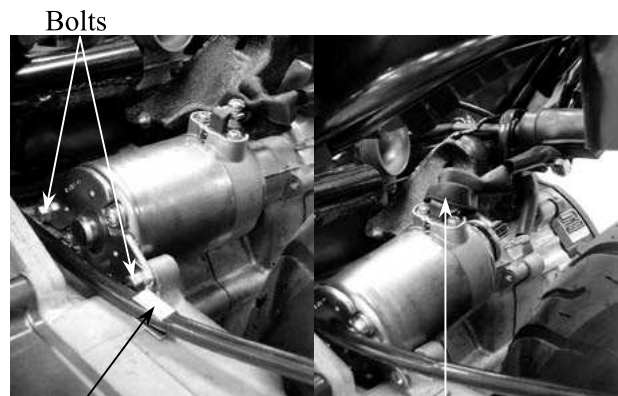


Cable Clamp

Starter Motor Cable

Remove the waterproof rubber jacket and disconnect the starter motor cable connector.

DISASSEMBLY

Remove the two starter motor case screws, front cover, motor case and other parts.

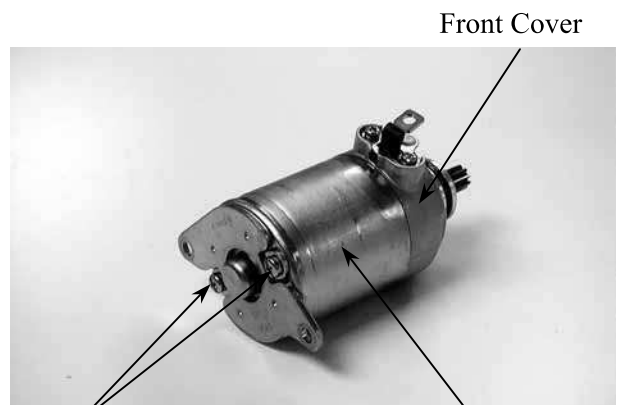

Front Cover

Case Screws

Motor Case

INSPECTION


Inspect the removed parts for wear, damage or discoloration and replace if necessary. Clean the commutator if there is metal powder between the segments.



Commutator

Check for continuity between pairs of the commutator segments and there should be continuity.

Also, make a continuity check between individual commutator segments and the armature shaft. There should be no continuity.

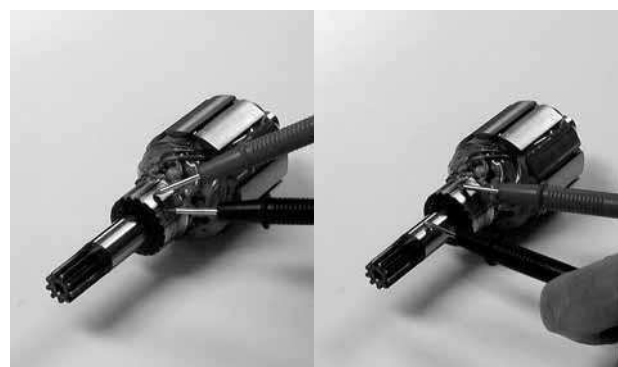

16. STARTING SYSTEM

STARTER MOTOR CASE CONTINUITY CHECK

Check to confirm that there is no continuity between the starter motor wire terminal and the motor front cover.

Also check for the continuity between the wire terminal and each brush.

Replace if necessary.



Wire Terminal

Measure the length of the brushes.

Service Limit: 8.5mm replace if below



Check for continuity between the brushes. If there is continuity, replace with new ones.



Check if the needle bearing in the front cover turns freely and has no excessive play.

Replace if necessary.

Check the dust seal for wear or damage.

Bearing



Dust Seal

16. STARTING SYSTEM

SUPER8 125

ASSEMBLY


Apply grease to the dust seal in the front cover.
 Install the brushes onto the brush holders.
 Apply a thin coat of grease to the two ends of the armature shaft.
 Insert the commutator into the front cover.

- - Be careful not to damage the brush and armature shaft mating surfaces.
 - When installing the commutator, the armature shaft should not damage the dust seal lip.

Install a new O-ring to the front cover.
 Install the starter motor case, aligning the tab on the motor case with the groove on the front cover.
 Tighten the starter motor case screws.

- - When assembling the front cover and motor case, slightly press down the armature shaft to assemble them.

Commutator

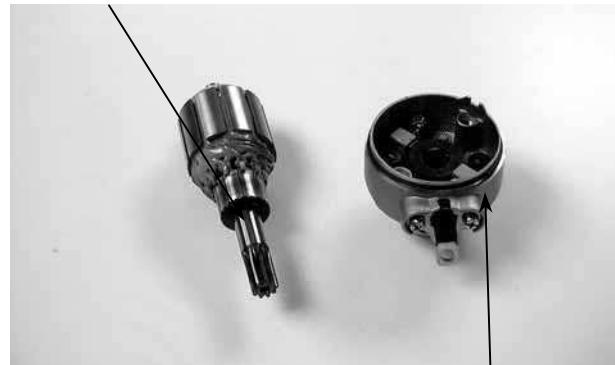

Front Cover

Tab Groove O-ring



Motor Case

Starter Relay



STARTER RELAY

INSPECTION

Remove the frame body cover.
 Turn the ignition switch ON and the starter relay is normal if you hear a click when the starter button is depressed.
 If there is no click sound:

- Inspect the starter relay voltage
- Inspect the starter relay ground circuit
- Inspect the starter relay operation

STARTER RELAY VOLTAGE INSPECTION

Place the motorcycle on its main stand.
 Measure the voltage between the starter relay connector green/yellow wire (-) and engine ground.
 Turn the ignition switch ON and the battery voltage should be normal when the brake lever is fully applied.
 If the battery has no voltage, inspect the stop switch continuity and cable.

Green/Yellow Wire



16. STARTING SYSTEM

SUPER8 125

STARTER RELAY GROUND CIRCUIT INSPECTION

Disconnect the starter relay wire connector. Check for continuity between the yellow/red wire terminal and ground.

There should be continuity when the starter button is depressed.

If there is no continuity, check the starter button for continuity and inspect the wire.



OPERATION TEST

Connect the electric tester to the starter relay larger terminals that connect to the battery positive cable and the starter motor cable. Connect a fully charged battery across the starter relay yellow/red and green/yellow wire terminals.

Check for continuity between the starter relay large terminals. The relay is normal if there is continuity.



Starter Relay

Starter Motor Cable


INSTALLATION

Connect the starter motor cable connector and properly install the waterproof rubber jacket. Check the O-ring for wear or damage and replace if necessary.

Apply grease to the O-ring and install the starter motor.

Tighten the two mounting bolts.

- The starter motor cable connector must be installed properly.

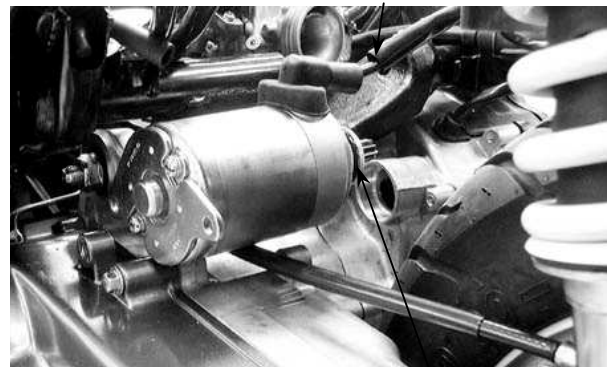


O-ring

STARTER CLUTCH

REMOVAL

Remove the A.C. generator.

Remove the right crankcase cover.

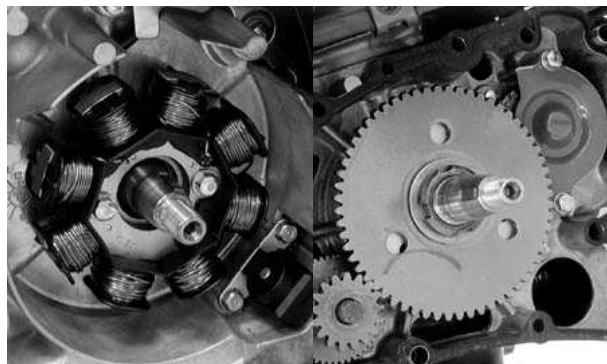

16. STARTING SYSTEM

Remove the starter clutch lock nut.

Special

Flywheel Holder

Note that the lock nut is left threaded.

Remove the starter clutch.

Remove the starter idle gear and shaft.

INSPECTION

Inspect the operation of the starter drive gear when it is assembled on the clutch.

The starter drive gear should turn clockwise freely and should not turn counterclockwise.

STARTER CLUTCH DISASSEMBLY

Inspect the starter drive gear for wear or damage and replace if necessary.

Measure the starter drive gear I.D.

Service Limit: 32.06mm replace if over

Inspect the needle bearing for wear or damage and replace if necessary.

CLUTCH BODY DISASSEMBLY

Remove the rollers, plungers and springs from the clutch body.

Inspect the clutch body for wear or damage and replace if necessary.


Inspect each roller and plunger for wear or damage and check for weak spring.

Replace if necessary.



Lock Nut


Flywheel Holder

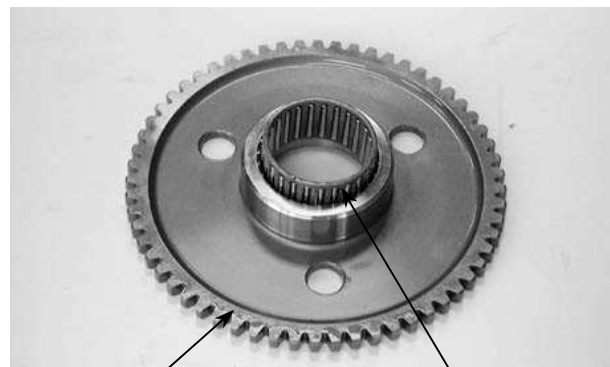

Starter Drive Gear

Needle Bearing

Clutch Body

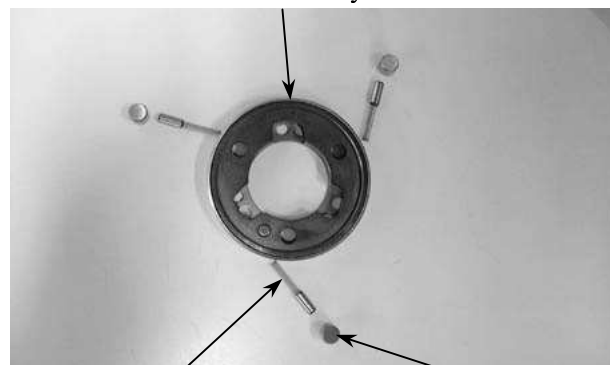

16. STARTING SYSTEM


SUPER8 125

Spring

Roller

Measure the clutch cover O.D.

Service Limit: 27.94mm replace if over

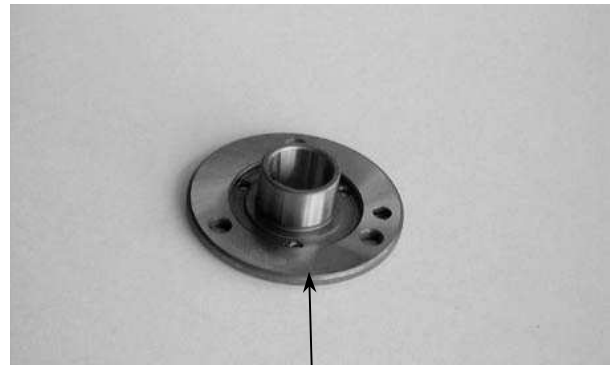

Clutch Cover


Measure the starter idle gear I.D.

Service Limit: 10.05mm replace if over

Starter Idle Gear

Measure the starter idle gear shaft O.D.

Service Limit: 9.94mm replace if below

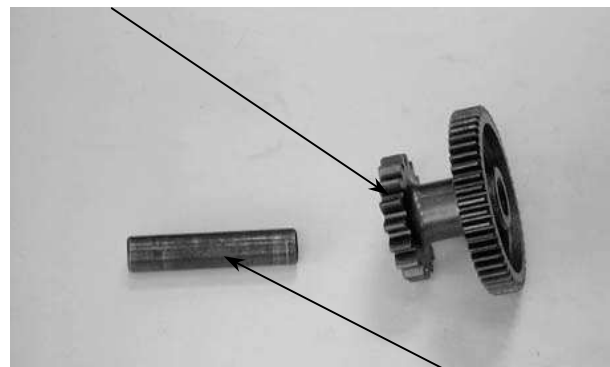

Anchor Pin

Hole

Idle Gear Shaft
Clutch Cover


ASSEMBLY

Install the springs, plungers and rollers onto the clutch body.

Install the clutch cover by aligning the clutch cover anchor pin with the hole in the clutch body. Apply locking agent to the threads of the clutch cover bolts and tighten them.

Torque: 1.2kg-m

Apply engine oil to the needle bearing and starter drive gear and then install them to the clutch body.

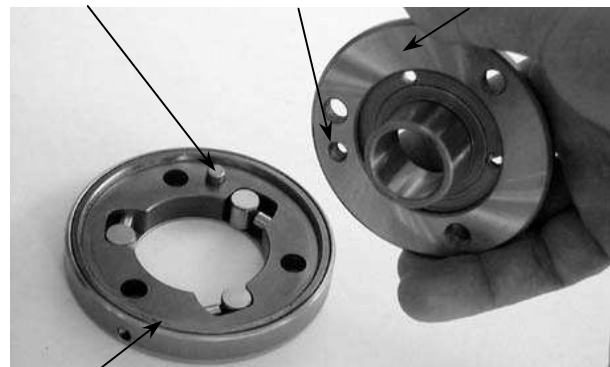

Clutch Body

INSTALLATION

Install the starter clutch onto the crankshaft. Apply engine oil to the starter idle gear and shaft and then install them.

Hold the starter drive gear with the universal holder and tighten the starter clutch lock nut.


Torque: 9.5kg-m

Special

Flywheel Holder

Note that the lock nut is left threaded.

Install the right crankcase cover.

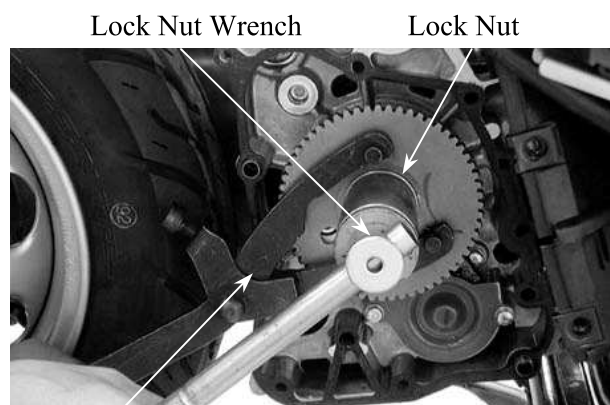

Lock Nut Wrench

Lock Nut

Flywheel Holder

16. STARTING SYSTEM

| | | | |
|---------------------------|------|--------------------------|------|
| SERVICE INFORMATION | 17-0 | IGNITION SWITCH..... | 17-3 |
| TROUBLESHOOTING | 17-0 | STOP SWITCHES/HORN | 17-4 |
| FUEL UNIT | 17-1 | INSTRUMENTS..... | 17-4 |
| HANDLEBAR SWITCHES..... | 17-2 | HEADLIGHT/LIGHTS..... | 17-5 |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- An electric tester is needed to measure or test the electric equipment.
- Be sure to use fuses and bulbs of the same specifications to avoid damage of electrical equipment.
- After installation of each switch, a continuity check must be performed. A continuity check can usually be made without removing the part from the motorcycle.

TROUBLESHOOTING

Lights do not come on when ignition switch is "ON"

- Burned bulb
- Faulty switch
- Broken wire
- Fuse burned out
- Weak battery
- Poorly connected or shorted wire
- Faulty winker

Light dims

- Faulty ignition coil
- Wire or switch resistance too high
- Faulty regulator/rectifier

Headlight does not change when dimmer switch is turn to Hi or Lo

- Faulty or burned bulb
- Faulty dimmer switch

Fuel gauge pointer does not register correctly

- Disconnected wire or connector
- Broken wire
- Faulty float
- Faulty fuel unit
- Faulty instrument

Fuel gauge pointer fluctuates or swings

- Loose wire connection
- Faulty fuel unit
- Faulty instrument


FUEL UNIT

No Smoking!

REMOVAL

Remove the met-in box. (⇒2-3)
 Remove the frame right side cover. (⇒2-4)
 Disconnect the fuel unit wire connector.
 Turn the fuel unit retainer counterclockwise to remove it.

Do not damage the fuel unit wire.

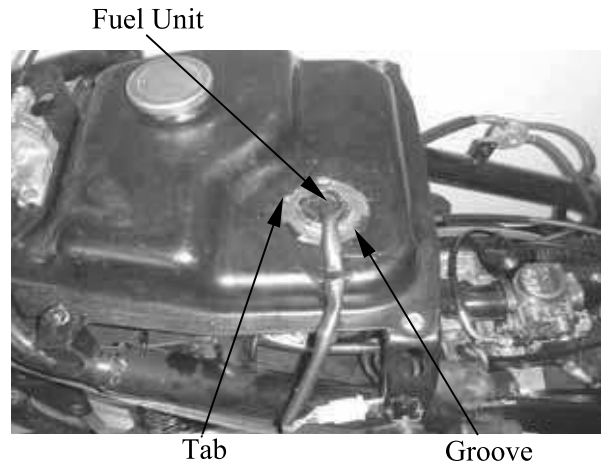


Remove the fuel unit.

Be careful not to bend or damage the fuel unit float arm.

INSTALLATION

The installation sequence is the reverse of removal.


- Align the groove on the fuel unit with the tab on the fuel tank.
- Align the arrow on the retainer with the arrow on the fuel tank.
- Turn the retainer clockwise to secure it.

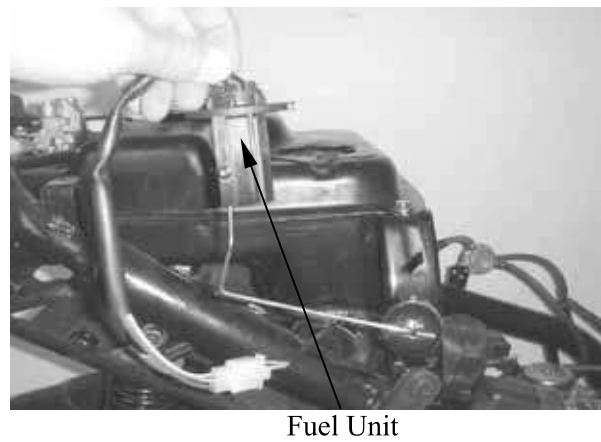

INSPECTION

Remove the fuel unit.
 Measure the resistance between the fuel unit wire terminals with the float at upper and lower positions.

| Wire Terminals | Upper | Lower |
|----------------|-------|-------|
| G~Y/W | 30Ω | 686Ω |
| G~L/W | 566Ω | 153Ω |
| Y/W~L/W | 599Ω | 599Ω |

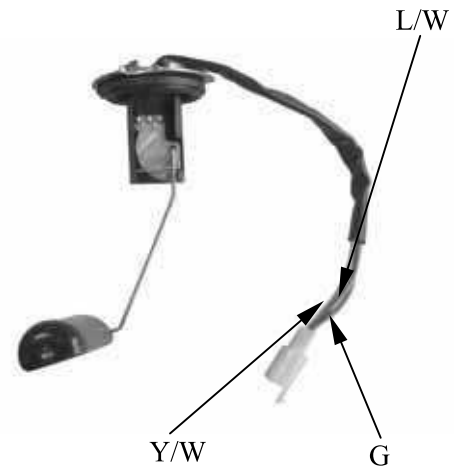

FUEL GAUGE INSPECTION

Connect the fuel unit wire connector and turn the ignition switch "ON".

Before performing the following test, operate the turn signals to determine that the battery circuit is normal.

Check the fuel gauge needle for correct indication by moving the fuel unit float up and down.

| Float Position | Needle Position |
|----------------|-----------------|
| Upper | "F" (Full) |
| Lower | "E" (Empty) |



HANDLEBAR SWITCHES

INSPECTION

Remove the handlebar front cover. (⇒2-2)
 Disconnect the handlebar switch couplers and check for continuity between wire terminals. If there is any abnormality found, check each switch.

HEADLIGHT SWITCH

| Color | Black | Brown | Blue/White | Brown/White |
|-------|-------|-------|------------|-------------|
| • | ○ | | | |
| | ○ | ○ | | ○ |
| | ○ | ○ | ○ | |

• Use the X1Ω range for test when using an electric tester.

STARTER SWITCH





| Color | Yellow/Red | Green |
|-------|------------|-------|
| FREE | | |
| PUSH | ○ | ○ |

DIMMER SWITCH

| Color | White | Black | Blue |
|-------|-------|-------|------|
| | ○ | ○ | |
| | | ○ | ○ |


TURN SIGNAL SWITCH

| Color | Gray | Light Blue | Orange |
|-------|------|------------|--------|
| R | ○ | ○ | |
| N | | | |
| L | ○ | | ○ |

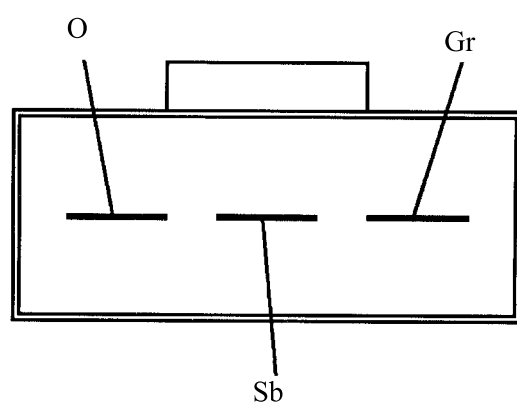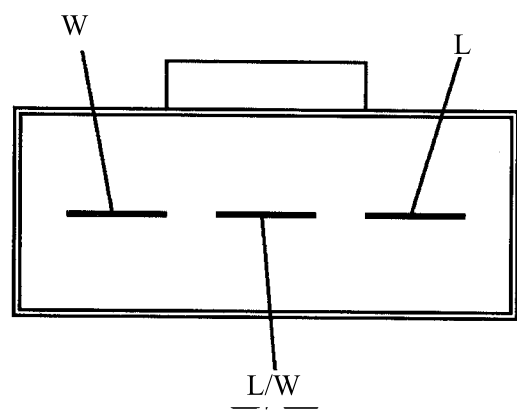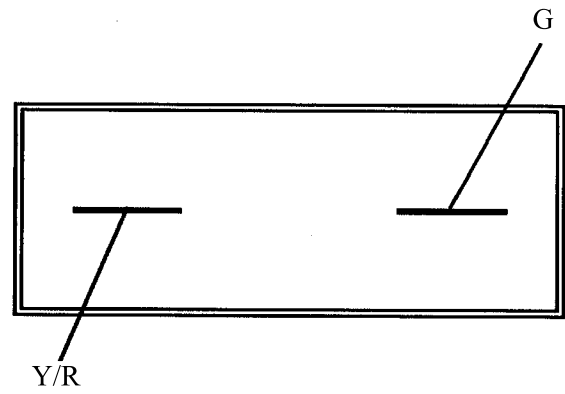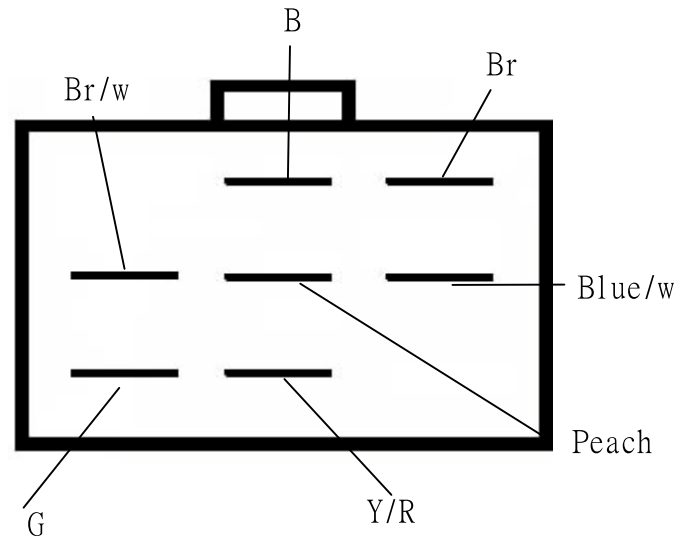

HORN SWITCH

| | | |
|-------|-------------|-------|
| Color | Light Green | Black |
| FREE | | |
| PUSH | | |

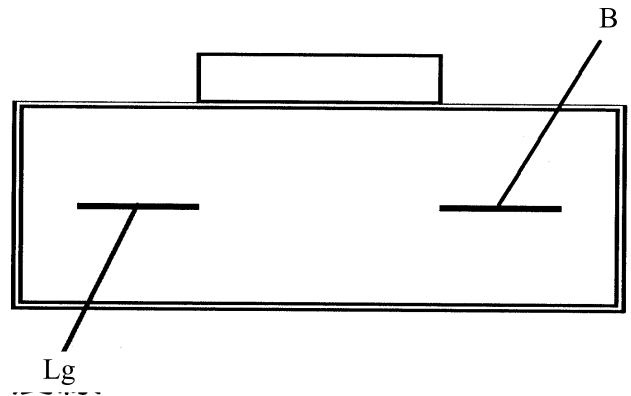

SWITCH REPLACEMENT


Remove the front covers. (⇒2-2)
 Remove the handlebar front cover. (⇒2-2)
 The installation sequence is the reverse of removal.

IGNITION SWITCH

INSPECTION

Remove the front covers. (⇒2-2)
 Disconnect the ignition switch wire coupler.
 Check for continuity between the wire terminals.

| | | | | |
|-------|-------|-----|------------|-------|
| Color | Black | Red | Black/Blue | Green |
| OFF | | | | |
| ON | | | | |
| LOCK | | | | |

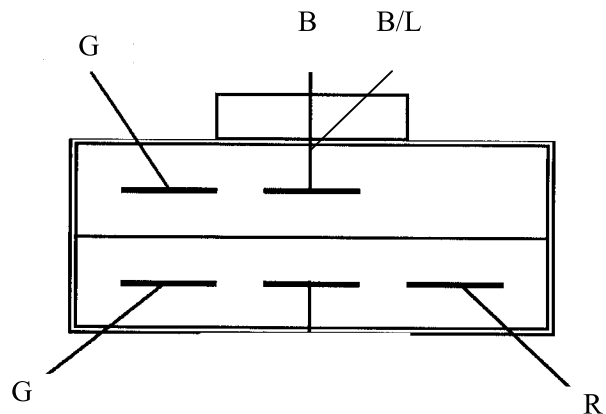

IGNITION SWITCH REPLACEMENT

Remove the front covers. (⇒2-2)
 Disconnect the ignition switch wire coupler.
 Remove the two mounting bolts to remove the ignition switch decorative ring and holder.
 Remove the two screws to remove the ignition switch from the ignition switch holder for replacement.
 The installation sequence is the reverse of removal.



Bolts

STOP SWITCH

INSPECTION

Remove the handlebar front cover. (⇒2-2)
 Disconnect the front stop switch wire coupler.
 Check for continuity between the wire terminals when the front brake lever is applied. The switch is normal if there is continuity.
 Disconnect the rear stop switch wire coupler.
 Check for continuity between the wire terminals when the rear brake lever is applied.
 The switch is normal if there is continuity.




HORN

INSPECTION

Remove the front covers. (⇒2-2)
 Disconnect the horn wire coupler.
 The horn is normal if it sounds when a 12V battery is connected across the horn wire terminals.


REPLACEMENT

Disconnect the horn wire coupler.
 Remove the two bolts attaching the horn.
 Remove the horn.
 The installation sequence is the reverse of removal.

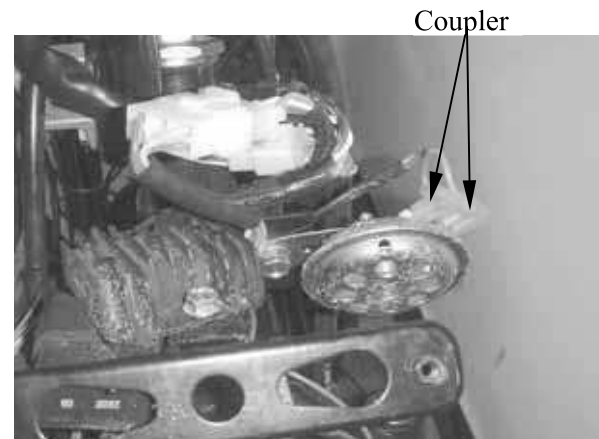

INSTRUMENTS

Remove the handlebar front cover. (⇒2-2)
 Remove the handlebar rear cover. (⇒2-2)
 Disconnect the handlebar switch couplers.
 Remove the three screws to remove the instruments.
 Install a new horn in the reverse order of removal.

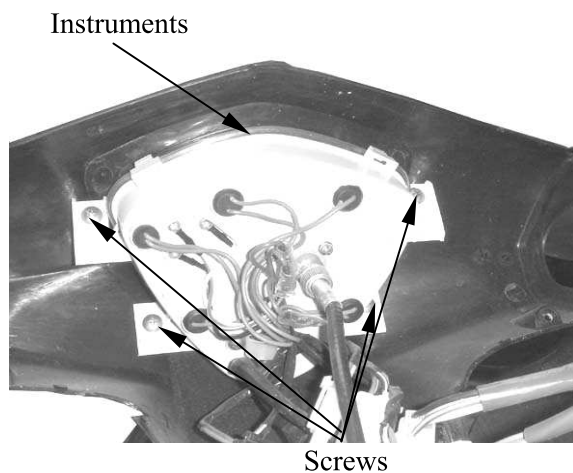


HEADLIGHT

REMOVAL


Remove the screw on the front cover.
 Remove the two screws on the back of the front cover.
 Remove the front cover.
 Remove the two bolt and twelve screws attaching the R/L mole side.
 Remove the R/L mole side
 The installation sequence is the reverse of removal.

- Align the tab on the headlight with the groove on the handlebar cover.
- After installation, adjust the headlight beam. (⇒3-9)

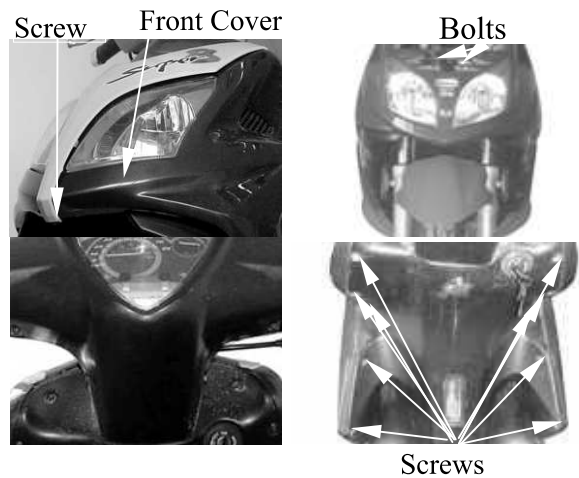


BULB REPLACEMENT

Remove the headlight bulb Coupler. (⇒2-2)
 Remove the headlight replace with new bulbs.
 The installation sequence is the reverse of removal.

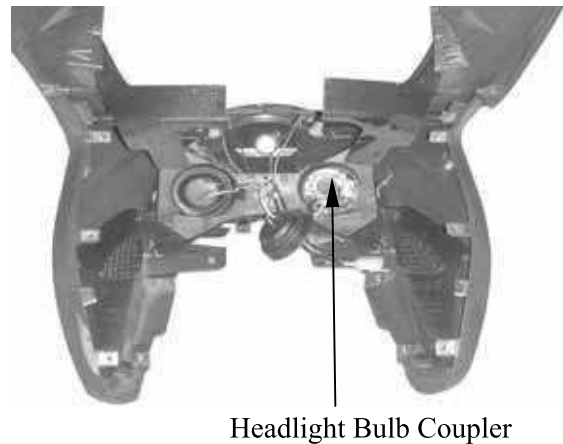

TAILLIGHT/STOPLIGHT/REAR TURN SIGNAL LIGHT/LICENSE LIGHT


Remove the two screws attaching the rear protector molding.
 Remove the rear protector molding and remove the two nuts attaching the rear light shell.
 Remove the rear turn signal light bulb and replace with a new one.
 The installation sequence is the reverse of removal.

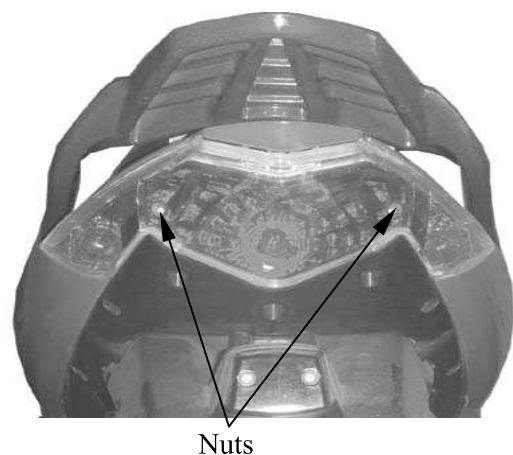

18. EVAPORATIVE/EXHAUST EMISSION CONTROL SYSTEM

| | |
|---|------|
| EXHAUST EMISSION CONTROL SYSTEM DIAGRAM | 18-0 |
| EXHAUST EMISSION CONTROL SYSTEM | 18-1 |
| SERVICE INFORMATION | 18-1 |
| TROUBLESHOOTING | 18-1 |
| MAINTENANCE SCHEDULE | 18-2 |
| SECONDARY AIR CLEANER..... | 18-3 |
| AIR INJECTION CUT-OFF VALVE (A.I.C.V.) | 18-4 |
| REED VALVE | 18-5 |
| EXHAUST MUFFLER | 18-6 |
| EXHAUST EMISSION RELATED SYSTEM INSPECTION..... | 18-7 |

EXHAUST EMISSION CONTROL SYSTEM DIAGRAM

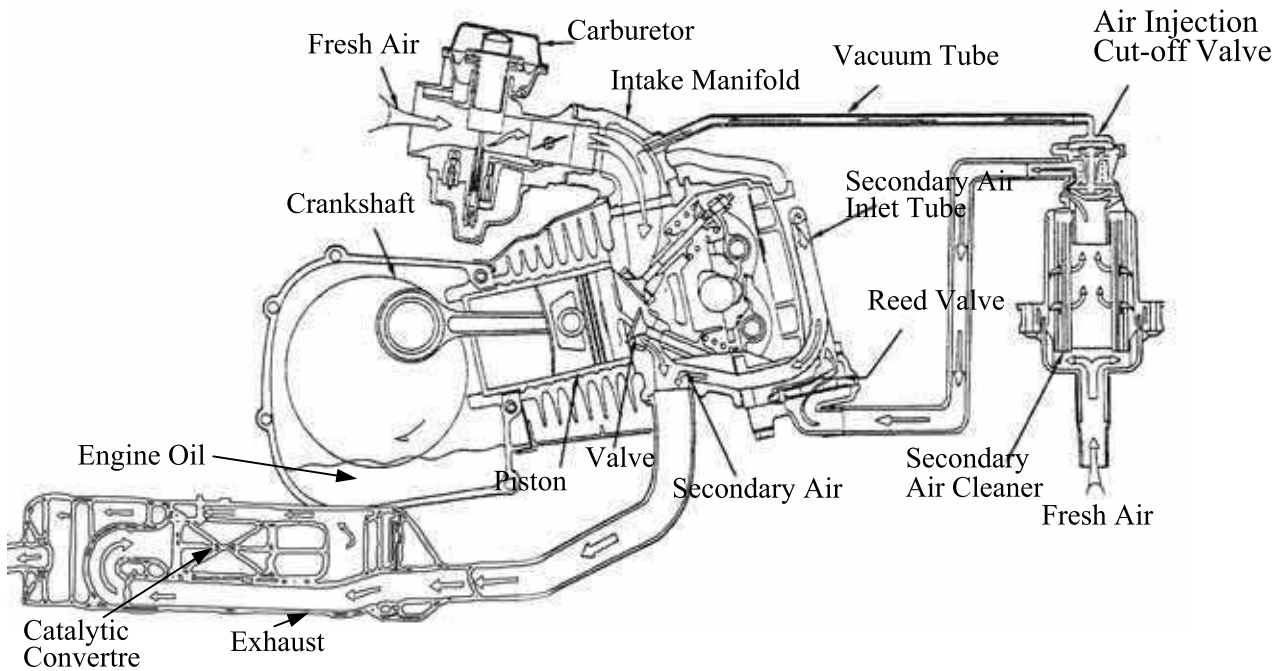

18. EVAPORATIVE/EXHAUST EMISSION CONTROL SYSTEM

EXHAUST EMISSION CONTROL SYSTEM

The exhaust emission control system adopted in this model utilizes the reed valve to draw secondary air into the exhaust system for re-combustion by means of exhaust pulsation so as to minimize the exhaust emission.

FUNCTION

| Item | Purpose | Function |
|-----------------------------|--|---|
| Secondary Air Cleaner | Filter secondary air. | It filters the fresh air drawn for re-burning to prevent dirt or dust from affecting the operation of the air injection cut-off valve. |
| Air Injection Cut-off Valve | Prevent exhaust muffler noise and backfiring at sudden deceleration. | The air injection cut-off valve usually opens to lead air into the exhaust muffler in which air is re-burned to reduce CO. When the throttle valve closes suddenly, the air injection cut-off valve is actuated by vacuum to close and cut off secondary air in order to prevent exhaust muffler backfiring due to air in the exhaust system. |
| Reed Valve | Control the secondary air inlet to reduce CO. | When the motorcycle speed is less than 50km per hour, the reed valve operates to draw secondary air into the exhaust system for re-combustion. |

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- During operation, be careful to avoid scalding caused by the exhaust muffler.
- Note the locations of tubes for proper installation.
- Replace any damaged tube with a new one.
- Make sure to tighten the connector of each tube securely

TOOLS

- Vacuum pump –

SPECIFICATIONS

Air injection cut-off valve actuating pressure – 250mm/Hg – 30 liter/min.
Reed valve stopper clearance – 6.6mm

TROUBLESHOOTING

High CO at idle speed

- Damaged or clogged reed valve
- Damaged or clogged air injection cut-off valve
- Clogged air cleaner

Exhaust muffler noise

- Faulty air injection cut-off valve
- Broken vacuum tube
- Faulty reed valve

Backfiring at sudden deceleration

- Damaged reed valve (malfunction)
- Faulty air injection cut-off valve (unable to close)
- Carburetor incorrectly adjusted
- Faulty air cut-off valve
- Leaking vacuum tube

18. EVAPORATIVE/EXHAUST EMISSION CONTROL SYSTEM

MAINTENANCE SCHEDULE:

(1) PERIODIC MAINTENANCE

| Item | Service Mileage | | 300 | 1000 | 2000 | 3000 | 4000 | 5000 | 6000 | 7000 | 8000 | 9000 | 10000 | 11000 | 12000 | 13000 | 14000 | 15000 | |
|-------------------|--|------------|-----|------|------|------|------|------|------|------|------|------|-------|-------|-------|-------|-------|-------|---|
| | Lubrication System | Engine oil | | R | | R | R | R | R | R | R | R | R | R | R | R | R | R | R |
| Oil filter screen | | | C | | C | | | C | | | | | C | | | | | | C |
| Gear oil | | | R | | | | | R | | | | | R | | | | | | R |
| Motor oil filter | | | | | | | | I | | | | | I | | | | | | I |
| Fuel System | Fuel filter | | | | I | | | I | | | | | I | | | | | | I |
| | Fuel filter screen | | C | | | | | C | | | | | C | | | | | | C |
| | Carburetor | | | | A | | | A | | | | | A | | | | | | A |
| | Fuel line | | | | | | | I | | | | | I | | | | | | I |
| Air Supply System | Air cleaner | | | | R | | R | | R | | R | | R | | R | | R | | |
| | Charcoal canister | | | | I | | | I | | | | | I | | | | | | I |
| | Secondary air cleaner | | | | I | | | R | | | | | R | | | | | | R |
| | Secondary air inlet line | | | | | | | | | | | | I | | | | | | |
| | Intake manifold screw | | | | | | | | | | | | I | | | | | | |
| | Purge control valve | | | | I | | | I | | | | | I | | | | | | I |
| | Air lines | | | | | | | I | | | | | I | | | | | | I |
| | Catalytic converter | | | | I | | | I | | | | | I | | | | | | I |
| Drive System | Cam chain | | | | I | | | I | | | | | I | | | | | | I |
| | Drive chain | | | | I | | | I | | | | | I | | | | | | I |
| | Drive belt | | | | I | | | I | | | | | I | | | | | | I |
| | Valve clearance | | | | I | | | I | | | | | I | | | | | | I |
| Ignition System | Spark Plug | 4-stroke | | | I | | | | | | | | R | | | | | | |
| | C.D.I. | | | | | | | I | | | | | I | | | | | | I |
| | Ignition system wires | | | | | | | I | | | | | I | | | | | | I |
| Others | Bolts and nuts | | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T |
| | Brake system | | A | A | A | A | A | A | A | A | A | A | A | A | A | A | A | A | A |
| Remarks | I: Inspect, A: Adjust, C: Clean, R: Replace, T: Tighten •During riding or inspection, if any part is found to be cleaned, adjusted or replaced, do it directly and take a record if the exhaust emission control system is not seriously affected. It must be reported and approved if the exhaust emission control system is seriously affected. | | | | | | | | | | | | | | | | | | |

(2) IRREGULAR MAINTENANCE:

| Item | Contents |
|------------------------|--|
| Ignition system | Inspect and repair when obvious symptoms of ignition failure, engine overheating and stalling are found frequently. |
| Carbon deposit removal | Remove carbon deposits from the exhaust system, cylinder head and piston head when the engine horsepower decreases greatly during the service mileage of 10000~15000 km. |
| Transmission system | Perform CVT system maintenance and inspection when the engine performance decreases obviously. |
| Piston | Severe use in the first 1000 km may cause worn or seized cylinder, piston and piston rings. Clean or replace with new ones if necessary. |